



Software Migration 5.1 to 6.0

Technical Note

UPDATED: 27 July 2023

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

These materials and all Progress® software products are copyrighted and all rights are reserved by Progress Software Corporation. The information in these materials is subject to change without notice, and Progress Software Corporation assumes no responsibility for any errors that may appear therein. The references in these materials to specific platforms supported are subject to change.

#1 Load Balancer in Price/Performance, 360 Central, 360 Vision, Chef, Chef (and design), Chef Habitat, Chef Infra, Code Can (and design), Compliance at Velocity, Corticon, Corticon.js, DataDirect (and design), DataDirect Cloud, DataDirect Connect, DataDirect Connect64, DataDirect XML Converters, DataDirect XQuery, DataRPM, Defrag This, Deliver More Than Expected, DevReach (and design), Driving Network Visibility, Flowmon, Inspec, Ipswitch, iMacros, K (stylized), Kemp, Kemp (and design), Kendo UI, Kinvey, LoadMaster, MessageWay, MOVEit, NativeChat, OpenEdge, Powered by Chef, Powered by Progress, Progress, Progress Software Developers Network, SequeLink, Sitefinity (and Design), Sitefinity, Sitefinity (and design), Sitefinity Insight, SpeedScript, Stylized Design (Arrow/3D Box logo), Stylized Design (C Chef logo), Stylized Design of Samurai, TeamPulse, Telerik, Telerik (and design), Test Studio, WebSpeed, WhatsConfigured, WhatsConnected, WhatsUp, and WS_FTP are registered trademarks of Progress Software Corporation or one of its affiliates or subsidiaries in the U.S. and/or other countries.

Analytics360, AppServer, BusinessEdge, Chef Automate, Chef Compliance, Chef Desktop, Chef Workstation, Corticon Rules, Data Access, DataDirect Autonomous REST Connector, DataDirect Spy, DevCraft, Fiddler, Fiddler Classic, Fiddler Everywhere, Fiddler Jam, FiddlerCap, FiddlerCore, FiddlerScript, Hybrid Data Pipeline, iMail, InstaRelinker, JustAssembly, JustDecompile, JustMock, KendoReact, OpenAccess, PASOE, Pro2, ProDataSet, Progress Results, Progress Software, ProVision, PSE Pro, Push Jobs, SafeSpaceVR, Sitefinity Cloud, Sitefinity CMS, Sitefinity Digital Experience Cloud, Sitefinity Feather, Sitefinity Thunder, SmartBrowser, SmartComponent, SmartDataBrowser, SmartDataObjects, SmartDataView, SmartDialog, SmartFolder, SmartFrame, SmartObjects, SmartPanel, SmartQuery, SmartViewer, SmartWindow, Supermarket, SupportLink, Unite UX, and WebClient are trademarks or service marks of Progress Software Corporation and/or its subsidiaries or affiliates in the U.S. and other countries. Java is a registered trademark of Oracle and/or its affiliates. Any other marks contained herein may be trademarks of their respective owners.

Please refer to the NOTICE.txt or Release Notes – Third-Party Acknowledgements file applicable to a particular Progress product/hosted service offering release for any related required third-party acknowledgements.

Table of Contents

1 Overview	4
2 Backing Up the LoadMaster	5
2.1 Backup the System	5
2.2 Backing Up Certificates	5
3 Updating the Software to Version 6.0	7
4 Restoring the Software to Version 5.1	9
4.1 Restore to Version 5.1 – No Changes	9
4.2 Restore to Version 5.1 - Changes Made	10
4.3 Restoring Certificates	11
References	12
Last Updated Date	13

1 Overview

This document describes the steps to upgrade the LoadMaster software, appliance or Virtual LoadMaster (VLM), from version 5.1 to 6.0, and to revert back to 5.1 from 6.0. Kemp recommends performing a full backup of the system before updating to version 6.0 or reverting back to version 5.1.


2 Backing Up the LoadMaster

Here we will back up the LoadMaster system configuration and SSL certificates.

2.1 Backup the System

Follow the steps below to create a backup file:

1. In the main menu of the LoadMaster Web User Interface (WUI), navigate to **System Configuration > System Administration > Backup/Restore**.

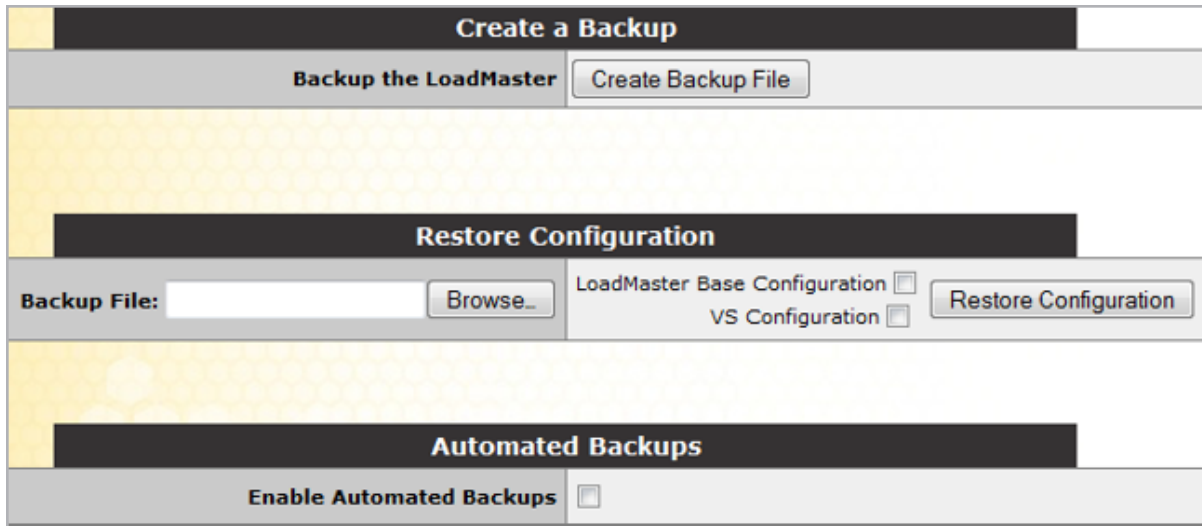

The screenshot shows the 'Create a Backup' section of the LoadMaster WUI. It features a 'Backup the LoadMaster' header with a 'Create Backup File' button. Below this is a 'Restore Configuration' section with a 'Backup File:' input field, a 'Browse...' button, and checkboxes for 'LoadMaster Base Configuration' and 'VS Configuration'. A 'Restore Configuration' button is also present. At the bottom, there is an 'Automated Backups' section with an 'Enable Automated Backups' checkbox.

2. Click the **Create Backup File** button. A download of the backup will start. The file name is set to **LMbackup** and the date and time. Select a location to save the backup file to – this is browser dependent as some browsers will automatically save the file to a location that was already pre-set. The backup file will contain all of the LoadMaster base information such as system defaults and all information pertaining to each configured Virtual Service. If you rename the file ensure to not change the file extension.

2.2 Backing Up Certificates

To back up certificates, follow the steps below:

1. In the main menu of the LoadMaster WUI, navigate to **Certificates > Backup/Restore Certs**.

Certificate Backup	
Backup all VIP and Intermediate Certificates	<div>Passphrase <input type="password"/></div> <div>Retype Passphrase <input type="password"/></div> <div>Create Backup File</div>

2. Enter a passphrase in the boxes provided.

The passphrase is very important and should be safeguarded.
The backup file cannot be opened without the passphrase as it is encoded.

3. Click the **Create Backup File** button.


4. The filename will be automatically set with **CertBackup** and the date and time. Select the location to save the backup file to – this is browser dependent as some browsers will automatically save the file to a location that was already pre-set. It is a good idea to save this file with the system backup. The file can be renamed but do not change the file extension.

If a named user has any **Allowed Networks** set, they must unset them as this feature is not supported in version 6.0.

3 Updating the Software to Version 6.0

To update the software, follow the steps below:

1. Send an email to Kemp support at nasupport@kemptechnologies.com (North America & Canada), emeasupport@kemptechnologies.com (Europe, Middle East and Africa) or apacsupport@kemptechnologies.com (Asia and Pacific).
2. Kemp Support will reply with an email containing a link to the software file, a username and password.
3. Click the link and save the file.

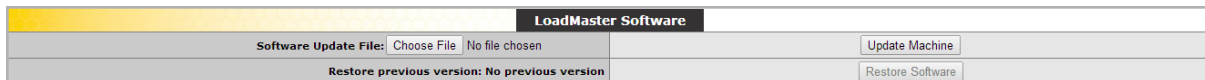

The screenshot shows a web interface for updating LoadMaster software. It features a header bar with the text "LoadMaster Software". Below this, there is a section titled "Software Update File:" with two buttons: "Choose File" and "No file chosen". To the right of this section are two buttons: "Update Machine" and "Restore Software". At the bottom of the section, there is a label "Restore previous version: No previous version".

4. In the main menu of the LoadMaster WUI, navigate to **System Configuration > System Administration > Update Software**.
5. Click the **Choose File** button in the **LoadMaster Software** section and navigate to the software file that was downloaded from the Kemp site.
6. Click the **Update Machine** button. The file will be checked and validated.
7. Click **OK** to install the software after validation is complete. Once installed, the LoadMaster will need to be rebooted.
8. Click **Reboot**.
9. Click **Continue**.
10. The LoadMaster should now be operational on a version of the 6.0 software as shown by the **Home** screen.

At this point the cache must be cleared on the browser. The JavaScript that handles many of the address validation functions changed between version 5.1 and 6.0 and the new

JavaScript needs to be reloaded. Once the cache has been cleared, reload the page – this will load the new JavaScript.

If the **Persistence Options** were previously set to **SSL Session ID**, after the upgrade the SSL options are gone. To display the SSL options, set the **Persistence Options** to **Source IP Address**. Then, set it back to **None**.

4 Restoring the Software to Version 5.1

 
When performing a software update, the LoadMaster automatically creates a restore point of the current system and, provided no changes are made, the restore point can be used. Therefore, when restoring to 5.1 there are two options;

- Restore to version 5.1 – no changes made
- Restore to version 5.1 – changes made

Refer to the relevant section below for restore instructions.

4.1 Restore to Version 5.1 – No Changes

If, since the LoadMaster has been upgraded to 6.0, there have been no further updates within the 6.0 family **and** no changes to the configuration since the initial update was performed, the user can take advantage of the restore feature.



In the the LoadMaster WUI, follow the steps below:

1. Navigate to **System Configuration > System Administration > Update Software**.
2. Click **Restore previous version** and click **OK** to confirm.
3. Reboot the LoadMaster.


After the reboot, the LoadMaster will be restored to the point that was active at the time of the update and will be fully operational as it was at that time.

At this point the cache on the browser must be cleared. The JavaScript that handles many of the address validation functions has changed and the new JavaScript needs to be reloaded. Once the cache has been cleared, reload the page – this will load the new JavaScript.

4.2 Restore to Version 5.1 - Changes Made

If changes to the 6.0 configuration have been made and you want to keep the changes, the 6.0 system will need to be backed up by following the steps in the **Backing Up the LoadMaster** section above.

1. In the main menu of the LoadMaster (WUI), navigate to **System Configuration > System Administration > Backup/Restore**

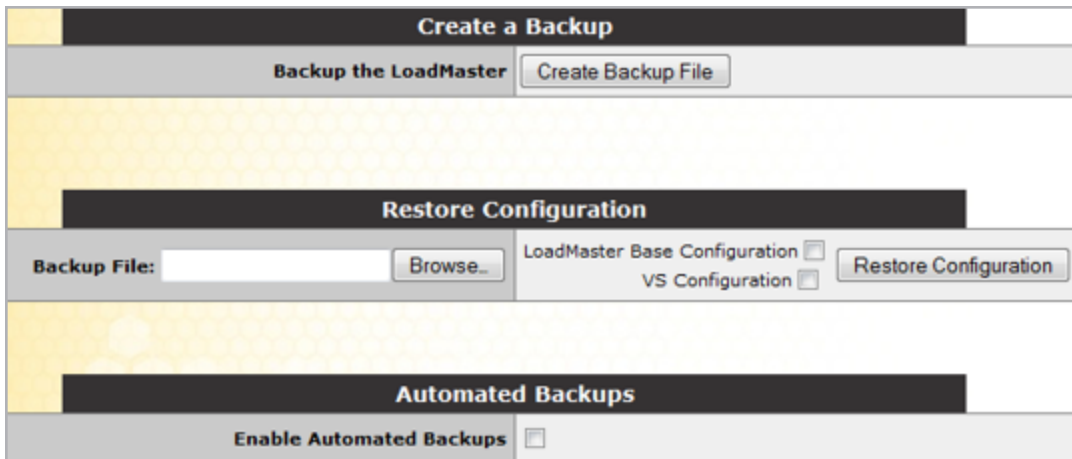

The screenshot shows the 'Backup/Restore' section of the LoadMaster WUI. It is divided into three main panels. The top panel, 'Create a Backup', has a 'Backup the LoadMaster' label and a 'Create Backup File' button. The middle panel, 'Restore Configuration', features a 'Backup File:' text input, a 'Browse...' button, two checkboxes labeled 'LoadMaster Base Configuration' and 'VS Configuration', and a 'Restore Configuration' button. The bottom panel, 'Automated Backups', has an 'Enable Automated Backups' label and an unchecked checkbox.

2. Click the **Browse** button.
3. Locate and select the backup LMbackup file.

At this point there is an option to restore the system base configuration, the Virtual Service configuration, or both. Kemp recommends restoring both (check both boxes).

4. Click **Restore Configuration**.
5. Click **Reboot**.
6. Click **Continue**.

The LoadMaster should now be accessible and have the same configuration that existed before moving up to version 6.0.

At this point the cache on the browser must be cleared. The JavaScript that handles many of the address validation functions has changed and the new JavaScript needs to be

reloaded. Once the cache has been cleared, reload the page which will load the new JavaScript.

4.3 Restoring Certificates

To restore certificates, follow the instructions below:

1. In the main menu of the LoadMaster WUI, navigate to **Certificates > Backup/Restore Certs.**
2. Click the **Browse** button. Locate and select the certificate backup file.



Restore Certificates	
Backup File	<input type="text"/> Browse...
Which Certificates	<input type="text" value="What to restore"/> ▼
Passphrase	<input type="text"/>
<input type="button" value="Restore Certificates"/>	

3. In the drop-down list select **All VS and Intermediate certificates.**
4. Enter the passphrase assigned to the certificate backup file.
5. Click **Restore Certificates.**

The LoadMaster will now have the exact same configuration as the one backed up prior to the version 6.0 upgrade.

References

Unless otherwise specified, the following documents can be found at <http://www.kemptechnologies.com/documentation>.

Web User Interface (WUI), Configuration Guide

Kemp LoadMaster, Product Overview

Last Updated Date

This document was last updated on 27 July 2023.