



# SSL Accelerated Services

## Feature Description

UPDATED: 30 July 2023

**© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.**

These materials and all Progress® software products are copyrighted and all rights are reserved by Progress Software Corporation. The information in these materials is subject to change without notice, and Progress Software Corporation assumes no responsibility for any errors that may appear therein. The references in these materials to specific platforms supported are subject to change.

#1 Load Balancer in Price/Performance, 360 Central, 360 Vision, Chef, Chef (and design), Chef Habitat, Chef Infra, Code Can (and design), Compliance at Velocity, Corticon, Corticon.js, DataDirect (and design), DataDirect Cloud, DataDirect Connect, DataDirect Connect64, DataDirect XML Converters, DataDirect XQuery, DataRPM, Defrag This, Deliver More Than Expected, DevReach (and design), Driving Network Visibility, Flowmon, Inspec, Ipswitch, iMacros, K (stylized), Kemp, Kemp (and design), Kendo UI, Kinvey, LoadMaster, MessageWay, MOVEit, NativeChat, OpenEdge, Powered by Chef, Powered by Progress, Progress, Progress Software Developers Network, SequeLink, Sitefinity (and Design), Sitefinity, Sitefinity (and design), Sitefinity Insight, SpeedScript, Stylized Design (Arrow/3D Box logo), Stylized Design (C Chef logo), Stylized Design of Samurai, TeamPulse, Telerik, Telerik (and design), Test Studio, WebSpeed, WhatsConfigured, WhatsConnected, WhatsUp, and WS\_FTP are registered trademarks of Progress Software Corporation or one of its affiliates or subsidiaries in the U.S. and/or other countries.

Analytics360, AppServer, BusinessEdge, Chef Automate, Chef Compliance, Chef Desktop, Chef Workstation, Corticon Rules, Data Access, DataDirect Autonomous REST Connector, DataDirect Spy, DevCraft, Fiddler, Fiddler Classic, Fiddler Everywhere, Fiddler Jam, FiddlerCap, FiddlerCore, FiddlerScript, Hybrid Data Pipeline, iMail, InstaRelinker, JustAssembly, JustDecompile, JustMock, KendoReact, OpenAccess, PASOE, Pro2, ProDataSet, Progress Results, Progress Software, ProVision, PSE Pro, Push Jobs, SafeSpaceVR, Sitefinity Cloud, Sitefinity CMS, Sitefinity Digital Experience Cloud, Sitefinity Feather, Sitefinity Thunder, SmartBrowser, SmartComponent, SmartDataBrowser, SmartDataObjects, SmartDataView, SmartDialog, SmartFolder, SmartFrame, SmartObjects, SmartPanel, SmartQuery, SmartViewer, SmartWindow, Supermarket, SupportLink, Unite UX, and WebClient are trademarks or service marks of Progress Software Corporation and/or its subsidiaries or affiliates in the U.S. and other countries. Java is a registered trademark of Oracle and/or its affiliates. Any other marks contained herein may be trademarks of their respective owners.

Please refer to the NOTICE.txt or Release Notes – Third-Party Acknowledgements file applicable to a particular Progress product/hosted service offering release for any related required third-party acknowledgements.

# Table of Contents

---

<b>1 Introduction .....</b>	<b>5</b>
1.1 Document Purpose .....	5
1.2 Intended Audience .....	5
<b>2 Create an SSL Accelerated Virtual Service .....</b>	<b>6</b>
2.1 Adding an SSL Virtual Service .....	6
2.2 Adding an SSL Certificate .....	10
2.3 Checking Certificate Installations .....	14
2.4 Intermediate Certificates .....	14
2.5 Importing Intermediate Certificates .....	15
2.5.1 Invalid Certificate Formats .....	16
2.6 IIS Certificates .....	16
2.7 Re-encrypt SSL .....	16
2.8 Assigning a Client Certificate for Re-encryption .....	17
2.9 Certificate Signing Request (CSR) .....	19
2.10 Backup/Restore Certificates .....	19
2.11 SSL Ciphers .....	19
2.11.1 Cipher Set Management .....	23
2.11.2 Certificate Considerations for Various Cipher Suites .....	24
2.11.2.1 DH-RSA- and DHE-RSA- Cipher Suites .....	24
2.11.2.2 DH-DSS- and DHE-DSS- Cipher Suites .....	24
2.11.2.3 ECDH-ECDSA- and ECDHE-ECDSA- Cipher Suites .....	25

---

2.12 WUI Root Certificate Installation .....	25
2.13 OCSP Configuration .....	26
2.13.1 OCSP Server Settings .....	27
2.14 Setting the Diffie-Hellman Key Exchange Size .....	29
<b>3 WUI Options .....</b>	<b>31</b>
3.1 SSL Properties .....	31
3.2 Certificates & Security .....	38
3.2.1 SSL Certificates .....	39
3.2.2 Intermediate Certificates .....	40
3.2.3 Let's Encrypt Certificates .....	41
3.2.4 Generate CSR (Certificate Signing Request) .....	44
3.2.5 Backup/Restore Certs .....	48
3.2.6 Cipher Sets .....	49
3.2.7 Remote Access .....	51
3.2.8 OCSP Configuration .....	54
<b>References .....</b>	<b>56</b>
<b>Last Updated Date .....</b>	<b>57</b>

# 1 Introduction

Kemp leads the industry in driving the price/performance value proposition for application delivery and load balancing to levels that our customers can afford. Our products' versatile and powerful architecture provide the highest value, while enabling our customers to optimize their businesses that rely on Internet-based infrastructure to conduct business with their customers, employees and partners.

Kemp products optimize web and application infrastructure as defined by high-availability, high-performance, flexible scalability, security and ease of management. They maximize the total cost-of-ownership for web infrastructure, while enabling flexible and comprehensive deployment options.

## 1.1 Document Purpose

This document describes various aspects of SSL Accelerated Services using the Kemp LoadMaster. It describes in detail how to configure SSL Accelerated Services using the LoadMaster Web User Interface (WUI).

## 1.2 Intended Audience

This document is intended to help anyone who wishes to learn about or implement the SSL Accelerated Services within the Kemp LoadMaster.

# 2 Create an SSL Accelerated Virtual Service


This section will explain how to create a Virtual Service with SSL Acceleration activated.

SSL Acceleration transfers the processing of SSL from the Real Servers to the LoadMaster, meaning that only one certificate is required per Virtual Service.

When SSL Acceleration is enabled, communication from the LoadMaster to the Real Servers is unencrypted.

## 2.1 Adding an SSL Virtual Service

The process for adding an SSL-enabled Virtual Service is the same for a regular Virtual Service. First, add the Virtual Service. In the main menu of the LoadMaster WUI, select **Virtual Services** and **Add New**. A screen will appear asking to enter the **Virtual Address**, **Port**, **Service Name** and **Protocol**.

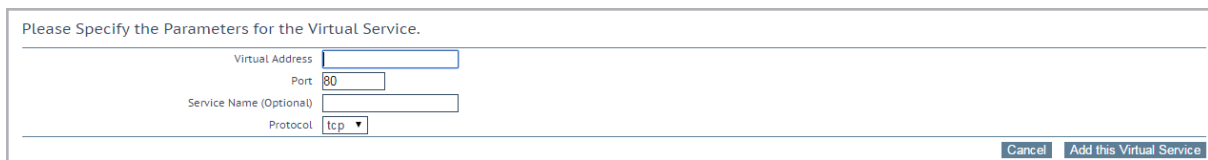

The port defaults to port **80**, which is the standard HTTP port. If an SSL-enabled Virtual Service is being created, change the port to **443**, which is the default HTTPS port. Keep the protocol as **tcp**, and click **Add this Virtual Service**.

The Virtual Service properties screen will appear. Among the various sections in this screen is **SSL Properties**.

## 2 Create an SSL Accelerated Virtual Service

SSL Properties

SSL Acceleration

Enabled: ☒ Reencrypt: ☐

Supported Protocols

☐ SSLv3
 ☐ TLS1.0
 ☒ TLS1.1
 ☒ TLS1.2
 ☒ TLS1.3

Require SNI hostname

☐

Self Signed Certificate in use.

Available Certificates

None Available

Assigned Certificates

None Assigned

Set Certificates

Manage Certificates

Cipher Set

Default

Modify Cipher Set

Assigned Ciphers

ECDHE-ECDSA-AES256-GCM-SHA384  
 ECDHE-RSA-AES256-GCM-SHA384  
 DHE-DSS-AES256-GCM-SHA384  
 DHE-RSA-AES256-GCM-SHA384  
 ECDHE-ECDSA-CHACHA20-POLY1305  
 ECDHE-RSA-CHACHA20-POLY1305

Client Certificates

No Client Certificates required

Strict Transport Security Header

Don't add the Strict Transport Security Header

To enable SSL for this Virtual Service, select the **Enabled** check box.


A warning will appear saying that a temporary certificate will be used for the service. Click **OK**.

As soon as SSL is enabled, the LoadMaster will install a self-signed certificate for the Virtual Service.

The check boxes in the **Supported Protocols** section allow you to specify which protocols should be supported by the Virtual Service. By default, TLS1.1, TLS1.2, and TLS1.3 protocols are enabled and SSLv3 and TLS1.0 are disabled.

Starting with version 7.2.37, when re-encryption is enabled, the TLS version that can be negotiated between the LoadMaster and the Real Servers behind it are no longer constrained by the TLS version settings configured on the client side. All TLS versions and ciphers that are supported on the LoadMaster can be negotiated without restriction by Real Servers. In this way, the LoadMaster can, for example, provide strict security for client-side application access and still support server-side connections to legacy servers that only support specific, less secure, TLS versions, and ciphers. This is illustrated in the example below.


## 2 Create an SSL Accelerated Virtual Service

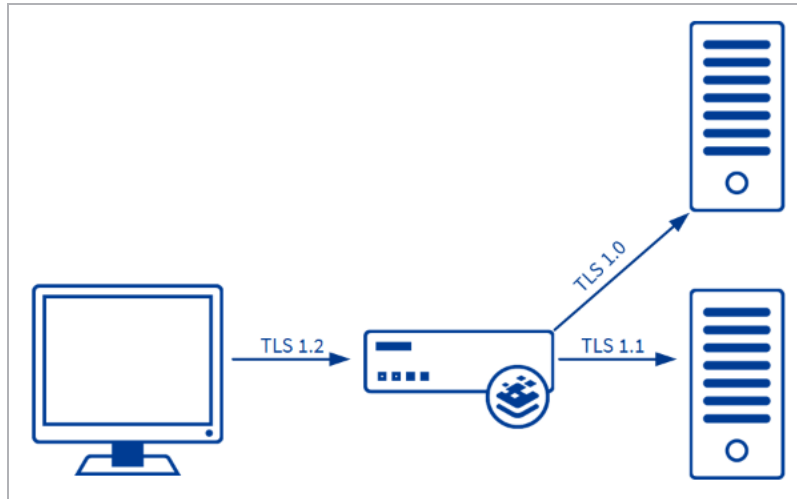

Server connections are only restricted by the configuration of the Real Servers, regardless of the TLS version selected on the client side. Each Real Server can be configured independently of the others. The LoadMaster negotiates connections according to the requirements of each Real Server.

Selecting the **Require Server Name Identifier (SNI) hostname** check box means that the hostname will always be required to be sent in the TLS client hello message.

When **Require SNI hostname** is disabled, the first certificate in the list of **Assigned Certificates** as a host header match is not found.

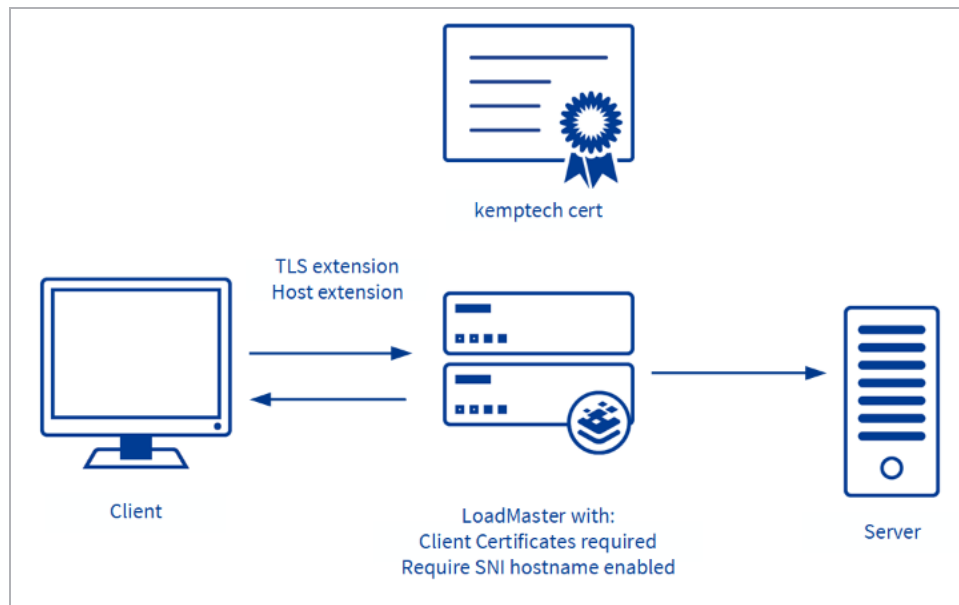



## 2 Create an SSL Accelerated Virtual Service

When **Require SNI hostname** is enabled, a certificate with a matching host name must be found, otherwise the connection is dropped. This also supports wildcard certificates.

Multiple certificates are supported. Wildcard certificates work regardless of what position they are in. SNI can find certificates by Subject Alternative Name (SAN) when the certificate is not in the first position. SNI will choose the first matching certificate in a list if multiple certificates contain the same name in either the Common Name or SAN name.

---

When using a Subject Alternative Name (SAN) certificate, alternate source names are not matched against the host header.

---

---

Wildcard certificates are supported but please note that the root domain name will not be matched as per RFC 2459. Only anything to the left of the dot will be matched. Additional certificates must be added to match the root domain names. For example, [www.kemptechnologies.com](http://www.kemptechnologies.com) will be matched until a wildcard of \*.kemptechnologies.com. Kemptechnologies.com will not be matched.

---

After you have added certificates to the LoadMaster (see the **Adding an SSL Certificate** section) you can assign one or more certificates to the Virtual Service by selecting them in the **Available Certificates** list, clicking the right arrow and clicking the **Set Certificates** button. Both internal and external certificates can be assigned to the same Virtual Service.

There is a limit of 8171 characters when assigning certificates to a Virtual Service using the WUI.

A description of each of the options in the **Client Certificates** drop-down is provided below:

- **No Client Certificates required:** enables the LoadMaster to accept HTTPS requests from any client. This is the recommended option.

By default the LoadMaster will accept HTTPS requests from any client. Selecting any of the other values below will require all clients to present a valid client certificate. In addition, the LoadMaster can also pass information about the certificate to the application.

---

This option should not be changed from the default of **No Client Certificates required**. Only change from the default

---

option if you are sure that all clients that access this service have valid client certificates.

- **Client Certificates required:** requires that all clients forwarding a HTTPS request must present a valid client certificate.
- **Client Certificates and add Headers:** requires that all clients forwarding a HTTPS request must present a valid client certificate. The LoadMaster also passes information about the certificate to the application by adding headers.
- The below options send the certificate in its original raw form. The different options let you specify the format that you want to send the certificate in:
  - Client Certificates and pass DER through as SSL-CLIENT-CERT
  - Client Certificates and pass DER through as X-CLIENT-CERT
  - Client Certificates and pass PEM through as SSL-CLIENT-CERT
  - Client Certificates and pass PEM through as X-CLIENT-CERT

Real Servers can be added to this SSL Virtual Service by clicking **Add New** in the **Real Servers** section.

Please Specify the Parameters for the Real Server

Real Server Address

Port

Forwarding method

Weight

Connection Limit

80

nat

1000

< Back
Add This Real Server

When adding Real Servers, ensure to add them on port **80** (or whatever port that the non-SSL service is running on), and not port 443.

## 2.2 Adding an SSL Certificate

If you have a Certificate Authority (CA)-signed certificate to use with an SSL-enabled Virtual Service, or have a custom self-signed certificate, this can be added to the Virtual Service through the WUI.

2 Create an SSL Accelerated Virtual Service

SSL Properties

SSL Acceleration

Enabled: ☒ Reencrypt: ☐

Supported Protocols ☐ SSLv3 ☒ TLS1.0 ☒ TLS1.1 ☒ TLS1.2

Require SNI hostname ☐

Self Signed Certificate In use.

Certificates

Available Certificates

None Available

Manage Certificates

Assigned Certificates

None Assigned

Set Certificates

Ciphers

Cipher Set

Default

Modify Cipher Set

Assigned Ciphers

ECDHE-RSA-AES256-GCM-SHA384

ECDHE-ECDSA-AES256-GCM-SHA384

ECDHE-RSA-AES256-SHA384

ECDHE-ECDSA-AES256-SHA384

ECDHE-RSA-AES256-SHA

ECDHE-ECDSA-AES256-SHA

Client Certificates

No Client Certificates required

There is a button called **Manage Certificates** that you can click to add an (RSA or EC) SSL certificate.

Layer	Certificate Installed
L7	<div>Add New</div>
L7	<div>Add New</div>

There is also an **Add New** button in the **View/Modify Services** screen in the **Certificates Installed** column.

Import Certificate

Add Intermediate

Assignment	Operation
------------	-----------

Either route opens the same screen; the screen to input the certificate information.

At this point there are two options; **Add Intermediate** and **Import Certificate**.

Add Intermediate

### Add a new Intermediate Certificate

Intermediate Certificate	Choose File	No file chosen
Certificate Name		Add Certificate

Clicking this button will allow you to add an intermediate certificate as a temporary measure. Browse to where the file is stored, enter the desired name in the **Desired File Name** field and click the **Add Certificate** button.

### Import Certificate

Please specify the name of the file that contains the certificate. The file can also hold the private key. If the file does not contain the private key, then the file containing the private key must also be specified. The certificate can be in either .PEM or .PFX (IIS) format.

Certificate File	Choose File	No file chosen
Key File (optional)	Choose File	No file chosen
Pass Phrase		
Certificate Identifier		

The certificate and key file can be added from this screen. The Passphrase (password) that the certificate was created with will need to be entered. The certificate can be given a name in the **Certificate Identifier** text box.

To import a certificate, follow the steps below:

1. Click the **Choose File** button next **Certificate File** and select the required certificate file.

The certificate file cannot have the following in the filename:

**ident, cfile, kfile, ffile, replace, password.**

If it does, an **Invalid Certificate Identifier** error message appears.

2. Click the **Choose File** button next to **Key File** and select the relevant key file, if required.
3. Enter the relevant pass phrase in the **Pass Phrase** text box (if required).
4. Enter a recognisable name in the **Certificate Identifier** text box.
5. Click **Save**.

## 2 Create an SSL Accelerated Virtual Service

Transactions Per Second (TPS) Performance will vary based on key length. Larger keys will reduce performance.

Certificate Configuration			
Identifier	Common Virtual Name(s)	Assignment	
ExampleCertificate	james [Expires: Jul 27 15:51:48 2016 GMT]	Available VSs 10.154.11.61:80	Assigned VSs 10.154.11.62:80

**Save Changes**

6. The certificate can then be assigned to a Virtual Service(s) by selecting the relevant IP address(s) in the **Available VSs** list, clicking the right arrow and clicking **Save Changes**.

SSL Properties

SSL Acceleration

Enabled: ☒ Reencrypt: ☐

Supported Protocols

☐ SSLv3 ☒ TLS1.0 ☒ TLS1.1 ☒ TLS1.2

Require SNI hostname

☐

Certificates

Self Signed Certificate in use.

Available Certificates

ExampleCertificate [Example]

Assigned Certificates

None Assigned

Manage Certificates

Set Certificates

Ciphers

Cipher Set

Default

Modify Cipher Set

Assigned Ciphers

ECDHE-RSA-AES256-GCM-SHA384  
ECDHE-ECDSA-AES256-GCM-SHA384  
ECDHE-RSA-AES256-SHA384  
ECDHE-ECDSA-AES256-SHA384  
ECDHE-RSA-AES256-SHA  
ECDHE-ECDSA-AES256-SHA

Client Certificates

No Client Certificates required

Certificates can also be assigned to a Virtual Service within the Modify Virtual Service screen.

If you add a certificate to the LoadMaster in version 7.2.51 or later (or in 7.2.48.3 LTS or a later LTS version) and then downgrade to 7.2.50 or an earlier version (or 7.2.48.2 LTS or an earlier version) - the certificate will not work. To work around this, create a backup of all SSL certificates before downgrading and then restore the certificates after downgrading (**Certificates & Security > Backup/Restore Certs**). If you forget to take the backup before downgrading: upgrade the firmware again, take the certificate backup, downgrade, and then restore the certificate backup.

## 2.3 Checking Certificate Installations

Some browsers have functionality that allows a check of the nature of the certificate installed on the website being connecting to. This can be useful when troubleshooting a certificate problem.

When browsing an SSL site, HTTPS should be displayed in the address and there may be an icon signifying a secure link (a padlock icon).



The icon can be clicked to see information about the certificate that is used with that SSL site.

## 2.4 Intermediate Certificates

Some certificates issued by Certificate Authorities require a third certificate, often referred to as an intermediate certificate. This additional certificate provides a chain path from the CA to the certificate issued to your site.

## 2 Create an SSL Accelerated Virtual Service

While some CAs use intermediate certificates, others do not. If you have questions on whether or not you should have received an intermediate certificate from your CA vendor, contact your CA vendor.

If a CA certificate has been installed, and an SSL error appears when browsing the Virtual Service, it is likely that an intermediate certificate needs to be installed.

Uploading several consecutive intermediate certificates within a single piece of text, as practiced by some certificate vendors such as GoDaddy, is allowed. The uploaded file is split into individual certificates.

### 2.5 Importing Intermediate Certificates

Installing an intermediate certificate is simple to do through the WUI. First, obtain the intermediate certificate from the CA. This can usually be found on their web site, and is usually in a text window to make it easier to cut and paste.

---

Your CA vendor may have provided the required intermediate certificates in the same bundle as the certificate itself, and so these would be installed together. The method documented in this section should be used when you are installing one or more intermediate certificates alone.

---


The intermediate certificate formats that are officially supported by the LoadMaster are: .PEM, .CER, and .CRT.

A CER file can only be encoded and exported in Base-64 format for it to be uploaded to the LoadMaster. A CER file exported in a DER binary format is not supported on the LoadMaster and the LoadMaster is unable to upload this format.

This section provides steps on how to apply and upload intermediate certificates and how to resolve any invalid certificate formats.

To import an intermediate certificate to the LoadMaster complete the following steps:

1. Navigate to **Certificates & Security > Intermediate Certs** in the main menu.

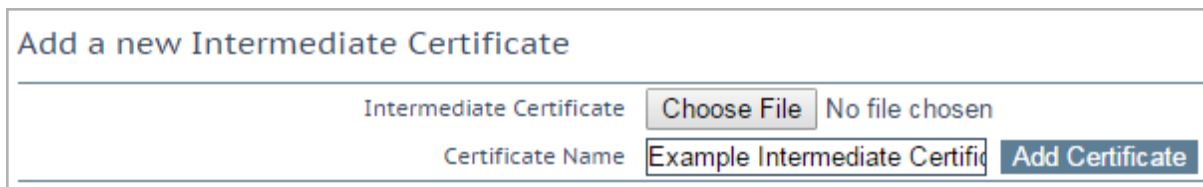

Add a new Intermediate Certificate	
Intermediate Certificate	<input type="button" value="Choose File"/> No file chosen
Certificate Name	<input type="text" value="Example Intermediate Certifi"/> <input type="button" value="Add Certificate"/>

## 2 Create an SSL Accelerated Virtual Service

2. Click **Choose File**.
3. Browse to and select the required intermediate certificate file.
4. Enter the **Certificate Name**. This name is used on the LoadMaster to help you manage your certificates.
5. Click **Add Certificate**.
6. Click **OK**.

These intermediate certificates do not need to be associated with any Virtual Service certificates. The LoadMaster automatically builds the required certificate chain.

Also, only one intermediate certificate is required per CA. If several certificates have been installed from VeriSign, for instance, you only need to install the VeriSign intermediate certificate once.

### 2.5.1 Invalid Certificate Formats

If you follow the steps to upload an intermediate certificate to the LoadMaster and receive a **Certificate Format Invalid** error, it means the certificate file you are trying to upload is unsupported or is not in one of the formats required by LoadMaster (PEM, CER, CRT).

The standard PEM file format can be uploaded to the LoadMaster.

## 2.6 IIS Certificates

This section outlines how to migrate SSL from Microsoft Internet Information Services (IIS) to the LoadMaster.

When putting a LoadMaster in a situation where a Microsoft IIS server was previously performing SSL, there is an option to import the IIS certificate into the LoadMaster. This SSL certificate can be migrated from Microsoft IIS to the LoadMaster by completing two simple tasks. The first task is to export the SSL certificate from the IIS using Microsoft export tools; ensure to export the certificate and private key as a Personal Information Exchange File (PFX). The second step is to import the PFX file into the LoadMaster using the LoadMaster WUI. To start the import process on the LoadMaster simply click the **Add New** button in the SSL enabled Virtual Service and install the certificate as per the instructions in the **Adding an SSL Certificate** section.

## 2.7 Re-encrypt SSL

With SSL acceleration, the SSL session is terminated at the LoadMaster, and sent to the Real Servers unencrypted. In some security situations, it may be necessary to encrypt the connection between the LoadMaster and Real Servers. This can be done with reencrypt SSL.



## 2 Create an SSL Accelerated Virtual Service

With reencrypt SSL, the SSL session is first terminated at the LoadMaster. Persistence and other Layer 7 functionality can then be performed. After that, the traffic is re-encrypted in a new SSL session between the LoadMaster and the Real Server.

SSL Properties	
SSL Acceleration	Enabled: <input checked="" type="checkbox"/> Reencrypt: <input checked="" type="checkbox"/>
Supported Protocols	<input type="checkbox"/> SSLv3 <input checked="" type="checkbox"/> TLS1.0 <input checked="" type="checkbox"/> TLS1.1 <input checked="" type="checkbox"/> TLS1.2
Require SNI hostname	<input type="checkbox"/>
Certificates	<div> <div>Self Signed Certificate in use.</div> <div>Available Certificates</div> <div>ExampleCertificate [Example]</div> <div>Assigned Certificates</div> <div>None Assigned</div> <div>Set Certificates</div> <div>Manage Certificates</div> </div>
Ciphers	<div> <div>Cipher Set</div> <div>Default</div> <div>Modify Cipher Set</div> <div>Assigned Ciphers</div> <div> ECDHE-RSA-AES256-GCM-SHA384  ECDHE-ECDSA-AES256-GCM-SHA384  ECDHE-RSA-AES256-SHA384  ECDHE-ECDSA-AES256-SHA384  ECDHE-RSA-AES256-SHA  ECDHE-ECDSA-AES256-SHA </div> </div>
Client Certificates	No Client Certificates required
Reencryption Client Certificate	None required
Reencryption SNI Hostname	<input type="text"/> Set SNI Hostname

This is turned on by a single option in the properties screen of a Virtual Service in the SSL section.

## 2.8 Assigning a Client Certificate for Re-encryption

It is possible to require client certificates when SSL re-encryption is enabled. To assign a client certificate for re-encryption, follow the steps below:

1. In the main menu of the LoadMaster WUI, go to **Certificates & Security > SSL Certificates**.

Operation	
	New CSR
	Replace Certificate
	Delete Certificate
	Reencryption Usage

2. Click **Reencryption Usage** on the relevant certificate.

## 2 Create an SSL Accelerated Virtual Service

Identifier	Common Name(s)	Virtual Services	Assignment
ExampleCertificate	Example [Expires: Aug 24 09:11:21 2016 GMT]	Available VSs 10.154.11.61:80 10.154.11.62:80	Assigned VSs None Assigned <a href="#">Save Changes</a>
VSs using ExampleCertificate for Reencryption		Available VSs None Assigned	Assigned VSs 10.154.11.61:80 <a href="#">Save Changes</a>

3. Select the relevant IP address from the **Available VSs** box.
4. Click the right arrow.
5. Click **Save Changes**.

SSL Properties

SSL Acceleration
Enabled: ☒
Reencrypt: ☒

Supported Protocols
☐ SSLv3
☒ TLS1.0
☒ TLS1.1
☒ TLS1.2
☒ TLS1.3

Require SNI hostname
☐

Certificates

Self Signed Certificate in use.

Available Certificates
None Available

Assigned Certificates
None Assigned

[Set Certificates](#)

[Manage Certificates](#)

Ciphers

Cipher Set
Default

[Modify Cipher Set](#)

Assigned Ciphers
ECDHE-ECDSA-AES256-GCM-SHA384  
ECDHE-RSA-AES256-GCM-SHA384  
DHE-DSS-AES256-GCM-SHA384  
DHE-RSA-AES256-GCM-SHA384  
ECDHE-ECDSA-CHACHA20-POLY1305  
ECDHE-RSA-CHACHA20-POLY1305

Client Certificates
No Client Certificates required

Reencryption Client Certificate
None required

Reencryption SNI Hostname
[Set SNI Hostname](#)

Strict Transport Security Header
Don't add the Strict Transport Security Header

Intermediate Certificates
Using all Installed Intermediate certificates  
[Show Intermediate Certificates](#)

The **Reencryption Client Certificate** is displayed in the **SSL Properties** section of the relevant Virtual Service.

## 2.9 Certificate Signing Request (CSR)

You can create a CSR for submission to your signing authority of choice. Using the WUI, navigate to **Certificates & Security > Generate CSR**. Fill in the information and click **Create CSR**. CSRs generated by the LoadMaster use SHA256.

---

### Caution

Store the private key in a vault. The private key will be required once the authority creates the certificate.

---

## 2.10 Backup/Restore Certificates

The LoadMaster supports exporting of all certificate information. This includes private key, host and intermediate certificates. The export file is designed to be used for import into another LoadMaster and is encrypted. You can import and export certificates using the WUI at **Certificates & Security > Backup/Restore Certs**. Ensure to note the passphrase used to create the export - it is required to complete the import.


There are options to restore only Virtual Service certificates including private keys, intermediate certificates, or both.

## 2.11 SSL Ciphers

The LoadMaster supports SSLv3, TLS1.0, TLS1.1, TLS1.2, and TLS1.3.

Ciphers define how the data stream is encrypted. The LoadMaster supports ciphers supporting perfect forward secrecy and Elliptic Curve.

## 2 Create an SSL Accelerated Virtual Service

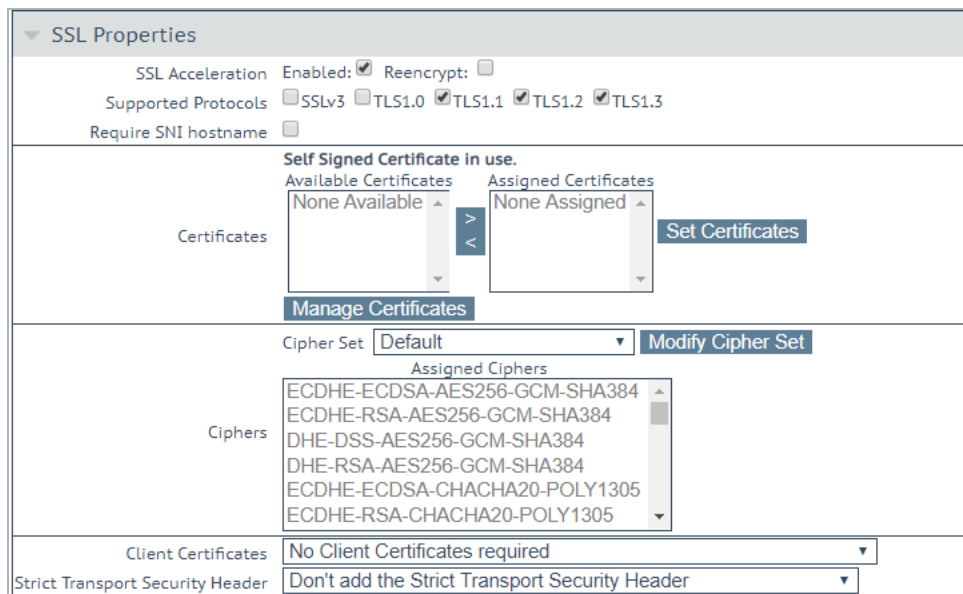

Each Virtual Service (which has **SSL Acceleration** enabled) has a cipher set assigned to it. This can either be one of the system-defined cipher sets or a user-customized cipher set. The system-defined cipher sets can be selected to quickly and easily select and apply the relevant ciphers.

A cipher set also needs to be assigned to the LoadMaster WUI. To set the WUI cipher set, go to **Certificates & Security > Admin WUI Access**.

---

CHACHA20-POLY1305 ciphers are given special preference when they appear in both the client and LoadMaster cipher lists. If these ciphers appear at the top of the client preference list, the LoadMaster will prioritize using CHACHA20-POLY1305 ciphers for the connection, regardless of the position of these ciphers in the LoadMaster's cipher list.

---

The system-defined cipher sets are as follows:

- **Default:** The cipher set that is configured on the LoadMaster on a fresh installation. This cipher set is geared towards backwards compatibility with previous releases of the LoadMaster.
- **Default\_NoRc4:** A more secure version of the default set that does not contain any RC4 ciphers, which are considered to be insecure on modern networks.
- **BestPractices:** This is the recommended cipher set to use on LoadMaster and it is updated occasionally to reflect current industry best practices. It does not include older and legacy

## 2 Create an SSL Accelerated Virtual Service

cipher sets which may be required by older browser and application deployments. The last update to the BestPractices set was made in LMOS 7.2.52.0.

- **Intermediate\_compatibility:** This cipher set includes some ciphers that are required by older browser and service implementations that are still seen in the field.
- **Backward\_compatibility:** This cipher set provides maximum backward compatibility for clients back to Windows XP/IE6 at the risk of using less secure ciphers.

---

The **Backward\_compatibility** cipher set should be used as a last resort only.

---

- **WUI:** This is the default cipher set used by the administrative user interface. It can be changed by using the controls under **Certificates & Security > Admin WUI Access**.
- **FIPS:** This set contains only ciphers that conform to Federal Information Processing Standards (FIPS) 140-2 level 1 standard and should be used only in those deployments that require it.
- **Legacy:** This cipher set is provided solely for upgrade compatibility for legacy LoadMaster firmware versions (v7.0-10 and previous). After upgrade to a modern version of LoadMaster, it is recommended to choose a more secure cipher set.
- **Null\_Ciphers:** This cipher set contains what are called 'null ciphers', which do not provide any cryptographic protection, but rather depend on the application to provide it. In general, use these ciphers only if required by the application and if that application provides independent cryptographic protection.
- **ECDSA\_Default:** This cipher set includes only cipher sets that use elliptical curve cryptography and is recommended for those deployments that require EC cryptography.
- **ECDSA\_BestPractices:** This is a modified version of the **ECDSA\_Default** set that includes only those ciphers that conform to the [Common Criteria](#) standards.

To find out what ciphers are in each cipher set, go to **Certificates & Security > Cipher Sets**. Select the relevant **Cipher Set**. Two lists are displayed – **Available Ciphers** and **Assigned Ciphers**. These lists can be filtered by typing some text into the **Filter** text boxes provided. The **Filter** text boxes will only allow you to enter valid text which is contained in the cipher names, for example **ECDHE**. If invalid text is entered, the text box will turn red and the invalid text is deleted.

Ciphers can be dragged and dropped to/from the **Available** and **Assigned** lists as needed. Ciphers which are already assigned will appear grayed out in the **Available Ciphers** list.

## 2 Create an SSL Accelerated Virtual Service


---

Kemp reserves the right to change the contents of these cipher sets at any time in response to changes in industry security standards and best practices.

---

Clicking the **Modify Cipher Set** button in the SSL Properties section in the Virtual Service modify screen will bring you to the **Cipher Set Management** screen. This screen allows you to create new and modify existing custom cipher sets.

Starting with version 7.2.37, when re-encryption is enabled, the TLS version that can be negotiated between the LoadMaster and the Real Servers behind it are no longer constrained by the TLS version settings configured on the client side. All TLS versions and ciphers that are supported on the LoadMaster can be negotiated without restriction by Real Servers. In this way, the LoadMaster can, for example, provide strict security for client-side application access and still support server-side connections to legacy servers that only support specific, less secure, TLS versions, and ciphers. This is illustrated in the example below.

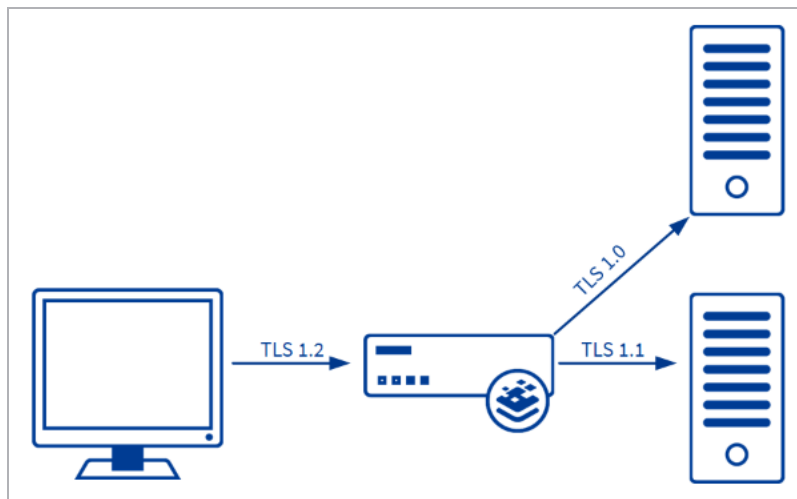

Server connections are only restricted by the configuration of the Real Servers, regardless of the TLS version selected on the client side. Each Real Server can be configured independently of the others. The LoadMaster negotiates connections according to the requirements of each Real Server.

### 2.11.1 Cipher Set Management

Cipher Set Management

Cipher Set Default

Available Ciphers

Filter:

Name	Strength
ECDHE-RSA-AES256-GCM-SHA384	High
ECDHE-ECDSA-AES256-GCM-SHA384	High
ECDHE-RSA-AES256-SHA384	High
ECDHE-ECDSA-AES256-SHA384	High
ECDHE-RSA-AES256-SHA	High
ECDHE-ECDSA-AES256-SHA	High
DH-DSS-AES256-GCM-SHA384	High
DHE-DSS-AES256-GCM-SHA384	High
DH-RSA-AES256-GCM-SHA384	High
DHE-RSA-AES256-GCM-SHA384	High
DHE-RSA-AES256-SHA256	High
DHE-DSS-AES256-SHA256	High
DH-RSA-AES256-SHA256	High
DH-DSS-AES256-SHA256	High

Assigned Ciphers

Filter:

Name	Strength
ECDHE-RSA-AES256-GCM-SHA384	High
ECDHE-ECDSA-AES256-GCM-SHA384	High
ECDHE-RSA-AES256-SHA384	High
ECDHE-ECDSA-AES256-SHA384	High
ECDHE-RSA-AES256-SHA	High
ECDHE-ECDSA-AES256-SHA	High
DH-DSS-AES256-GCM-SHA384	High
DHE-DSS-AES256-GCM-SHA384	High
DH-RSA-AES256-GCM-SHA384	High
DHE-RSA-AES256-GCM-SHA384	High
DHE-RSA-AES256-SHA256	High
DHE-DSS-AES256-SHA256	High
DH-RSA-AES256-SHA256	High
DH-DSS-AES256-SHA256	High

Save as: Default

Save

Two lists are displayed – **Available Ciphers** and **Assigned Ciphers**. These lists can be filtered by typing some text into the **Filter** text boxes provided. The **Filter** text boxes will only allow you to enter valid text which is contained in the cipher names, for example **ECDHE**. If invalid text is entered, the text box will turn red and the invalid text is deleted.

Ciphers can be dragged and dropped to/from the **Available** and **Assigned** lists as needed. Ciphers which are already assigned will appear greyed out in the **Available Ciphers** list.

Changes cannot be made to a preconfigured cipher set. However, you can start with a preconfigured cipher set – make any changes as needed and then save the cipher set with a new custom name.

## 2 Create an SSL Accelerated Virtual Service

Enter the new name in the **Save as** text box and click the **Save** button. Custom cipher sets can be used across different Virtual Services and can be assigned as the WUI cipher set.

It is not possible to delete preconfigured cipher sets. However, custom cipher sets can be deleted by selecting the relevant custom cipher set and clicking the **Delete Cipher set** button.

---

The RC4-MND5 SSLv3 and RC4-MND5 SSLv3 ciphers are not supported for WUI connections (this is to improve security).

---

---

The RC4 ciphers are supported with (and can be assigned to) Virtual Services if needed.

---

### 2.11.2 Certificate Considerations for Various Cipher Suites

When you create or request SSL certificates to be used in combination with a particular cipher suite, you must be aware of the following:

- Different cipher suites require different signing algorithms to be used when creating server and client certificates.
- Some cipher suites are designed to reject self-signed certificates, as an added level of security.

The following sections outline specific requirements for various cipher suites supported by the LoadMaster.

---

This information is not specific to the LoadMaster, but to the design of the cipher suites themselves.

---

#### 2.11.2.1 DH-RSA- and DHE-RSA- Cipher Suites

This section applies to all ciphers with names beginning:

- **DH-RSA-**
- **DHE-RSA-**

As indicated in the names, these ciphers require RSA signing to be used in certificates. Additionally, the certificate cannot be a self-signed certificate. Therefore, when creating a Certificate Signing Request (CSR) for a certificate to be used with this cipher, ensure to specify an RSA-signed certificate.

#### 2.11.2.2 DH-DSS- and DHE-DSS- Cipher Suites

This section applies to all ciphers with names beginning:



- **DH-DSS-**
- **DHE-DSS-**

As indicated in the names, these ciphers require DSS (also known as DSA) signing to be used in certificates. Additionally, the certificate cannot be a self-signed certificate. Therefore, when creating a CSR for a certificate to be used with this cipher, ensure to specify a DSS-signed certificate.

### 2.11.2.3 ECDH-ECDSA- and ECDHE-ECDSA- Cipher Suites

This section applies to all ciphers with names beginning:

- **ECDH-ECDSA-**
- **ECDHE-ECDSA-**

As implied by the names, these ciphers require an ECDSA certificate, but it can be self-signed.

For these ciphers, the following openssl command line example from a Linux system creates a self-signed certificate for testing with the proper SSL options. The second command concatenates the key and certificate into a single file for input into the LoadMaster WUI.

```
openssl ecparam -name secp521r1 -param_enc named_curve -genkey -out private-key.pem  
openssl req -new -x509 -key private-key.pem -out server-pub.pem -days 730
```

```
cat private-key.pem server-pub.pem > server.pem
```

---


The **-param\_enc explicit** option must not be used in the command line above, or the resulting certificate will be rejected when used to negotiate a secure connection.

---

If you plan to use a certificate signed by a Certificate Authority (CA), ensure to specify an ECDSA-signed certificate when creating a CSR for a certificate to be used with this cipher.

## 2.12 WUI Root Certificate Installation

By default the LoadMaster uses a self-signed certificate to ensure secure administrative access to the WUI. However, most modern browsers will display a warning when such a certificate is used.

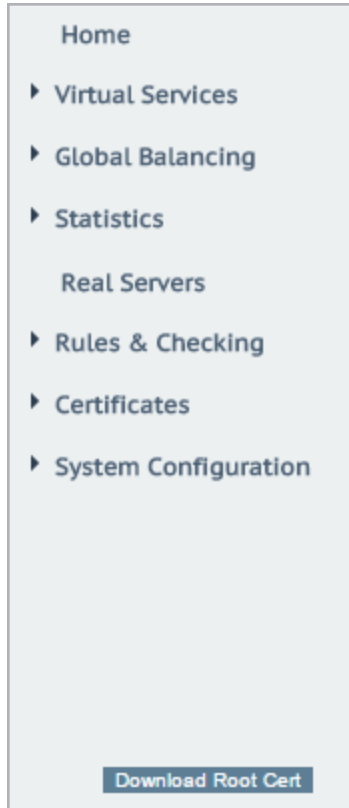

In order to eliminate this warning, the LoadMaster certificate can be installed by clicking the **Download Root Cert** button in the main menu on the **Home** page, when you first access the WUI in a browser.

---

If this button is not visible, go to the WUI **Home** and refresh the page.

---

This will download the certificate file that can be installed on the browser so that the security warning can be avoided.

### 2.13 OCSP Configuration

A Common Access Card (CAC) is a smart card used for identification of active-duty military personnel, selected reserve, US Department of Defence (DoD) civilian employees and eligible contractor personnel. In addition to providing physical access to buildings and protected areas, it also allows access to DoD computer networks and systems satisfying two-factor authentication, digital security and data encryption. It leverages a Public Key Infrastructure (PKI) Security Certificate to verify a cardholder's identity prior to allowing access to protected resources.

## 2 Create an SSL Accelerated Virtual Service

The Edge Security Pack (ESP) feature of the Kemp LoadMaster supports integration with DoD environments, leveraging CAC authentication and Active Directory application infrastructures. The LoadMaster acts on behalf of clients presenting X.509 certificates using CAC and becomes the authenticated Kerberos client for services.

The request for and presentation of the client certificate happens during initial SSL session establishment. There are two core elements to the process of a user gaining access to an application with CAC:

- Authentication – occurs during SSL session establishment and entails:
  - Verifying the certificate date
  - Verifying revocation status using Online Certificate Status Protocol (OCSP)
  - Verifying the full chain to the Certificate Authority (CA)
- Authorization – occurs after SSL session establishment and the matching of the certificate Subject Alternative Name (SAN) against the User Principal Name (UPN) of the appropriate principal in Active Directory.

For more information, refer to the [DoD Common Access Card \(CAC\) Authentication, Feature Description](#) document.

### 2.13.1 OCSP Server Settings

The OCSP server settings can be set in the LoadMaster WUI in **Certificates & Security > OCSP Configuration**.

#### OCSP Server Settings

OCSP Server

OCSP Server Port

OCSP URL

Use SSL

☐

Allow Access on Server Failure

☐

#### OCSP Server

The address of the OCSP server.

#### OCSP Server Port

The port of the OCSP server.

#### OCSP URL

## 2 Create an SSL Accelerated Virtual Service


The URL to access on the OCSP server.

### Use SSL

Select this to use SSL to connect to the OCSP server.

### Allow Access on Server Failure

Treat an OCSP server connection failure or timeout as if the OCSP server had returned a valid response, that is, treat the client certificate as valid.

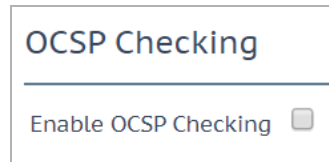


OCSP Checking

---

Enable OCSP Checking ☐

### OCSP Checking

Select the **Enable OCSP Checking** check box to enable the LoadMaster to perform OCSP checks on certain outbound connections. This is disabled by default.

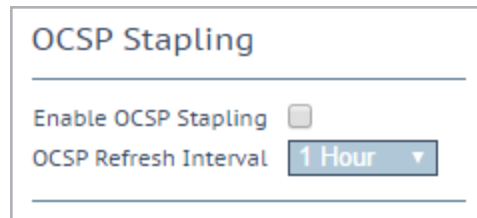

OCSP Stapling

---

Enable OCSP Stapling ☐

OCSP Refresh Interval

### Enable OCSP Stapling

Select this check box to enable the LoadMaster to respond to OCSP stapling requests. If a client connects using SSL and asks for an OCSP response, this is returned. Only Virtual Service certificates are validated. The system holds a cache of OCSP responses that are sent back to the client. This cache is maintained by the OCSP daemon. When the OCSP daemon sends a request to the server, it uses the name specified in the certificate (in the **Authority Information Access** field). If it cannot resolve this name, then it uses the default OCSP server specified in the **OCSP Server** text box.


### OCSP Refresh Interval

Specify how often the LoadMaster should refresh the OCSP stapling information. The OCSP daemon caches the entry for up to the amount of time specified here, after which it is refreshed. Valid values range from 1 hour (default) to 24 hours.

## 2.14 Setting the Diffie-Hellman Key Exchange Size

The Diffie-Helman Key Exchange Size is set to **2048 Bits** by default in the LoadMaster. This can be changed if needed. To change the Diffie-Hellman Key Exchange Size, follow the steps below:

1. In the main menu of the LoadMaster WUI, go to **System Configuration > Miscellaneous Options > Network Options**.

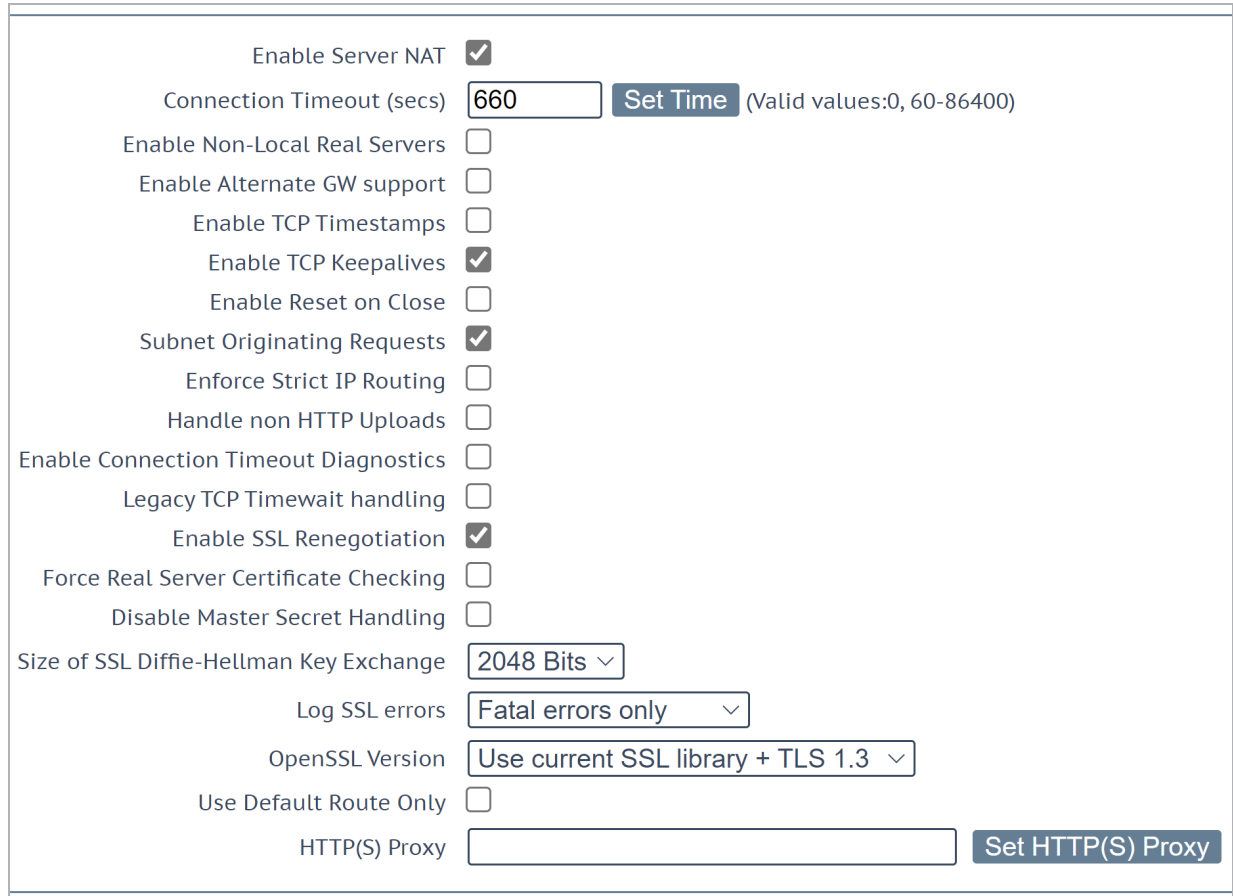

Enable Server NAT	<input checked="" type="checkbox"/>
Connection Timeout (secs)	<input type="text" value="660"/> <button>Set Time</button> (Valid values:0, 60-86400)
Enable Non-Local Real Servers	<input type="checkbox"/>
Enable Alternate GW support	<input type="checkbox"/>
Enable TCP Timestamps	<input type="checkbox"/>
Enable TCP Keepalives	<input checked="" type="checkbox"/>
Enable Reset on Close	<input type="checkbox"/>
Subnet Originating Requests	<input checked="" type="checkbox"/>
Enforce Strict IP Routing	<input type="checkbox"/>
Handle non HTTP Uploads	<input type="checkbox"/>
Enable Connection Timeout Diagnostics	<input type="checkbox"/>
Legacy TCP Timewait handling	<input type="checkbox"/>
Enable SSL Renegotiation	<input checked="" type="checkbox"/>
Force Real Server Certificate Checking	<input type="checkbox"/>
Disable Master Secret Handling	<input type="checkbox"/>
Size of SSL Diffie-Hellman Key Exchange	<input type="text" value="2048 Bits"/>
Log SSL errors	<input type="text" value="Fatal errors only"/>
OpenSSL Version	<input type="text" value="Use current SSL library + TLS 1.3"/>
Use Default Route Only	<input type="checkbox"/>
HTTP(S) Proxy	<input type="text"/> <button>Set HTTP(S) Proxy</button>

2. Select the relevant option in the **Size of Diffie-Helman Key Exchange** drop-down list. Available values are:

- 512 Bits
- 1024 Bits
- 2048 Bits

### 2 Create an SSL Accelerated Virtual Service

3. A reboot is required to apply the change. To reboot the LoadMaster, go to **System Configuration > System Administration > System Reboot** and click **Reboot**.

# 3 WUI Options

This section provides a description for each of the WUI options relating to SSL.

## 3.1 SSL Properties

SSL Properties	
SSL Acceleration	Enabled: <input checked="" type="checkbox"/> Reencrypt: <input type="checkbox"/>
Supported Protocols	<input type="checkbox"/> SSLv3 <input type="checkbox"/> TLS1.0 <input checked="" type="checkbox"/> TLS1.1 <input checked="" type="checkbox"/> TLS1.2 <input checked="" type="checkbox"/> TLS1.3
Add Received Cipher Name	<input checked="" type="checkbox"/>
Require SNI hostname	<input type="checkbox"/>
Certificates	<p><b>Self Signed Certificate in use.</b></p> <div> <div>Available Certificates</div> <div>None Available</div> </div> <div> <div>Assigned Certificates</div> <div>None Assigned</div> </div> <div> <div>&gt;</div> <div>&lt;</div> </div> <div> <div>Set Certificates</div> </div> <div> <div>Manage Certificates</div> </div>
Ciphers	<div> <div>Cipher Set</div> <div>Default</div> <div>Modify Cipher Set</div> </div> <div> <div>Assigned Ciphers</div> <div> ECDHE-ECDSA-AES256-GCM-SHA384  ECDHE-RSA-AES256-GCM-SHA384  DHE-DSS-AES256-GCM-SHA384  DHE-RSA-AES256-GCM-SHA384  ECDHE-ECDSA-CHACHA20-POLY1305  ECDHE-RSA-CHACHA20-POLY1305 </div> </div>
Client Certificates	No Client Certificates required
Strict Transport Security Header	Don't add the Strict Transport Security Header
Intermediate Certificates	Using all installed Intermediate certificates Show Intermediate Certificates

### SSL Acceleration

This check box appears when the criteria for SSL Acceleration have been met. Select this check box to activate **SSL Acceleration**.

**Enabled:** If the **Enabled** check box is selected and there is no certificate for the Virtual Service, you are prompted to install a certificate. You can add a certificate by clicking **Manage Certificates** and importing or adding a certificate.

**Reencrypt:** Selecting the **Reencrypt** check box re-encrypts the SSL data stream before sending it to the Real Server.

You cannot use **Extra Ports** or **Transparency** with SSL reencryption.

**Reversed:** Selecting this check box means that the data from the LoadMaster to the Real Server is re-encrypted. The input stream must not be encrypted, for example, the client sends HTTP port 80 traffic to the LoadMaster and the LoadMaster sends HTTPS port 443 traffic to the Real Server. This is only useful in connection with a separate Virtual Service which decrypts SSL traffic then uses this Virtual Service as a Real Service and loops data back to it. In this way, the client to Real Server data path is always encrypted on the wire.

### Supported Protocols

The check boxes in the **Supported Protocols** section enable you to specify which protocols are supported by the Virtual Service. By default, TLS1.1, TLS1.2, and TLS1.3 are enabled and SSLv3 and TLS1.0 are disabled.

---


The **TLS1.3** check box will not be visible if the **OpenSSL Version** setting in **System Configuration > Miscellaneous Options > Network Options** is set to **Use older SSL library - no TLS 1.3**. For further details, refer to the **Network Options** section for further details.

---

Starting with version 7.2.37, when re-encryption is enabled, the TLS version that can be negotiated between the LoadMaster and the Real Servers behind it are no longer constrained by the TLS version settings configured on the client side. All TLS versions and ciphers that are supported on the LoadMaster can be negotiated without restriction by Real Servers. In this way, the LoadMaster can, for example, provide strict security for client-side application access and still support server-side connections to legacy servers that only support specific, less secure, TLS versions, and ciphers. This is illustrated in the example below.



## 3 WUI Options

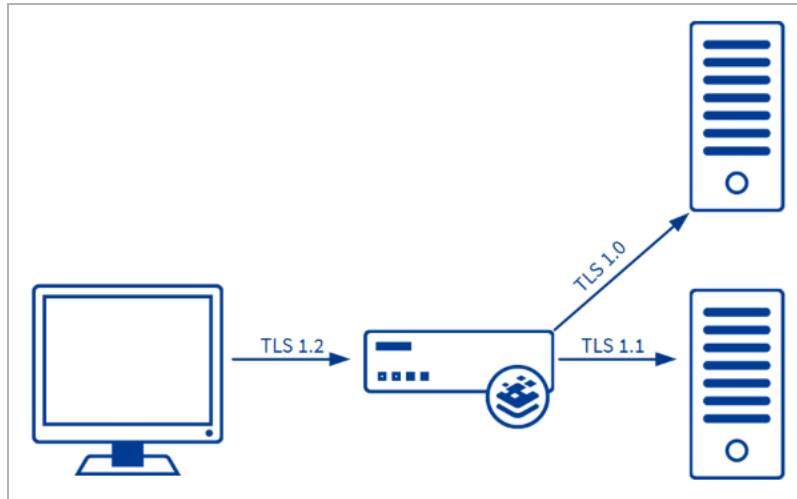

Server connections are only restricted by the configuration of the Real Servers, regardless of the TLS version selected on the client side. Each Real Server can be configured independently of the others. The LoadMaster negotiates connections according to the requirements of each Real Server.

**Add Received Cipher Name**

In LoadMaster version 7.2.52 and above, a new check box called **Add Received Cipher Name** was added. This option is disabled by default. When this option is enabled, the LoadMaster adds X-SSL headers containing client SSL information such as TLS version, TLS cipher, client certificate serial number, and SNI host as described in below table.

Header	Description	Example Value	Content Rule Variable
X-SSL-Cipher	The cipher used.	X-SSL-Cipher: ECDHE-RSA-AES256-GCM-SHA384	ssl-cipher
X-SSL-Protocol	The SSL protocol version used.	X-SSL-Protocol: TLSv1.2	ssl-version
X-SSL-Serialid	The Virtual Service certificate serial number.	X-SSL-Serialid: 4900000006A2ABDC165ACEAD550000000000006	ssl-clientserialid
X-SSL-ClientSerialid	The client certificate serial number.	X-SSL-ClientSerialid: 4900000005D6898F3C7E590536100010000005D	ssl-serialid
X-SSL-SNIHost	The value of the	X-SSL-SNIHost: sni.test.com	ssl-sni

Header	Description	Example Value	Content Rule Variable
	received SNI name.		

### Require SNI hostname

If require Server Name Indication (SNI) is selected, the hostname is always required to be sent in the TLS client hello message.

When **Require SNI hostname** is disabled, the first certificate is used if a host header match is not found.

When **Require SNI hostname** is enabled, a certificate with a matching common name must be found, otherwise an SSL error is yielded. Wildcard certificates are also supported with SNI.

When using a Subject Alternative Name (SAN) certificate, alternate source names are not matched against the host header.

Wildcard certificates are supported but note that the root domain name is not matched, as per RFC 2459. Only anything to the left of the dot is matched. Additional certificates must be added to match the root domain names. For example, [www.kemptechnologies.com](http://www.kemptechnologies.com) is matched until a wildcard of \*.kemptechnologies.com. Kemptechnologies.com is not matched.

To send SNI host information in HTTPS health checks, enable **Use HTTP/1.1** in the **Real Servers** section of the relevant Virtual Service(s) and specify a host header. If this is not set, the IP address of the Real Server is used.

### Pass through SNI hostname

In LoadMaster firmware version 7.2.52 and above, when this option is enabled and when re-encrypting, the received SNI hostname is passed through as the SNI to be used to connect to the

Real Server. If the Virtual Server has a **Reencryption SNI Hostname** set, this overrides the received SNI.

### Certificates

Available certificates are listed in the **Available Certificates** select list on the left. To assign or unassign a certificate, select it and click the right or left arrow button. Then click **Set Certificates**. Multiple certificates can be selected by holding **Ctrl** on your keyboard and clicking each required certificate.

---

There is a limit of 8171 characters when assigning certificates to a Virtual Service using the WUI.

---

---

A Virtual Service can be configured using both RSA and ECC certificates. However, if an RSA and an ECC certificate have the same common name, for example, kemp.com, the first certificate is preferred. If the ECC certificate is first in the list, and a client does not have an ECC cipher, the connection fails. Conversely, if the RSA certificate is first in the list, and a client does not have an RSA cipher, the connection fails.

---

---

The total number of certificates that you can add to a Virtual Service is 256, but this number may be further limited by the size of the certificate file names used. In LMOS Version 7.2.47 and later releases, the number of characters in each certificate file name and extension (not counting the period between them), plus all spaces used to separate multiple file names, must add up to 8176 characters or less (in earlier releases, the limitation is 1023 characters.)

---

Clicking **Manage Certificates** brings you to the SSL Certificates screen.

If you add a certificate to the LoadMaster in version 7.2.51 or later (or in 7.2.48.3 LTS or a later LTS version) and then downgrade to 7.2.50 or an earlier version (or 7.2.48.2 LTS or an earlier version) - the certificate will not work. To work around this, create a backup of all SSL certificates before downgrading and then restore the certificates after downgrading (**Certificates & Security > Backup/Restore Certs**). If you forget to take the backup before downgrading: upgrade the firmware again, take the certificate backup, downgrade, and then restore the certificate backup.

### Reencryption Client Certificate

With SSL connections, the LoadMaster gets a certificate from the client and also gets a certificate from the server. The LoadMaster transcribes the client certificate in a header and sends the data to the server. The server still expects a certificate. This is why it is preferable to install a pre-authenticated certificate in the LoadMaster.

### Reencryption SNI Hostname

Specify the Server Name Indication (SNI) hostname to use when connecting to the Real Servers.

---

This field is only visible when SSL re-encryption is enabled.

---

### Cipher Set

A cipher is an algorithm for performing encryption or decryption.

Each Virtual Service (which has **SSL Acceleration** enabled) has a cipher set assigned to it. This can either be one of the system-defined cipher sets or a user-customized cipher set. You can select system-defined cipher sets to quickly and easily select and apply the relevant ciphers. You can create and modify custom cipher sets by clicking **Modify Cipher Set**.

### Ciphers

The **Ciphers** list is read only and displays a list of the currently assigned ciphers. Clicking **Modify Cipher Set** brings you to the **Cipher Set Management** screen. This screen allows you to create new, and modify existing custom cipher sets.

### Client Certificates

- **No Client Certificates required:** enables the LoadMaster to accept HTTPS requests from any client. This is the recommended option.

By default the LoadMaster accepts HTTPS requests from any client. Selecting any of the other values below requires all clients to present a valid client certificate. In addition, the LoadMaster also passes information about the certificate to the application.

---

You should not change this option from the default of **No Client Certificates required**. Only change from the default option if you are sure that all clients that access this service have valid client certificates.

---

- **Client Certificates required:** requires that all clients forwarding a HTTPS request must present a valid client certificate.

- **Client Certificates and add Headers:** requires that all clients forwarding a HTTPS request must present a valid client certificate. The LoadMaster also passes information about the certificate to the application by adding headers.
- The below options send the certificate in its original raw form. The different options let you specify the format that you want to send the certificate in:
  - Client Certificates and pass DER through as SSL-CLIENT-CERT
  - Client Certificates and pass DER through as X-CLIENT-CERT
  - Client Certificates and pass PEM through as SSL-CLIENT-CERT
  - Client Certificates and pass PEM through as X-CLIENT-CERT

### Verify Client using OCSP

Verify (using Online Certificate Status Protocol (OCSP)) that the client certificate is valid.

---

This option is only visible when ESP is enabled.

---

### Strict Transport Security Header

Enable this option to add the Strict-Transport-Security header to all LoadMaster-generated messages (ESP and error messages). The options in this drop-down list are as follows:

- **Don't add the Strict Transport Security Header**
- **Add the Strict Transport Security Header - no subdomains**
- **Add the Strict Transport Security Header - include subdomains**

### Intermediate Certificates

Prior to the **Intermediate Certificates** field being added to the **SSL Properties** section, there was no ability to assign intermediate or root certificates to a Virtual Service. The Certificate Authority (CA) for client certificates was kept in the global certificate store, so the following could occur:

- Client certificates from two different CAs are installed on the LoadMaster
- Client A presents a certificate issued from CA 1 and as a network administrator, you only want them to be able to access Virtual Service 1.
- Client B presents a certificate issued from CA 2 and as a network administrator, you only want them to be able to access Virtual Service 2.

- Because both client certificates are validated against the global LoadMaster trust store, client A is also allowed access to Virtual Service 2 and client B is also allowed access to Virtual Service 1.

The **Intermediate Certificates** field allows you to assign intermediate and root certificates to specific Virtual Services. This provides the ability to restrict access. It also enables control on what client certificates are eligible to be used when connecting to a service which is useful in environments with multiple client certificates signed by multiple authorities. For example, when this is configured correctly for the scenario above - Client A will only have access to Virtual Service 1 and Client B will only have access to Virtual Service 2.

To configure this, follow the steps below:

1. Upload the relevant certificates.
2. Then in the LoadMaster User Interface (UI), go to **Virtual Services > View/Modify Services**.
3. Click **Modify** on the relevant Virtual Service.
4. Expand the **SSL Properties** section.
5. Click **Show Intermediate Certificates**.
6. Select the relevant certificates from the boxes and click the arrows to remove/assign them from/to the Virtual Service.
7. Then, click **Set Intermediate Certificates**.

---

It is not possible to unassign all certificates from the Virtual Service. If you do not want client certificates to be required - select **No Client Certificates required** in the **Client Certificates** drop-down list.

---

## 3.2 Certificates & Security

The sections below describe the various screens in the **Certificates & Security** section of the LoadMaster WUI.

### 3.2.1 SSL Certificates

Certificate Configuration

Import Certificate
Add Intermediate

Identifier	Common Name(s)	Virtual Services	Assignment	Operation
ExampleCertificate	James [Expires: Jul 27 15:51:48 2016 GMT]	Available VSs 10.154.11.61:80	Assigned VSs 10.154.11.62:80	<div>Save Changes</div> <div> New CSR  Replace Certificate  Delete Certificate  Reencryption Usage </div>

Administrative Certificates  
Administrative Certificate Certificate to Use Use Certificate

Shown above is the **Manage Certificates** screen. Details about the various options on this screen are below:

**Import Certificate** – to import the certificate with a chosen filename.

**Add Intermediate** – refer to the **Intermediate Certificates** section for further information.

**Identifier** – is the name given to the certificate at the time it was created.

**Common Name(s)** – is the FQDN (Fully Qualified Domain Name) for the site.

**Virtual Services** – the Virtual Service with which the certificate is associated.

**Assignment** – lists of available and assigned Virtual Services

**Operations** –

- **New CSR** – generates a new Certificate Signing Request (CSR) based on the current certificate.

---

If the certificate has Subject Alternative Names (SANs), generating a CSR in this way will not add the SANs. Instead, generate the CSR manually. For further information on this, refer to the **Generate CSR (Certificate Signing Request)** section.

---

- **Replace Certificate** – updates or replaces the certificate stored in this file.
- **Delete Certificate** – deletes the relevant certificate.

---

You cannot delete or replace Let's Encrypt certificates from the **SSL Certificates** screen. You can only delete or replace Let's Encrypt certificates from the **Let's Encrypt Certs** screen (Certificates & Security > **Let's Encrypt Certs**). The **Replace**

---


**Certificate** and **Delete Certificate** buttons are grayed out on the **SSL Certificates** screen for Let's Encrypt certificates.

- **Reencryption Usage** – display the Virtual Services that are using this certificate as a client certificate when re-encrypting.

**Administrative Certificates** – the certificate you want to use, if any, for the administrative interface.

TPS Performance will vary based on key length. Larger keys reduce performance.

### 3.2.2 Intermediate Certificates

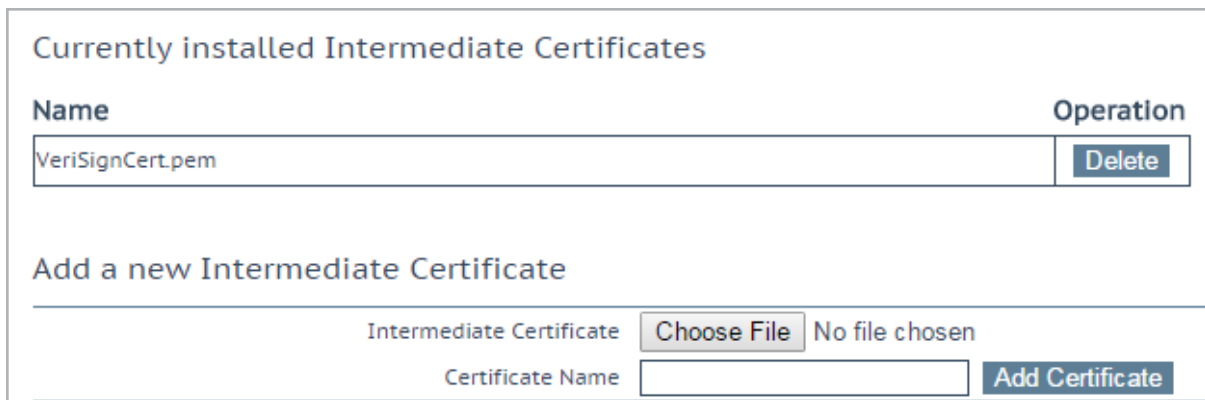


Name	Operation
VeriSignCert.pem	<button>Delete</button>

Add a new Intermediate Certificate

Intermediate Certificate  No file chosen

Certificate Name

This screen shows a list of the installed intermediate certificates and the name assigned to them.

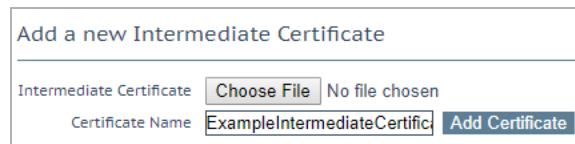

Add a new Intermediate Certificate

Intermediate Certificate  No file chosen

Certificate Name

If you already have a certificate, or you have received one from a CSR, you can install the certificate by clicking the **Choose File** button. Navigate to and select the certificate and then enter the desired **Certificate Name**. The name can only contain alpha characters with a maximum of 32 characters.

Uploading several consecutive intermediate certificates within a single piece of text, as practiced by some certificate vendors such as GoDaddy, is allowed. The uploaded file is split into the individual certificates.



## 3.2.3 Let's Encrypt Certificates

### Set Directory URL

Directory URL

Set Directory URL

### Register Let's Encrypt Account

Email Address (optional)

Register Account

### Fetch Let's Encrypt Account

Account Key File 

Choose File No file chosen

Pass Phrase

Upload Account Key


**Directory URL:** Enter the URL of the Automated Certificate Management Environment (ACME) server in the **Directory URL** field and click **Set Directory URL**. The default URL is the Let's Encrypt production ACME server: **<https://acme-v02.api.letsencrypt.org/directory>**. This can be changed as needed. The LoadMaster supports API version 2 of the ACME protocol.

**Email Address (optional):** You can register for Let's Encrypt account by optionally entering your **Email Address** and clicking **Register Account**.

**Account Key File:** If you already have an existing Let's Encrypt account, you can upload the **Account Key File** by clicking the **Choose File** button. Navigate to and select the key file. You can retrieve the account key file from other ACME clients that you registered the account with (like Certbot).

**Pass Phrase:** Enter the passphrase associated with the certificate and click **Upload Account Key** to link to your existing account.

Once you have successfully registered or linked to your existing Let's Encrypt account, the **Manage Let's Encrypt Certificates** screen appears.

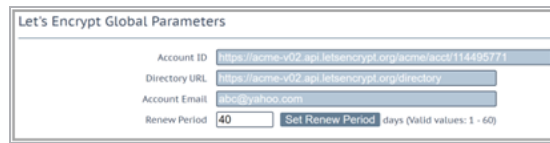

### Renew Period

Let's Encrypt certificates are valid for 90 days. The **Renew Period** value specifies how many days in advance of certificate expiry you would like the certificate to be renewed. The **Renew Period** is an account-wide setting. Per-certificate renewal periods are not supported at this time.

The **Renew Period** is set to 30 days by default. Let's Encrypt recommends renewing certificates 30 days before expiry. Valid values for the **Renew Period** field range from 1 to 60 (days). The old certificates are replaced and assigned to the HTTPS Virtual Service when the renewal is successful.

For more information and instructions, refer to the **Let's Encrypt Feature Description** on the [Kemp Documentation page](#).

### Request New Certificate

Click **Request New Certificate** to request a new certificate from the Let's Encrypt CA.

All fields on the **Request a New Certificate** screen are optional except for **Certificate Identifier** and **Common Name** (and you must select a Virtual Service next to the **Common Name** field).

**Certificate Identifier:** Enter a unique identifier. The **Certificate Identifier** value must be unique for all certificates on the LoadMaster.

**Common Name:** Enter the FQDN of your web server. This is case sensitive. Certificates are only issued to valid hosting domains that you have control over. Select the Virtual Service that is used for this domain. This will be used for the validation challenge to prove ownership of the domain.

---

A HTTP/HTTPS Layer 7 Virtual Service must be already configured with the ability to add a SubVS (so it should not have any Real Servers added to the parent Virtual Service - but if there are existing SubVSs they can have Real Servers attached). For instructions on how to convert an existing Virtual Service with Real Servers attached to one with SubVSs with Real Servers attached, refer to the **Let's Encrypt Feature Description** on the [Kemp Documentation page](#).

---

---

A HTTP Redirect Virtual Service must be configured to redirect all port 80 requests to 443 because Let's Encrypt communicates on port 80 to perform the HTTP-01 challenge.

---

---

All valid Virtual Services that meet the criteria are listed in the drop-down list.

---

**2 Letter Country Code:** Optionally enter the two-letter country code. For a list of valid country codes, refer to the following page: [SSL Certificate Country Codes](#). If using Let's Encrypt, the **2 Letter Country Code** to **Email Address** fields are truncated.

**State/Province:** Optionally enter the state or province to include in the certificate. Enter the full name, for example **New York** (not NY).

**City:** Optionally enter the city to include in the certificate.

**Company:** Optionally enter the name of the company to include in the certificate.

**Organization:** Optionally enter the department or organizational unit that should be contacted regarding this certificate.

**Email Address:** Optionally enter the email address of the person or organization that should be contacted regarding this certificate.

**Generate Elliptic Curve Request:** Optionally enable or disable this option. If this is enabled, an Elliptic Curve request is generated instead of an RSA request.

**Key Size:** Select the algorithm size from the drop-down list. If you are generating an Elliptic Curve (EC) request, the **Key Size** drop-down is grayed out. The default size of 256 Bits is used for EC requests. If you are generating an RSA request, you can specify the **Key Size**.

**SAN/UCC Names:** Enter the Subject Alternate Name (SAN). This must be a valid domain. You can specify up to 10 SANs.

For every SAN you must select a HTTP/HTTPS Layer 7 Virtual Service (you can use the same Virtual Service). For each SAN you must prove your authority to the Let's Encrypt server. A HTTP/HTTPS Virtual Service must be already configured with the ability to add a SubVS (so it should not have any Real Servers added to the parent Virtual Service - but if there are existing SubVSs they can have Real Servers attached). For instructions on how to convert an existing Virtual Service with Real Servers attached to one with SubVSs with Real Servers attached, refer to the **Let's Encrypt Feature Description** on the [Kemp Documentation page](#).

**Request Certificate:** A list of issued certificates and related details are displayed at the bottom of the **Let's Encrypt Certs** screen. The **HTTP Challenge VS(s)** column lists the Virtual Service (or Services) that were used for the HTTP challenge. These are not the Virtual Services that the certificates are assigned to.

Once the certificate is issued successfully, it will be listed in **Certificates & Security > SSL Certificates**. You can then assign it to any HTTPS Virtual Service or use it as an administrative certificate.

---

When manually assigning a new certificate to a Virtual Service for the first time, the Virtual Service will restart so Kemp recommends doing this outside of working hours.

---

When Let's Encrypt certificates are renewed, the Virtual Services that have the certificate assigned will be automatically updated with the renewed certificate.

---

Automatic renewal and updating of certificates is seamless and does not affect Virtual Service traffic.

---

Certificates are automatically renewed at the number of days specified in the **Renew Period** before the expiry date of each certificate. You can manually renew the certificate by clicking **Renew Certificate**.

You can also delete a certificate associated with the domain by clicking **Delete Certificate**.

---

If the certificate is used (for example if it is assigned in a Virtual Service or used as an administrative certificate) the **Delete Certificate** button is grayed out.

---

You cannot delete or replace Let's Encrypt certificates from the **SSL Certificates** screen. You can only delete or replace Let's Encrypt certificates from the **Let's Encrypt Certs** screen. The **Replace Certificate** and **Delete Certificate** buttons are grayed out on the **SSL Certificates** screen for Let's Encrypt certificates.

### 3.2.4 Generate CSR (Certificate Signing Request)

If you do not have a certificate, you may complete the Certificate Signing Request (CSR) form and click the **Create CSR** button. CSRs generated by the LoadMaster use SHA256.

---

If **Self-Signed Certificate Handling** is set to **EC certs with an EC signature** (in **Certificates & Security > Remote Access**), CSR

---

generation is restricted to the administrative (**bal**) user only. If **Self-Signed Certificate Handling** is set to a different value, all users (regardless of their permissions) can generate CSRs.

All Fields are optional except "Common Name"

---

2 Letter Country Code (ex. US)

State/Province (Full Name - New York, not NY)

City

Company

Organization (e.g., Marketing,Finance,Sales)

Common Name (The FQDN of your web server)

Email Address

SAN/UCC Names

Generate Elliptic Curve Request

☐

---

Cancel

Reset

Create CSR

### 2 Letter Country Code (ex. US)

The 2 letter country code that should be included in the certificate, for example **US** should be entered for the United States.

### State/Province (Entire Name – New York, not NY)

The state which should be included in the certificate. Enter the full name here, for example **New York**, not NY.

### City

The name of the city that should be included in the certificate.

### Company

The name of the company which should be included in the certificate.

### Organization (e.g., Marketing,Finance,Sales)

The department or organizational unit that should be included in the certificate.

**Common Name**

The Fully Qualified Domain Name (FQDN) for your web server.

**Email Address**

The email address of the responsible person or organization that should be contacted regarding this certificate.

**SAN/UCC Names**

A space-separated list of alternate names.

**Generate Elliptical Curve Request**

Select this check box to generate an Elliptical Curve (EC) request instead of an RSA request.

**Display Private Key**

This new option (introduced in LoadMaster firmware version 7.2.52 and LTS version 7.2.48.3) appears only when the **Certificates & Security > Remote Access > Self-Signed Certificate Handling** option is set to **EC certs with an EC signature** which means that an elliptical curve cipher is used for both the certificate and the digital signature.

Once the above option is selected, a **Display Private Key** check box appears on the **Certificates & Security > Generate CSR** WUI page.

- When **Display Private Key** is disabled (the default), the private key is not displayed in the WUI after the CSR is created. The unsigned CSR is downloaded by the user as in previous releases. Once it is signed by a Certificate Authority, the user uploads the signed certificate to the LoadMaster - the difference from previous releases being that the user does not have to also upload the private key, since LoadMaster maintains it internally when **Display Private Key** is disabled. If the saved private key matches the new certificate, the certificate gets imported and the saved private key is deleted. The stored private key is not encrypted but there is no access to it from the outside and it cannot be seen or displayed.
- When **Display Private Key** is enabled, the LoadMaster behaves as in previous releases: the private key is displayed to the user and must be uploaded to LoadMaster along with the private key.

There is only one private key per machine and it is not shared between High Availability (HA) pairs. This means the newly-generated certificate must be installed on the machine that the CSR was generated on.

After clicking the **Create CSR** button, the following screen appears:

## 3 WUI Options

The following is your 2048 bit *unsigned* certificate request. Copy the following, in its entirety, and send it to your trusted certificate authority

```
-----BEGIN CERTIFICATE REQUEST-----
MIIC9zCCAd8CAQAwgExCZAJBgNVBAYTA1VTMREwDwYDVQIEWhOZXcgW9yaZER
MA8GA1UEBxMlTmV3IFFlvcmsxGjAYBgNVBAoTEUFTVAgVGVjaG5vbG9naWZMR0w
GwYDVQQLExRlbn93bGVkZ2UgTWFuYwduY2VudDEUMBIGA1UEAxMLRXhhbXBsZS5j
b20xKzApBgkqhkiG9w0BCQEWHGpibG9nZ3NAAa2VtcHRlY2hub2xvZ2llcy5jb20w
ggEiMA0GCSqGSIb3DQEBAQUAA4IBDwAwggEKAoIBAQC+ohZjEwKEQT3jd6y9GN7k
Snu8E0T8bhA1LuGCD5Mn++uC+3Vm4r5m6gSpVS16RF4QaRqkuiaekz5QPWqMV06b
yxveeIhoq1HPVphPOEHBHd1iotC45LORJ6/A0vWd1RIj1JVJfe7ka6S60xaVgAog
61VohNoDtC2RHJ0WfVawBhEZh2YzzpuoPsmDoZRnuX8qD9DZn1c9s5Kn3YjomY50
2KRyJmFEI98N8sMmiPATvXYZCZrTUiifu2nwfPR9ogx7KvYk7Mi/73P41zDJDn4T
1GM0FMxYehg9BNXL27WkUek4994izLpyrv4whSc9QCbfD1BXz6IdxuFbpMJbMdVx
AgMBAAGgADANBgkqhkiG9w0BAQsFAAOCAQEANRw07oaxj+B6/t+KTMHTVWzXFDf
79HHQj7ROFtkqW+FfjKfAEbHfNAfOpMRQEC6tWysb70K1acBn2FCI2lr9stsUUC
bq+w4X1/crsVs+mc+veQ+p3R3zh1NPU1mZ6sofoQUiE8NbCRUtdZ+6ixxLZL0ah
Y7a9Ipn5qy2sT/yfYHao4rJWuzLXuAphqyc1JNWVPkFI/4tDbdrD5rGPZfCdDY
PDOxuN26244HtFkn9ZCqfkatGyTI9qVnPsidqapKUAUVZ4Zk1j+W7zNFgmw2cXK5
Ff97URaPLwEI+VQrVlbaJgN3/eMzLrvDB/OFD2LCv+9xk+KhAPSiDwvxJQ==
-----END CERTIFICATE REQUEST-----
```

The following is your private key. Copy the following, in its entirety, and save as a .key file. Do this using a text editor such as Notepad or VI (Do not use Microsoft Word - extra characters will be added making the key unusable). Key will later be used during the certificate upload process. **DO NOT** lose or distribute this file!

```
-----BEGIN RSA PRIVATE KEY-----
MIIEpAIBAAKCAQEAvgIwYXMCHEE943esvYDe5Ep7v8NE/G4QNS7hgg+Zjfvrgvt1
ZuK+ZuoOavUtekreEGkapLomnpM+UD1qjFdOm8sb3niIaktrZ1aYtzhBwR3dYqLQ
uEi6EsewNL1nZUSIS5SVX3uSgukutMwLYAKIOPvaITaA7QtkRyTsBb2sAYRGYdm
M86bqD0pg6GUZ7l/Kg/Q2TdxPbEip92I6Jm0TtikciZhrCCPFdLDJoJWE712GWQ
q01In7tp8H6UfaIMeylciuzIv+9z+NcwYXTeE9RJNBtMwHoYPWzVy9u8JFHpOPfe
Isy6cq7+MIUnPUAM33dQV8+iHcbhw6TCWzHVcQIDAQABaoIBAQCt/fLA6pDZdVkv
UoNvuzgc1X6p4kyMuUhbWlBBDUvxs4T5P9mf1kRCwk5dBUlE1zGjeMrAnsaw5Wny
iRu+i9FLK4W95xJLFS3ESpi483GHQn7BO/Lw1VQYxCex03rt+nae337eEkyrrH
afKq8PpNoJPjmZ4C02jKvma1trBPLHbHJozJ/oT5QtpDu0W+I5ysZriUuo1IOPi
1Vzke11T08qZRTJ5qIbx12akk3C9QCuA/F+BiGF6Tn76epHmPYGuYykoaAZcjAV
H9ryfKANHTz3B/SRza5lFRmqzTmoKex3sayhf35x6rU68xGSWNSqCr761RJRx7U
4bjOPxehAoGBAPr+B51VQyuQ0Gih5fysbqX2suDX2SEM1m55Ts+XuKrog7kc36xY
xTivObfZFu6ERQhxmGjuD8ZsvhN6gil5PHSDnvFmIL3vg4ja90zAxHKgoR2kpph
IuGfT0Uof/3+ZSTUjflr/OE2D9uiVRBPpHeH58iwtZJ2YqmqJzMV0193AoGBAMJv
xFK1RZG7MMVXQ1JFYrk+C5A5VG80VVDYh0K+XNV6ThSHK1Xq0rrIkcXzhY1QU14o
IuaSgQ5+BASbmJgx9LZlCE5xqHqHt1934WFF4G1BNcBhP9UR6ApnAtQwinWA+8k0
Ii/kaOKRAYaA2ENCt4gF/UdM381hoid7QSw2B7XXAoGBAIJZs7Caa0WQ5WuxyT00
ibj/sN68uvNDK4osThXngrSgF0jqae+kGqkZt6wXfp5x/b5q5dCHqoR6330w4z6V
CM6ELilxsYczCu1kz/wNjibzOV16ByFOGUN77Ts8EJTKrbq2+RGUJbzxux6h6/OQ
qSW621F9k8CA3LSovbr2Ntr5AoGAYDI7x0+346nhL0FFJwb+uPdhtFr/Li/od9E
bFKSSCNGjhG1a1Q/Sj0BJRaedKCuL19dJQZaxEqqy/QTQvk0QskrouQwnq6WJBWD
hES2Cl0g4tU6Z4g8bSkZ1TF0z2P3LnqEj30Wlj18ex3M8UaycnHEJYp7DX8oYrAw
R1du7HECgYBX402+E6pNliY7uoXXCYIZdHqapMt+MAaiFmg5cCggXbNbY3ftuxH
LDpMa6kZ/Yz10x2Uuj0QXvuh2wL1HlGCB+wJ8GgB185FtIzaFht70Wdr2HzhXY2
m1/R15hgtSEBdLLDg9DEN27Pr8LnTtF+7RfRFFVDwb0eDVLm+sqiQ==
-----END RSA PRIVATE KEY-----
```

The top part of the screen should be copied and pasted into a plain text file and sent to the Certificate Authority of your choice. They will validate the information and return a validated certificate.

The lower part of the screen is your private key and should be kept in a safe place. This key should not be disseminated as you will need it to use the certificate. Copy and paste the private key into a plain text file (do not use an application such as Microsoft Word) and keep the file safe.

### 3.2.5 Backup/Restore Certs

#### Certificate Backup

Backup all VIP and Intermediate Certificates

Passphrase

Retype Passphrase

Create Backup File

#### Restore Certificates

Backup File

Choose File

No file chosen

Which Certificates

What to restore ▼

Passphrase

Restore Certificates

**Backup all VIP and Intermediate Certificates:** When backing up certificates, you are prompted to enter a mandatory passphrase (password) twice. The parameters of the passphrase are that it must be alpha-numeric and it is case sensitive with a maximum of 64 characters.

---

**Caution:** This passphrase is a mandatory requirement to restore a certificate. You cannot restore a certificate without the passphrase. If you forget it, there is no way to restore the certificate.

---

**Backup File:** select the certificate backup file

**Which Certificates:** select which certificates you wish to restore

**Passphrase:** enter the passphrase associated with the certificate backup file



## 3.2.6 Cipher Sets

Cipher Set Management

Cipher Set Default

Available Ciphers
 Filter:

Assigned Ciphers
 Filter:

Name	Strength
ECDHE-ECDSA-AES256-GCM-SHA384	High
ECDHE-RSA-AES256-GCM-SHA384	High
DHE-DSS-AES256-GCM-SHA384	High
DHE-RSA-AES256-GCM-SHA384	High
ECDHE-ECDSA-CHACHA20-POLY1305	High
ECDHE-RSA-CHACHA20-POLY1305	High
DHE-RSA-CHACHA20-POLY1305	High
ECDHE-ECDSA-AES256-CCM8	High
ECDHE-ECDSA-AES256-CCM	High
DHE-RSA-AES256-CCM8	High
DHE-RSA-AES256-CCM	High
ECDHE-ECDSA-ARIA256-GCM-SHA384	High
ECDHE-ARIA256-GCM-SHA384	High
DHE-DSS-ARIA256-GCM-SHA384	High

Name	Strength
ECDHE-ECDSA-AES256-GCM-SHA384	High
ECDHE-RSA-AES256-GCM-SHA384	High
DHE-DSS-AES256-GCM-SHA384	High
DHE-RSA-AES256-GCM-SHA384	High
ECDHE-ECDSA-CHACHA20-POLY1305	High
ECDHE-RSA-CHACHA20-POLY1305	High
DHE-RSA-CHACHA20-POLY1305	High
ECDHE-ECDSA-AES256-CCM8	High
ECDHE-ECDSA-AES256-CCM	High
DHE-RSA-AES256-CCM8	High
DHE-RSA-AES256-CCM	High
ECDHE-ECDSA-ARIA256-GCM-SHA384	High
ECDHE-ARIA256-GCM-SHA384	High
DHE-DSS-ARIA256-GCM-SHA384	High

Save as: Default Save

## Cipher Set

Select the cipher set to view/modify.

The system-defined cipher sets are as follows:

- Default:** The cipher set that is configured on the LoadMaster on a fresh installation. This cipher set is geared towards backwards compatibility with previous releases of the LoadMaster.

- **Default\_NoRc4:** A more secure version of the default set that does not contain any RC4 ciphers, which are considered to be insecure on modern networks.
- **BestPractices:** This is the recommended cipher set to use on LoadMaster and it is updated occasionally to reflect current industry best practices. It does not include older and legacy cipher sets which may be required by older browser and application deployments. The last update to the BestPractices set was made in LMOS 7.2.52.0.
- **Intermediate\_compatibility:** This cipher set includes some ciphers that are required by older browser and service implementations that are still seen in the field.
- **Backward\_compatibility:** This cipher set provides maximum backward compatibility for clients back to Windows XP/IE6 at the risk of using less secure ciphers.

---

The **Backward\_compatibility** cipher set should be used as a last resort only.

---

- **WUI:** This is the default cipher set used by the administrative user interface. It can be changed by using the controls under **Certificates & Security > Admin WUI Access**.
- **FIPS:** This set contains only ciphers that conform to Federal Information Processing Standards (FIPS) 140-2 level 1 standard and should be used only in those deployments that require it.
- **Legacy:** This cipher set is provided solely for upgrade compatibility for legacy LoadMaster firmware versions (v7.0-10 and previous). After upgrade to a modern version of LoadMaster, it is recommended to choose a more secure cipher set.
- **Null\_Ciphers:** This cipher set contains what are called 'null ciphers', which do not provide any cryptographic protection, but rather depend on the application to provide it. In general, use these ciphers only if required by the application and if that application provides independent cryptographic protection.
- **ECDSA\_Default:** This cipher set includes only cipher sets that use elliptical curve cryptography and is recommended for those deployments that require EC cryptography.
- **ECDSA\_BestPractices:** This is a modified version of the **ECDSA\_Default** set that includes only those ciphers that conform to the [Common Criteria](#) standards.

To find out what ciphers are in each cipher set, go to **Certificates & Security > Cipher Sets**. Select the relevant **Cipher Set**.

Kemp reserves the right to change the contents of these cipher sets at any time in response to changes in industry security standards and best practices.

Two lists are displayed – **Available Ciphers** and **Assigned Ciphers**. These lists can be filtered by typing some text into the **Filter** text boxes provided. The **Filter** text boxes will only allow you to enter valid text which is contained in the cipher names, for example **ECDHE**. If invalid text is entered, the text box will turn red and the invalid text is deleted.

Ciphers can be dragged and dropped to/from the **Available** and **Assigned** lists as needed. Ciphers which are already assigned will appear grayed out in the **Available Ciphers** list.

Changes cannot be made to a pre-configured cipher set. However, you can start with a preconfigured cipher set – make any changes as needed and then save the cipher set with a new custom name. Enter the new name in the **Save as** text box and click the **Save** button. Custom cipher sets can be used across different Virtual Services and can be assigned as the WUI cipher set.

It is not possible to delete pre-configured cipher sets. However, custom cipher sets can be deleted by selecting the relevant custom cipher set and clicking the **Delete Cipher set** button.

### 3.2.7 Remote Access

There are some SSL-related fields on the **Remote Access** screen. These are described below.

Administrator Access

Allow Remote SSH Access

☒
Using:

All Networks

Port:

22

Set Port

SSH Pre-Auth Banner

Set Pre-Auth Message

Allow Web Administrative Access

☒
Using:

eth0: 10.35.48.17

Port:

443

Admin Default Gateway

Set Administrative Access

Allow Multi Interface Access

☐

Enable API Interface

☒
Port:

via 443

Set Port

Self-Signed Certificate Handling

EC certs with a RSA signature

Outbound Connection Cipher Set

BestPractices

Admin Login Method

Password Only Access (default)

Only Password mode is available if no Pre-Auth Banner is specified

Enable Software FIPS 140-2 level 1 Mode

☒

Enable Software FIPS mode

Enable Kemp Analytics

☒

### Self-Signed Certificate Handling

Select the type of self-signed certificates that the system will use. The options are described below:

51

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.


- **RSA self-signed certs:** By default, these are RSA certificates that are signed with the Kemp RSA root certificate
- **EC certs with a RSA signature:** The LoadMaster can generate an EC certificate also signed by the original RSA Kemp root certificate.
- **EC certs with an EC signature:** The LoadMaster can generate an EC certificate signed by the Kemp EC root certificate. In this mode, any CSRs generated will also be EC.

---

If **Self-Signed Certificate Handling** is set to **EC certs with an EC signature**, CSR generation is restricted to the administrative (**bal**) user only. If **Self-Signed Certificate Handling** is set to a different value, all users (regardless of their permissions) can generate CSRs.

---

You should not switch from **RSA self-signed certs** to **EC certs with an EC signature** directly. If you do this, connections will fail because there is no EC Kemp Certificate Authority (CA) certificate. To work around this, you must first switch from **RSA self-signed certs** to **EC certs with a RSA signature**.

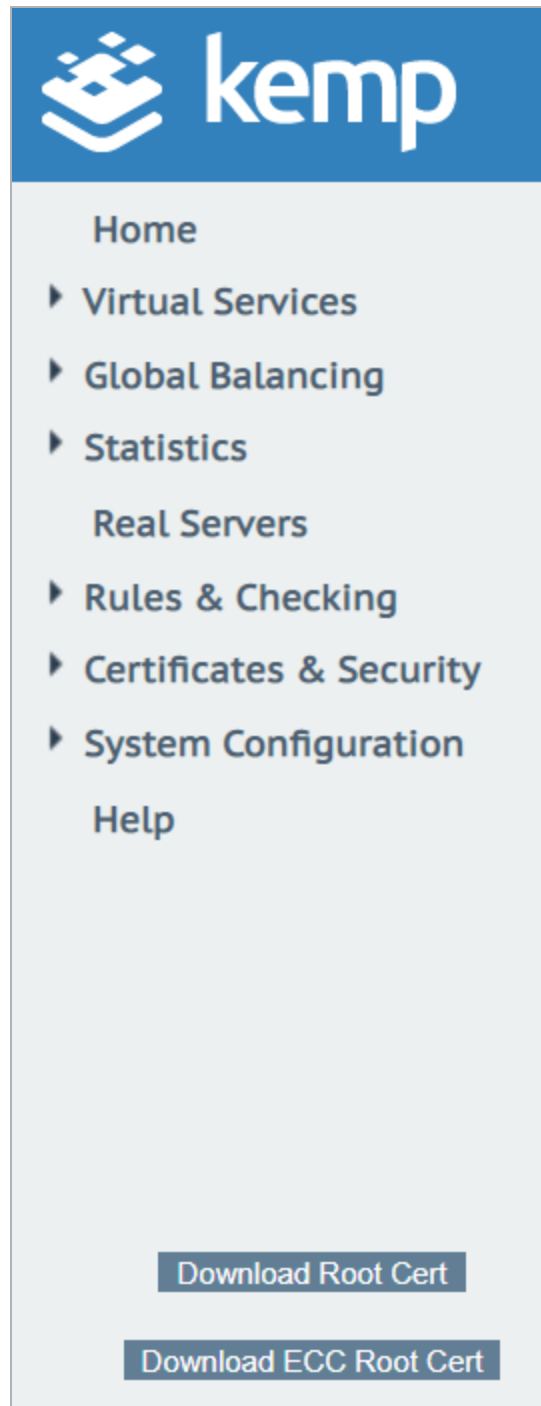

Then, download the new EC Kemp CA certificate by clicking **Download ECC Root Cert** in the bottom-right of the WUI under the main menu after refreshing the page. When this certificate has been downloaded, you can switch to **EC certs with an EC signature** with no loss of connection.

### Outbound Connection Cipher Set

Select the cipher set to use on outbound connections (OCSP, email, LDAP, and so on). This is global for all outbound connections. For information on each of the cipher sets available, refer to the **Cipher Sets** section.

---

Re-encrypt connections are not affected by this.

---

### 3.2.8 OCSP Configuration

#### OCSP Server Settings

OCSP Server	<input type="text" value="10.11.0.35"/>	<input type="button" value="Set Address"/>
OCSP Server Port	<input type="text" value="443"/>	<input type="button" value="Set Port"/>
OCSP URL	<input type="text" value="/"/>	<input type="button" value="Set Path"/>
Use SSL	<input type="checkbox"/>	
Allow Access on Server Failure	<input type="checkbox"/>	

#### OCSP Server

The address of the OCSP server. This can either be in IP address or Fully Qualified Domain Name (FQDN) format.

#### OCSP Server Port

The port of the OCSP server.

#### OCSP URL

The URL to access on the OCSP server.

#### Use SSL

Select this to use SSL to connect to the OCSP server.

#### Allow Access on Server Failure


Treat an OCSP server connection failure or timeout as if the OCSP server had returned a valid response, that is, treat the client certificate as valid.

#### OCSP Checking

Enable OCSP Checking	<input type="checkbox"/>
----------------------	--------------------------

### OCSP Checking

Select the **Enable OCSP Checking** check box to enable the LoadMaster to perform OCSP checks on certain outbound connections. This is disabled by default.

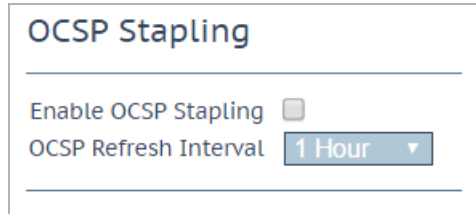

The image shows a configuration panel titled "OCSP Stapling". It contains two settings: "Enable OCSP Stapling" with an unchecked checkbox, and "OCSP Refresh Interval" with a dropdown menu currently set to "1 Hour".

### Enable OCSP Stapling

Select this check box to enable the LoadMaster to respond to OCSP stapling requests. If a client connects using SSL and asks for an OCSP response, this is returned. Only Virtual Service certificates are validated. The system holds a cache of OCSP responses that are sent back to the client. This cache is maintained by the OCSP daemon. When the OCSP daemon sends a request to the server, it uses the name specified in the certificate (in the **Authority Information Access** field). If it cannot resolve this name, then it uses the default OCSP server specified in the **OCSP Server** text box.

### OCSP Refresh Interval

Specify how often the LoadMaster should refresh the OCSP stapling information. The OCSP daemon caches the entry for up to the amount of time specified here, after which it is refreshed. Valid values range from 1 hour (default) to 24 hours.

# References

Unless otherwise specified, the following documents can be found at:

<http://kemptechnologies.com/documentation>.

**Web User Interface (WUI), Configuration Guide**

**Kemp LoadMaster, Product Overview**

**DoD Common Access Card (CAC) Authentication, Feature Description**

**RESTful API, Interface Description**

**SSL Accelerated Services for the FIPS, Feature Description**



# Last Updated Date

This document was last updated on 30 July 2023.