



LoadMaster Licensing

Feature Description

UPDATED: 27 July 2023

Copyright Notices

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

These materials and all Progress® software products are copyrighted and all rights are reserved by Progress Software Corporation. The information in these materials is subject to change without notice, and Progress Software Corporation assumes no responsibility for any errors that may appear therein. The references in these materials to specific platforms supported are subject to change.

#1 Load Balancer in Price/Performance, 360 Central, 360 Vision, Chef, Chef (and design), Chef Habitat, Chef Infra, Code Can (and design), Compliance at Velocity, Corticon, Corticon.js, DataDirect (and design), DataDirect Cloud, DataDirect Connect, DataDirect Connect64, DataDirect XML Converters, DataDirect XQuery, DataRPM, Defrag This, Deliver More Than Expected, DevReach (and design), Driving Network Visibility, Flowmon, Inspec, Ipswitch, iMacros, K (stylized), Kemp, Kemp (and design), Kendo UI, Kinvey, LoadMaster, MessageWay, MOVEit, NativeChat, OpenEdge, Powered by Chef, Powered by Progress, Progress, Progress Software Developers Network, SequeLink, Sitefinity (and Design), Sitefinity, Sitefinity (and design), Sitefinity Insight, SpeedScript, Stylized Design (Arrow/3D Box logo), Stylized Design (C Chef logo), Stylized Design of Samurai, TeamPulse, Telerik, Telerik (and design), Test Studio, WebSpeed, WhatsConfigured, WhatsConnected, WhatsUp, and WS_FTP are registered trademarks of Progress Software Corporation or one of its affiliates or subsidiaries in the U.S. and/or other countries.

Analytics360, AppServer, BusinessEdge, Chef Automate, Chef Compliance, Chef Desktop, Chef Workstation, Corticon Rules, Data Access, DataDirect Autonomous REST Connector, DataDirect Spy, DevCraft, Fiddler, Fiddler Classic, Fiddler Everywhere, Fiddler Jam, FiddlerCap, FiddlerCore, FiddlerScript, Hybrid Data Pipeline, iMail, InstaRelinker, JustAssembly, JustDecompile, JustMock, KendoReact, OpenAccess, PASOE, Pro2, ProDataSet, Progress Results, Progress Software, ProVision, PSE Pro, Push Jobs, SafeSpaceVR, Sitefinity Cloud, Sitefinity CMS, Sitefinity Digital Experience Cloud, Sitefinity Feather, Sitefinity Thunder, SmartBrowser, SmartComponent, SmartDataBrowser, SmartDataObjects, SmartDataView, SmartDialog, SmartFolder, SmartFrame, SmartObjects, SmartPanel, SmartQuery, SmartViewer, SmartWindow, Supermarket, SupportLink, Unite UX, and WebClient are trademarks or service marks of Progress Software Corporation and/or its subsidiaries or affiliates in the U.S. and other countries. Java is a registered trademark of Oracle and/or its affiliates. Any other marks contained herein may be trademarks of their respective owners.

Please refer to the NOTICE.txt or Release Notes – Third-Party Acknowledgements file applicable to a particular Progress product/hosted service offering release for any related required third-party acknowledgements.

Table of Contents

1 Introduction	6
1.1 Document Purpose	6
1.2 Intended Audience	6
1.3 Prerequisites	6
2 License the LoadMaster	7
2.1 Add Kemp Licensing Server to Allowed URLs on the Firewall	7
2.2 Register for a Kemp ID	7
2.2.1 Reset the Kemp ID Password	9
2.2.2 Changing the Kemp ID Email Address	10
2.3 Allow Call Home	10
2.4 Activate the LoadMaster License	10
2.4.1 License a Hardware LoadMaster	11
2.4.1.1 Online Licensing (Hardware LoadMasters)	11
2.4.1.2 Offline Licensing	12
2.4.1.2.1 Offline Licensing Through Clicking the Link from the LoadMaster (Hardware LoadMasters)	12
2.4.1.2.2 Offline Licensing Through Accessing the Offline Licensing Page Directly (Hardware LoadMasters)	15
2.4.2 License a Virtual LoadMaster	17
2.4.2.1 Online Licensing (Virtual LoadMasters)	17
2.4.2.2 Offline Licensing	18

2.4.2.2.1 Offline Licensing Through Clicking the Link from the LoadMaster (Virtual LoadMasters)	19
2.4.2.2.2 Offline Licensing Through Accessing the Offline Licensing Page Directly (Virtual LoadMasters)	21
2.4.3 License a Bare Metal LoadMaster	31
2.4.3.1 Online Licensing (Bare Metal LoadMasters)	31
2.4.3.2 Offline Licensing	33
2.4.3.2.1 Offline Licensing Through Clicking the Link from the LoadMaster (Bare Metal LoadMasters)	33
2.4.3.2.2 Offline Licensing Through Accessing the Offline Licensing Page Directly (Bare Metal LoadMasters)	36
2.4.4 License a Cloud Bring Your Own License (BYOL) LoadMaster	43
2.4.4.1 Online Licensing (Cloud BYOL LoadMasters)	43
2.4.4.2 Offline Licensing	44
2.4.4.2.1 Offline Licensing Through Clicking the Link from the LoadMaster (Cloud BYOL LoadMasters)	45
2.4.4.2.2 Offline Licensing Through Accessing the Offline Licensing Page Directly (Cloud BYOL LoadMasters)	47
2.4.5 License a Cloud Pay As You Go (PAYG) LoadMaster	50
2.4.5.1 Online Licensing (Cloud PAYG LoadMasters)	50
2.4.5.2 Offline Licensing	51
2.4.5.2.1 Offline Licensing Through Clicking the Link from the LoadMaster (Cloud PAYG LoadMasters)	52
2.4.5.2.2 Offline Licensing Through Accessing the Offline Licensing Page Directly (Cloud PAYG LoadMasters)	54
3 Troubleshooting	57

3.1 WUI Troubleshooting Checks	57
3.2 Console Troubleshooting Options	58
4 Temporary and Permanent Licenses	59
5 Updating a License	60
5.1 Update using the Online Licensing Method	61
5.2 Update using the Offline Licensing Method	61
6 Downgrading From LoadMaster Version 7 to Version 6	63
References	64
Last Updated Date	65

1 Introduction

Before the Kemp LoadMaster can be used it needs to be licensed. A Kemp ID is required to license a LoadMaster.

Follow the steps in the **Register for a Kemp ID** section to register for a Kemp ID (if this has not already been done) and then license the LoadMaster.

If the password for the Kemp ID has been forgotten, it can be reset. Refer to the **Reset the Kemp ID Password** section for instructions on how to do this.

Registration of a Kemp ID only needs to be done once. Future licensing requirements can use this same Kemp account.

1.1 Document Purpose

The purpose of this document is to guide the reader through the licensing process.

1.2 Intended Audience

This document is intended to be read by anyone who needs guidance during the LoadMaster licensing process.

1.3 Prerequisites

This document assumes that the LoadMaster has already been installed up to the point where it needs to be licensed. For installation instructions, refer to the relevant Installation Guide on the Kemp documentation page: <https://kemptechnologies.com/documentation>.

Licensing requires a connection to the Kemp licensing database (internet access). Either directly from the LoadMaster itself (to do online licensing) or from a any browser with internet access (to do offline licensing, if you do not have internet access directly from the LoadMaster).

2 License the LoadMaster

A Kemp ID is required to license Kemp products. The **Register for a Kemp ID** section details instructions on how to register for a Kemp ID, if you do not already have one.

2.1 Add Kemp Licensing Server to Allowed URLs on the Firewall

Kemp recommends adding the Kemp Licensing Server URLs (**alsi.kemptechnologies.com** and **alsi2.kemptechnologies.com**) as allowed URLs on your firewall to ensure all licensing features work, including the downloading and updating of Web Application Firewall (WAF) rules.

2.2 Register for a Kemp ID

To register for a Kemp ID, follow the steps below:

1. Go to <https://kemptechnologies.com/kemp-id-registration>.

There is a link to this page on the license screen on the LoadMaster.

2 License the LoadMaster

First Name *

Joe

Last Name *

Bloggs

Company Name *

Kemp Technologies

Select your country *

Ireland

Phone Number *

012345678

Email Address *

jbloggs@kemptechnologies.com

Retype Email Address *

jbloggs@kemptechnologies.com

Password *

.....

Retype Password *

.....

2. Fill out all of the fields on the form.

Enter a valid **Email Address**. The validation email and license information will be sent to this email address.

3. Make note of this password as it will be needed to activate and access the account.
4. Click **Create a Kemp ID**.
5. A success message is displayed. An email is sent from Kemp (alsilicensingregistration@kemptechnologies.com) to the address specified in the form.
6. Go to the email and click **Confirm** to open the validation screen.

If you do not activate the account within 24 hours of registering, the activation link in the email will have expired. To resend the

activation email, go to <https://alsi.kemptechnologies.com/resend-activation-email> and enter your Kemp ID. The resend email option does work if it is more than 24 hours since initial registration.


7. Enter the password that you specified on the registration form.
8. Click **Activate Now**.
9. A success message appears. Another email is sent to inform that the account is now active.

This Kemp account can now be used to activate products immediately.

2.2.1 Reset the Kemp ID Password

If the password for the Kemp account is not known, it can be reset. To reset the Kemp ID password, follow the steps below:

1. Go to the reset password page: <https://kemptechnologies.com/support/reset-password>

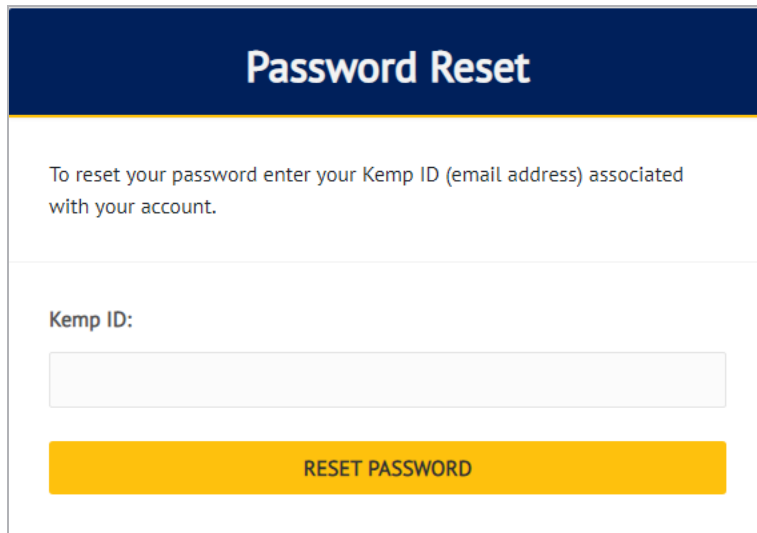

The screenshot shows a web form titled "Password Reset" with a dark blue header. Below the header, there is a light gray box containing the text: "To reset your password enter your Kemp ID (email address) associated with your account." Below this text is a label "Kemp ID:" followed by a white input field. At the bottom of the form is a yellow button labeled "RESET PASSWORD".

2. Enter the **Kemp ID**.
3. Click **RESET PASSWORD**.
4. An email will be sent to the address specified. Click the link in the email.
5. Enter the new password in both the **Password** and **Retype Password** fields.
6. Click **Reset**.

A message will appear to say the password has been successfully changed.

2.2.2 Changing the Kemp ID Email Address

If the email address associated with your LoadMaster must be changed, create a new Kemp ID with the new email address and relicense the unit. For further assistance, contact Kemp who can update the record.

2.3 Allow Call Home

Allow Call Home

As part of Kemp's continuous drive to offer better value and services to our customers Kemp has introduced a Call Home feature.

The LoadMaster can utilize Call Home to get available license updates, information regarding any updated firmware for your product and provide system status information to Kemp. The system status information will include Throughput, Enabled Features, Virtual Services and Real Servers details but will not include any unique personal information or actual traffic from your network.

Your LoadMaster will initiate a connection to Kemp once during any 24 hour interval.

NOTE – Allowing Call Home is mandatory for Free LoadMaster versions.

For more details on this visit <https://kemptechnologies.com/callhome>

Enable Call Home: ☒

[Continue](#)

During the licensing process you will be asked whether or not to allow the LoadMaster to call home to the Kemp licensing server to get available license updates and provide system status information to Kemp. For the **30 Day Trial** and **Purchased LoadMaster** options it is possible to either allow or disallow this functionality (by enabling/disabling the check box). If using a **Free LoadMaster** or Services Provider License Agreement (SPLA) LoadMaster, allowing the “call home” functionality is mandatory.

2.4 Activate the LoadMaster License

The licensing process varies slightly depending on what LoadMaster type you have. Refer to the relevant section below, depending on your LoadMaster type, for further details.

This document discusses licensing your LoadMaster using a license obtained from the Kemp Licensing Server, using either the online (preferred) or offline methods. The licensing screen on your LoadMaster may also present an option for **Kemp 360 Central Licensing**. Refer to the [Kemp 360 Central Feature Description](#) for further information.

2.4.1 License a Hardware LoadMaster

There are two methods to activate a license – online or offline.

Online licensing can be used when the LoadMaster has access to the internet. Offline licensing can be used when the LoadMaster does not have access to the internet.

Refer to the relevant section below depending on the licensing method you are using.

2.4.1.1 Online Licensing (Hardware LoadMasters)

Online licensing can be used when the LoadMaster has access to the internet.

A Kemp ID is required to license the LoadMaster. If a Kemp ID does not already exist, refer to the **Register for a Kemp ID** section. Instructions on how to license the LoadMaster are below.

To activate the LoadMaster license, perform the following steps:

1. In an internet browser, enter the IP address of the LoadMaster.

Ensure that **https://** is entered before the IP address.

2. A warning may appear regarding website security certificates. Click the continue/ignore option.

If this is the first time accessing the WUI, the End User License Agreement (EULA) may need to be accepted.

3. Ensure that **Online Licensing** is selected in the drop-down menu.

License Required To Continue

Please select License Method to proceed: Online Licensing ▼

Please enter your Kemp ID and password below to license this LoadMaster.

If you do not have a Kemp ID, please create one by visiting:
<https://kemptechnologies.com/kemp-id-registration>

Kemp ID:

Password:

Order ID# (optional):

HTTP(S) Proxy (optional):

License Now

2 License the LoadMaster

4. Enter the **Kemp ID**. This is the email address used during Kemp ID registration.
5. Enter the **Password** for the Kemp account.
6. There is no need to enter an **Order ID**.
7. If needed, a **HTTP(S) Proxy** server address can be entered, in the format **<ProxyServerAddress>:<Port>**.
8. Click **License Now**.
9. Click **OK**.

The LoadMaster is now fully installed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.1.2 Offline Licensing

Before licensing the LoadMaster, a Kemp ID is required. If one does not already exist, follow the steps in the **Register for a Kemp ID** section to get one.

If the LoadMaster WUI can be accessed but the LoadMaster does not have access to the internet, a license can be obtained using the offline method. You can license using the offline method in the following ways:

- Through clicking the link in the LoadMaster
- Through accessing the Offline Licensing page directly

Refer to the relevant section below, depending on what method you use.

2.4.1.2.1 Offline Licensing Through Clicking the Link from the LoadMaster (Hardware LoadMasters)

To perform offline licensing on a hardware LoadMaster through clicking the link from the LoadMaster, follow these steps:

1. In an internet browser, enter the IP address of the LoadMaster.

Ensure to enter **https://** before the IP address.

2. A warning may appear regarding website security certificates. Click the continue/ignore option. To stop this warning from appearing - download the root certificate of the LoadMaster by clicking **Download Root Cert** under the main menu after initially logging in.

If this is the first time accessing the WUI, the End User License Agreement (EULA) may need to be accepted.

License Required To Continue

Please select License Method to proceed: Offline Licensing ▾

Click [here](#) to obtain your license

Access Code: mmw14-jww5w-t9hpg-djhpg

License:

Apply License

3. Select **Offline Licensing** from the drop-down menu provided.
4. Click the **here** link provided on the page.

Offline Licensing

Licensing LoadMaster Serial No. 1165068

Kemp ID:


Password:

GENERATE LICENSE

5. Enter the **Kemp ID** (email address used when registering the Kemp account).
6. Enter the **Password** of the Kemp account.

If there are any parameters missing in the request that came from the LoadMaster, the complete form with all fields is displayed.

7. Click **GENERATE LICENSE**.

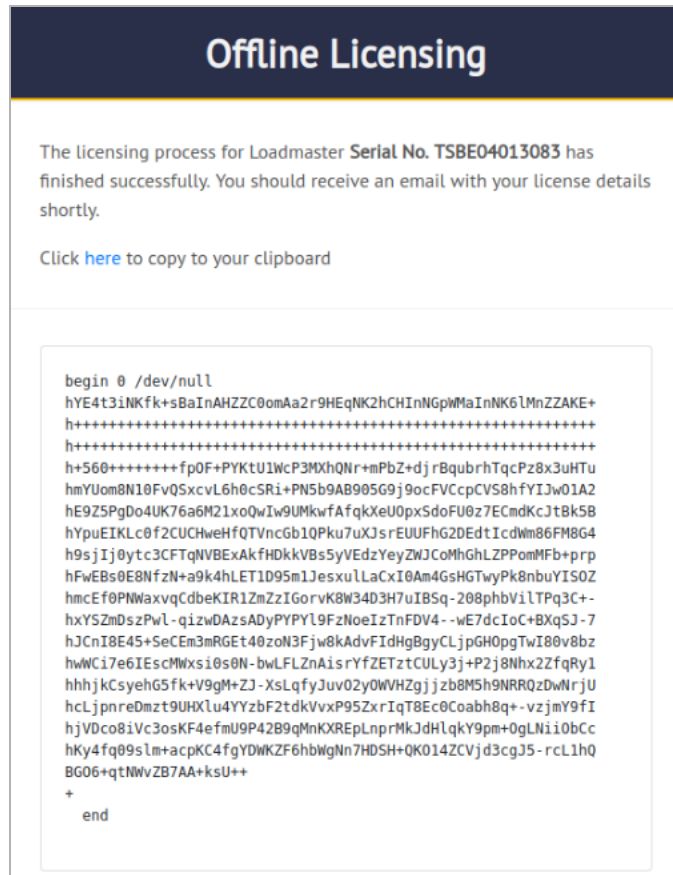

8. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.

9. Paste the license into the **License** text area and click **Apply License**.

10. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.1.2.2 Offline Licensing Through Accessing the Offline Licensing Page Directly (Hardware LoadMasters)

When you are in an isolated network, use a workstation with internet access within your organization and go to <https://alsi2.kemptechnologies.com/offLine.php>. Complete the form with the requested information, because in this case it will not be pre-populated.

Offline Licensing

Select your LoadMaster's platform type:

Hardware LoadMaster

Serial number:

LoadMaster access code:

Firmware version:

Choose firmware version...

Kemp ID:


Password:

GENERATE LICENSE

1. Select **Hardware LoadMaster** as the platform type.
2. Enter the **Serial number**. This is displayed on the LoadMaster home page.
3. Enter the **LoadMaster access code**. This is displayed on the LoadMaster **Offline Licensing** page.

2 License the LoadMaster

4. Select the **Firmware version**. This is displayed in the top-right of the LoadMaster WUI.
5. Enter the **Kemp ID** (email address used when registering the Kemp account).
6. Enter the **Password** of the Kemp account.
7. Click **GENERATE LICENSE**.

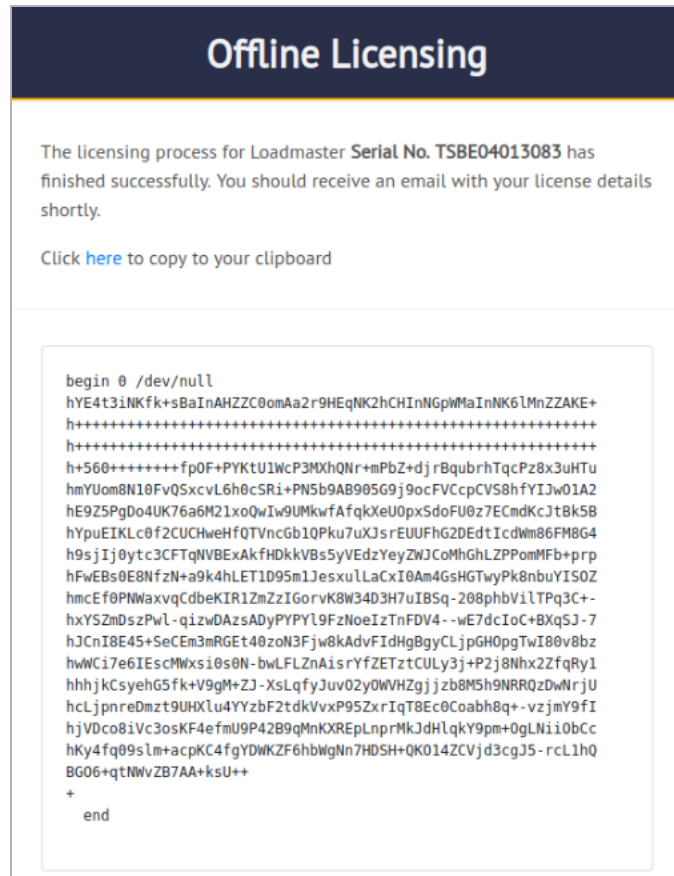

8. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.
9. Paste the license into the **License** text area and click **Apply License**.
10. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.2 License a Virtual LoadMaster

There are two methods to activate a license – online or offline.

Online licensing can be used when the LoadMaster has access to the internet. Offline licensing can be used when the LoadMaster does not have access to the internet.

Refer to the relevant section below depending on the licensing method you are using.

2.4.2.1 Online Licensing (Virtual LoadMasters)

Online licensing can be used when the LoadMaster has access to the internet.

A Kemp ID is required to license the LoadMaster. If a Kemp ID does not already exist, refer to the **Register for a Kemp ID** section. Instructions on how to license the LoadMaster are below.

To activate the LoadMaster license, perform the following steps:

1. In an internet browser, enter the IP address of the LoadMaster.

Ensure that **https://** is entered before the IP address.

2. A warning may appear regarding website security certificates. Click the continue/ignore option.

If this is the first time accessing the WUI, the End User License Agreement (EULA) may need to be accepted.

3. Ensure that **Online Licensing** is selected in the drop-down menu.

License Required To Continue

Please select License Method to proceed: Online Licensing ▼

Please enter your Kemp ID and password below to license this LoadMaster.

If you do not have a Kemp ID, please create one by visiting:
<https://kemptechnologies.com/kemp-id-registration>

Kemp ID:

Password: License Now

Order ID# (optional):

HTTP(S) Proxy (optional):

4. Enter the **Kemp ID**. This is the email address used during Kemp ID registration.
5. Enter the **Password** for the Kemp account.
6. If you are applying a temporary license, you are not required to enter an **Order ID**. If this is the first time you are licensing this LoadMaster and you are adding a permanent license, the Kemp **Order ID** is required.
7. If needed, a **HTTP(S) Proxy** server address can be entered, in the format **<ProxyServerAddress>:<Port>**.
8. Click **License Now**.
9. Click **OK**.

If you entered an **Order ID**, a screen appears that provides a list of available licenses for that order ID.

10. Select the license type that you want to apply to the LoadMaster.

If the license type you want is not displayed, contact your Kemp representative.

11. Click **Continue**.

The LoadMaster is now fully installed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.2.2 Offline Licensing

Before licensing the LoadMaster, a Kemp ID is required. If one does not already exist, follow the steps in the **Register for a Kemp ID** section to get one.

If the LoadMaster WUI can be accessed but the LoadMaster does not have access to the internet, a license can be obtained using the offline method. You can license using the offline method in the following ways:

- Through clicking the link in the LoadMaster
- Through accessing the Offline Licensing page directly

Refer to the relevant section below, depending on what method you use.

2.4.2.2.1 Offline Licensing Through Clicking the Link from the LoadMaster (Virtual LoadMasters)

To perform offline licensing on a Virtual LoadMaster through clicking the link from the LoadMaster, follow these steps:

1. In an internet browser, enter the IP address of the LoadMaster.

Ensure to enter **https://** before the IP address.

2. A warning may appear regarding website security certificates. Click the continue/ignore option. To stop this warning from appearing - download the root certificate of the LoadMaster by clicking **Download Root Cert** under the main menu after initially logging in.

If this is the first time accessing the WUI, the End User License Agreement (EULA) may need to be accepted.

License Required To Continue

Please select License Method to proceed: Offline Licensing ▾

Click [here](#) to obtain your license

Access Code: mmw14-jww5w-t9hpg-djhpg


License:
Apply License

3. Select **Offline Licensing** from the drop-down menu provided.
4. Click the **here** link provided on the page.

Offline Licensing

Licensing Trial LoadMaster

Order ID:



Kemp ID:

Password:

GENERATE LICENSE

5. Select your license action.

6. If you want to convert your deployed trial to a permanent license and you have a purchase order ID, enter the **Order ID**. There is no need to enter an **Order ID** if you are registering for a 30-day trial license.


Other drop-down options available must be selected based on what you are trying to do. Based on the selection, additional fields may be displayed or hidden.

7. Enter the **Kemp ID** (email address used when registering the Kemp account).

8. Enter the **Password** of the Kemp account.

If there are any parameters missing in the request that came from the LoadMaster, the complete form with all fields is displayed.

9. Click **GENERATE LICENSE**.

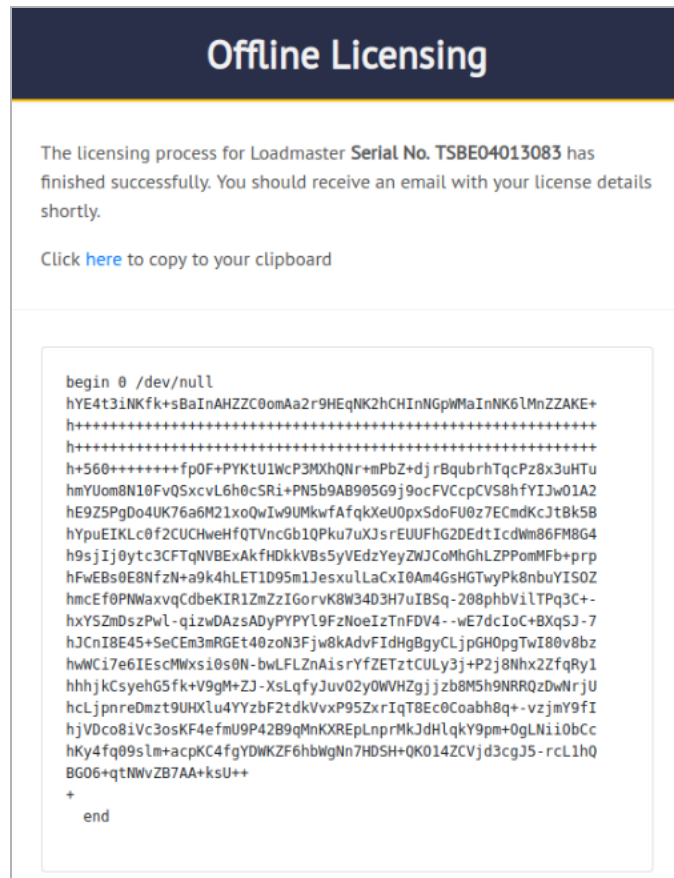

10. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.

11. Paste the license into the **License** text area and click **Apply License**.

12. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.2.2.2 Offline Licensing Through Accessing the Offline Licensing Page Directly (Virtual LoadMasters)

When offline licensing a Virtual LoadMaster through accessing the offline licensing page directly, the fields that appear on the offline licensing page vary depending on what action you are performing. The possible actions are:

2 License the LoadMaster

- First time licensing of a purchased LoadMaster
- Updating an existing license
- Licensing a trial LoadMaster
- Converting a trial license to a permanent license

Refer to the relevant section below depending on what licensing action you want to perform.

First Time Licensing of a Purchased Virtual LoadMaster

When you are in an isolated network, use a workstation with internet access within your organization and go to <https://alsi2.kemptechnologies.com/offLine.php>. Complete the form with the requested information, because in this case it will not be pre-populated.

Offline Licensing

Select your LoadMaster's platform type:

Virtual LoadMaster

Choose your license action:

License a new LoadMaster

Select your hypervisor:

Select hypervisor type...

LoadMaster access code:

Firmware version:

Choose firmware version...

Order ID:

Kemp ID:


Password:

GENERATE LICENSE

1. Select **Virtual LoadMaster** as the platform type.
2. Select **License a new LoadMaster** as the action.
3. Select the hypervisor type.
4. Enter the **LoadMaster access code**. This is displayed on the LoadMaster **Offline Licensing** page.
5. Select the **Firmware version**. This is displayed in the top-right of the LoadMaster WUI.
6. Enter the **Order ID**. This is provided by your Kemp representative.

2 License the LoadMaster

7. Enter the **Kemp ID** (email address used when registering the Kemp account).
8. Enter the **Password** of the Kemp account.
9. Click **GENERATE LICENSE**.

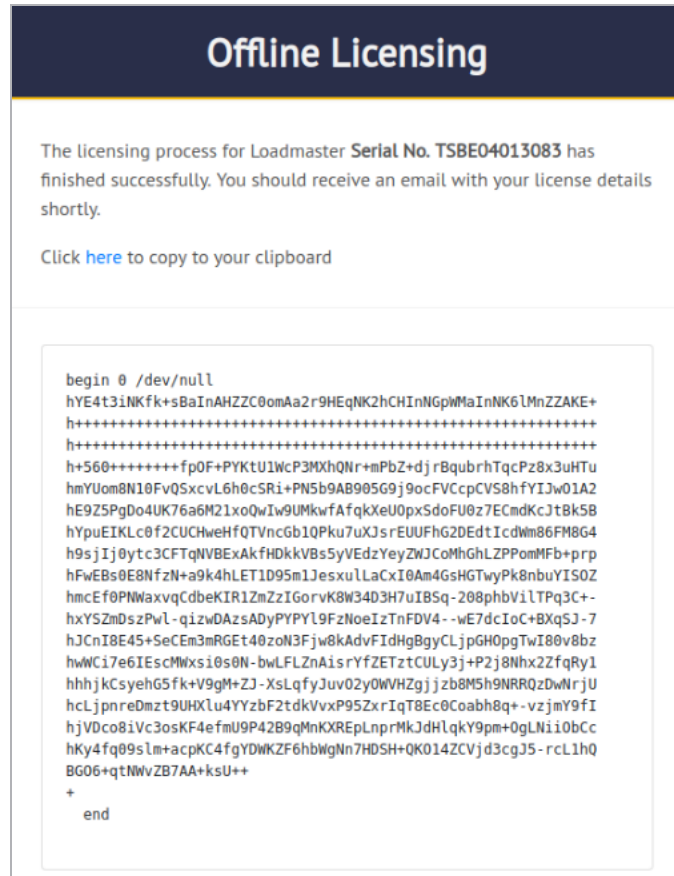

10. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.
11. Paste the license into the **License** text area and click **Apply License**.
12. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

Updating an Existing License

2 License the LoadMaster

When you are in an isolated network, use a workstation with internet access within your organization and go to <https://alsi2.kemptechnologies.com/offLine.php>. Complete the form with the requested information, because in this case it will not be pre-populated.

Offline Licensing

Select your LoadMaster's platform type:

Virtual LoadMaster

Choose your license action:

Update a license

Select your hypervisor:

Select hypervisor type...

Serial number:

LoadMaster access code:

Firmware version:

Choose firmware version...

Kemp ID:


Password:

GENERATE LICENSE

1. Select **Virtual LoadMaster** as the platform type.
2. Select **Update a license** as the action.
3. Select the hypervisor type.

2 License the LoadMaster

4. Enter the **Serial number** of the LoadMaster. This is displayed on the LoadMaster home page.
5. Enter the **LoadMaster access code**. This is displayed on the LoadMaster **Offline Licensing** page.
6. Select the **Firmware version**. This is displayed in the top-right of the LoadMaster WUI.
7. Enter the **Kemp ID** (email address used when registering the Kemp account).
8. Enter the **Password** of the Kemp account.
9. Click **GENERATE LICENSE**.

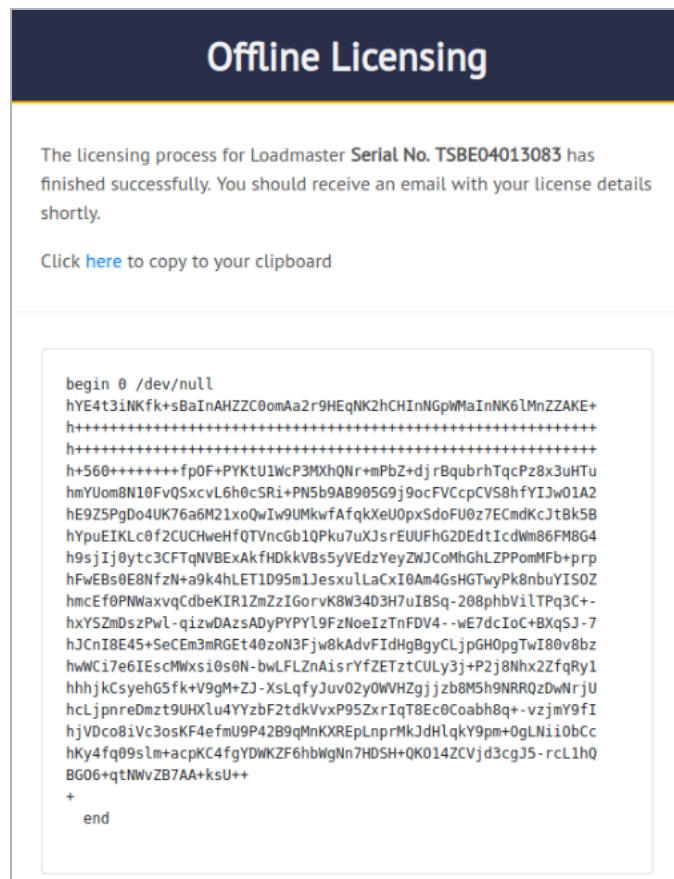


10. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.
11. Paste the license into the **License** text area and click **Apply License**.
12. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

Licensing a Trial LoadMaster


When you are in an isolated network, use a workstation with internet access within your organization and go to <https://alsi2.kemptechnologies.com/offLine.php>. Complete the form with the requested information, because in this case it will not be pre-populated.

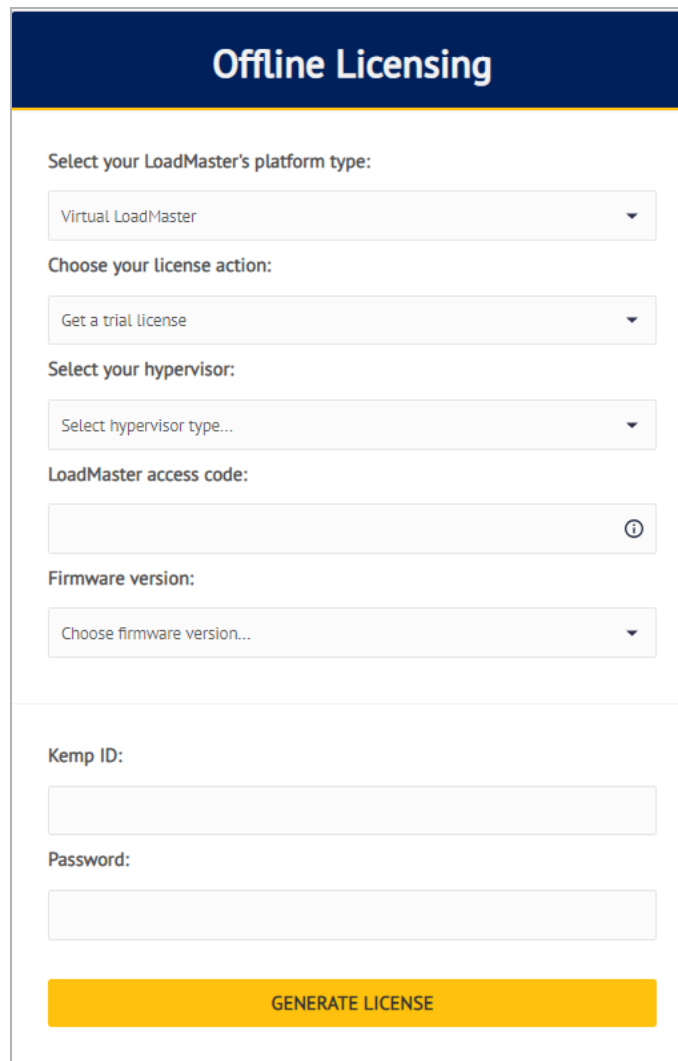

1. Select **Virtual LoadMaster** as the platform type.
2. Select **Get a trial license** as the action.

2 License the LoadMaster

3. Select your hypervisor type.
4. Enter the **LoadMaster access code**. This is displayed on the LoadMaster **Offline Licensing** page.
5. Select the **Firmware version**. This is displayed in the top-right of the LoadMaster WUI.
6. Enter the **Kemp ID** (email address used when registering the Kemp account).
7. Enter the **Password** of the Kemp account.
8. Click **GENERATE LICENSE**.

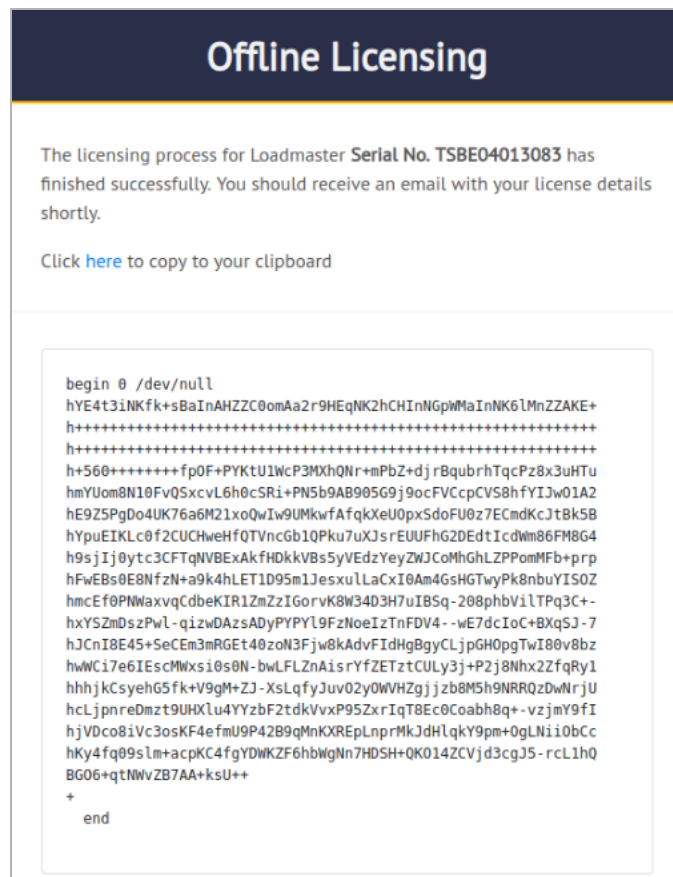

9. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.
10. Paste the license into the **License** text area and click **Apply License**.
11. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

Converting a Trial License to a Permanent License

When you are in an isolated network, use a workstation with internet access within your organization and go to <https://alsi2.kemptechnologies.com/offLine.php>. Complete the form with the requested information, because in this case it will not be pre-populated.

Offline Licensing

Select your LoadMaster's platform type:

Virtual LoadMaster

Choose your license action:

Upgrade a trial license

Select your hypervisor:

Select hypervisor type...

Serial number:

LoadMaster access code:

Firmware version:

Choose firmware version...

Order ID:

Kemp ID:


Password:

GENERATE LICENSE

1. Select **Virtual LoadMaster** as the platform type.

2 License the LoadMaster

2. Select **Upgrade a trial license** as the action.
3. Select the hypervisor type.
4. Enter the **Serial number** of the LoadMaster. This is displayed on the LoadMaster home page.
5. Enter the **LoadMaster access code**. This is displayed on the LoadMaster **Offline Licensing** page.
6. Select the **Firmware version**. This is displayed in the top-right of the LoadMaster WUI.
7. Enter the **Order ID**. This is provided by your Kemp representative.
8. Enter the **Kemp ID** (email address used when registering the Kemp account).
9. Enter the **Password** of the Kemp account.
10. Click **GENERATE LICENSE**.

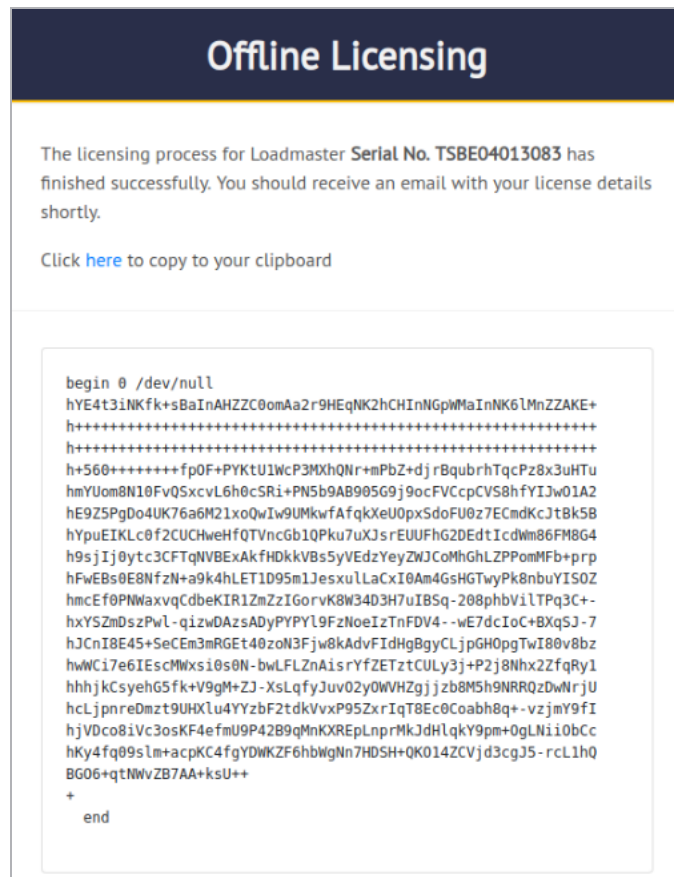

11. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.
12. Paste the license into the **License** text area and click **Apply License**.
13. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.3 License a Bare Metal LoadMaster

There are two methods to activate a license – online or offline.

Online licensing can be used when the LoadMaster has access to the internet. Offline licensing can be used when the LoadMaster does not have access to the internet.

Refer to the relevant section below depending on the licensing method you are using.

2.4.3.1 Online Licensing (Bare Metal LoadMasters)

Online licensing can be used when the LoadMaster has access to the internet.

A Kemp ID is required to license the LoadMaster. If a Kemp ID does not already exist, refer to the **Register for a Kemp ID** section. Instructions on how to license the LoadMaster are below.

To activate the LoadMaster license, perform the following steps:

1. In an internet browser, enter the IP address of the LoadMaster.

Ensure that **https://** is entered before the IP address.

2. A warning may appear regarding website security certificates. Click the continue/ignore option.

If this is the first time accessing the WUI, the End User License Agreement (EULA) may need to be accepted.

3. Ensure that **Online Licensing** is selected in the drop-down menu.

2 License the LoadMaster

License Required To Continue

Please select License Method to proceed: Online Licensing ▾

Please enter your Kemp ID and password below to license this LoadMaster.

If you do not have a Kemp ID, please create one by visiting:
<https://kemptechnologies.com/kemp-id-registration>

Kemp ID:

Password:

Order ID# (optional):

HTTP(S) Proxy (optional):

License Now

4. Enter the **Kemp ID**. This is the email address used during Kemp ID registration.
5. Enter the **Password** for the Kemp account.
6. If you are applying a temporary license, you are not required to enter an **Order ID**. If this is the first time you are licensing this LoadMaster and you are adding a permanent license, the Kemp **Order ID** is required.
7. If needed, a **HTTP(S) Proxy** server address can be entered, in the format **<ProxyServerAddress>:<Port>**.
8. Click **License Now**.
9. Click **OK**.

If you entered an **Order ID**, a screen appears that provides a list of available licenses for that order ID.

10. Select the license type that you want to apply to the LoadMaster.

If the license type you want is not displayed, contact your Kemp representative.

11. Click **Continue**.

The LoadMaster is now fully installed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to

configure the LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.3.2 Offline Licensing

Before licensing the LoadMaster, a Kemp ID is required. If one does not already exist, follow the steps in the **Register for a Kemp ID** section to get one.

If the LoadMaster WUI can be accessed but the LoadMaster does not have access to the internet, a license can be obtained using the offline method. You can license using the offline method in the following ways:

- Through clicking the link in the LoadMaster
- Through accessing the Offline Licensing page directly

Refer to the relevant section below, depending on what method you use.

2.4.3.2.1 Offline Licensing Through Clicking the Link from the LoadMaster (Bare Metal LoadMasters)

To perform offline licensing on a bare metal LoadMaster through clicking the link from the LoadMaster, follow these steps:

1. In an internet browser, enter the IP address of the LoadMaster.

Ensure to enter **https://** before the IP address.

2. A warning may appear regarding website security certificates. Click the continue/ignore option. To stop this warning from appearing - download the root certificate of the LoadMaster by clicking **Download Root Cert** under the main menu after initially logging in.

If this is the first time accessing the WUI, the End User License Agreement (EULA) may need to be accepted.

License Required To Continue

Please select License Method to proceed: Offline Licensing ▾

Click [here](#) to obtain your license

Access Code: mmw14-jww5w-t9hpg-djhpg

License:

Apply License

3. Select **Offline Licensing** from the drop-down menu provided.
4. Click the **here** link provided on the page.

Offline Licensing

Licensing LoadMaster Serial No. 1176973

Order ID:

i

Kemp ID:

Password:


GENERATE LICENSE

2 License the LoadMaster

5. If you want to convert your deployed trial to a permanent license and you have a purchase order ID, enter the **Order ID**. There is no need to enter an **Order ID** if you are registering for a 30-day trial license.
6. Enter the **Kemp ID** (email address used when registering the Kemp account).
7. Enter the **Password** of the Kemp account.

If there are any parameters missing in the request that came from the LoadMaster, the complete form with all fields is displayed.

8. Click **GENERATE LICENSE**.

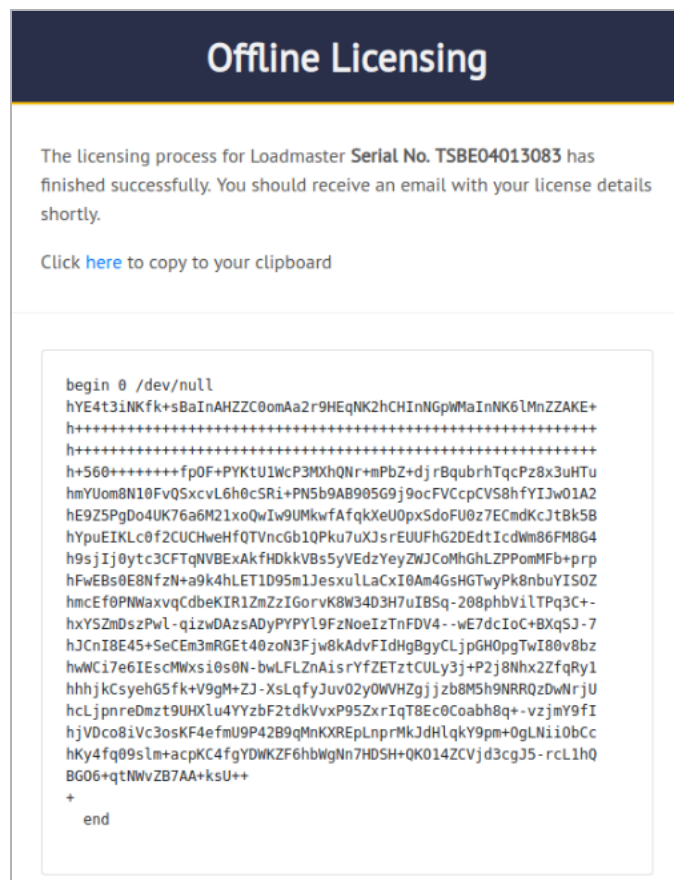

9. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.
10. Paste the license into the **License** text area and click **Apply License**.

11. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.3.2.2 Offline Licensing Through Accessing the Offline Licensing Page Directly (Bare Metal LoadMasters)

When offline licensing a bare metal LoadMaster through accessing the offline licensing page directly, the fields that appear on the offline licensing page vary depending on what action you are performing. The possible actions are:

- First time licensing of a purchased LoadMaster or converting a trial license to a permanent license
- Updating an existing license
- Licensing a trial LoadMaster

Refer to the relevant section below depending on what licensing action you want to perform.

First Time Licensing of a Purchased Virtual LoadMaster or Converting a Trial License to a Permanent License

When you are in an isolated network, use a workstation with internet access within your organization and go to <https://alsi2.kemptechnologies.com/offLine.php>. Complete the form with the requested information, because in this case it will not be pre-populated.

Offline Licensing

Select your LoadMaster's platform type:

Bare-metal LoadMaster

Choose your license action:

License a new LoadMaster

Serial number:

LoadMaster access code:

Firmware version:

Choose firmware version...

Order ID:

Kemp ID:


Password:

GENERATE LICENSE

1. Select **Bare-metal LoadMaster** as the platform type.
2. Select **License a new LoadMaster** or **Upgrade a trial license** as the action.
3. Enter the **LoadMaster access code**. This is displayed on the LoadMaster **Offline Licensing** page.
4. Select the **Firmware version**. This is displayed in the top-right of the LoadMaster WUI.
5. Enter the **Order ID**. This is provided by your Kemp representative.
6. Enter the **Kemp ID** (email address used when registering the Kemp account).

2 License the LoadMaster

7. Enter the **Password** of the Kemp account.
8. Click **GENERATE LICENSE**.

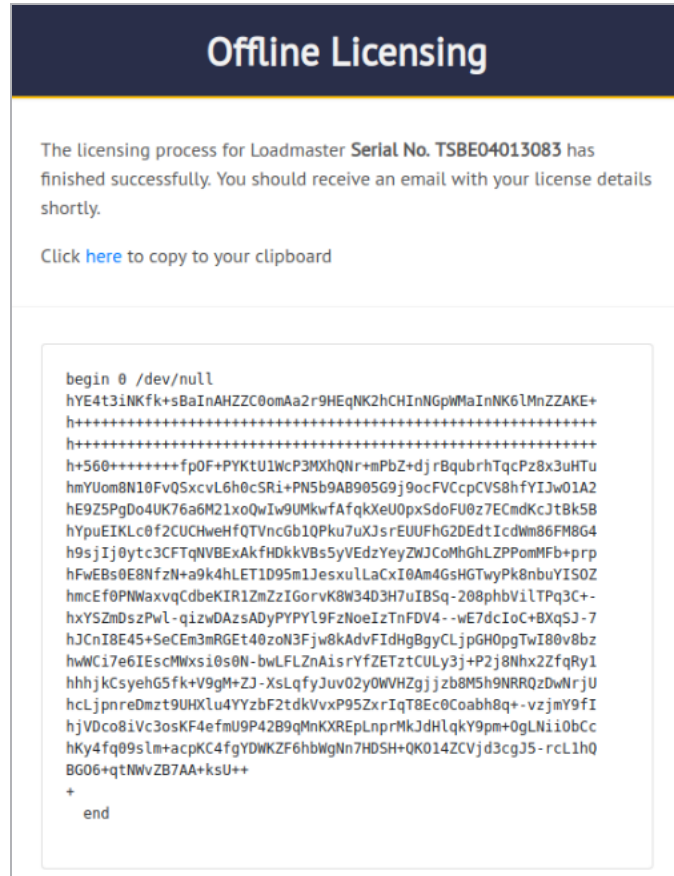


9. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.
10. Paste the license into the **License** text area and click **Apply License**.
11. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

Updating an Existing License

2 License the LoadMaster

When you are in an isolated network, use a workstation with internet access within your organization and go to <https://alsi2.kemptechnologies.com/offLine.php>. Complete the form with the requested information, because in this case it will not be pre-populated.

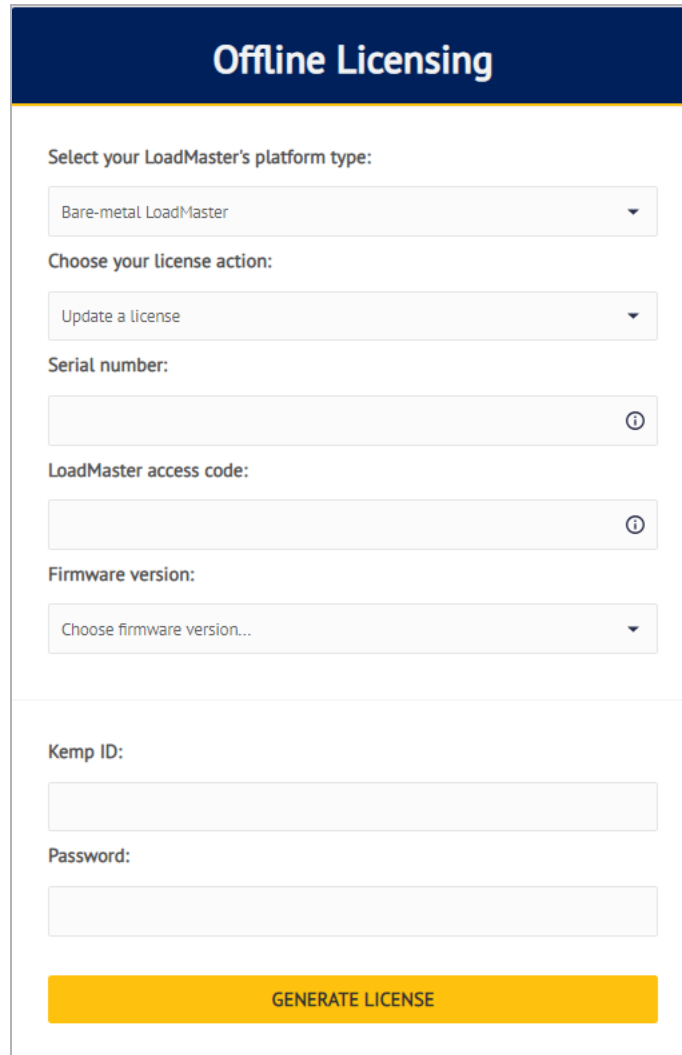


The screenshot shows a web form titled "Offline Licensing" with a dark blue header. The form is divided into two main sections. The top section contains four fields: "Select your LoadMaster's platform type:" with a dropdown menu showing "Bare-metal LoadMaster"; "Choose your license action:" with a dropdown menu showing "Update a license"; "Serial number:" with a text input field and an information icon; and "LoadMaster access code:" with a text input field and an information icon. The bottom section contains two fields: "Firmware version:" with a dropdown menu showing "Choose firmware version...", "Kemp ID:" with a text input field, and "Password:" with a text input field. At the bottom of the form is a large yellow button labeled "GENERATE LICENSE".

1. Select **Bare-metal LoadMaster** as the platform type.
2. Select **Update a license** as the action.
3. Enter the **Serial number** of the LoadMaster. This is displayed on the LoadMaster home page.
4. Enter the **LoadMaster access code**. This is displayed on the LoadMaster **Offline Licensing** page.
5. Select the **Firmware version**. This is displayed in the top-right of the LoadMaster WUI.

2 License the LoadMaster

6. Enter the **Kemp ID** (email address used when registering the Kemp account).
7. Enter the **Password** of the Kemp account.
8. Click **GENERATE LICENSE**.

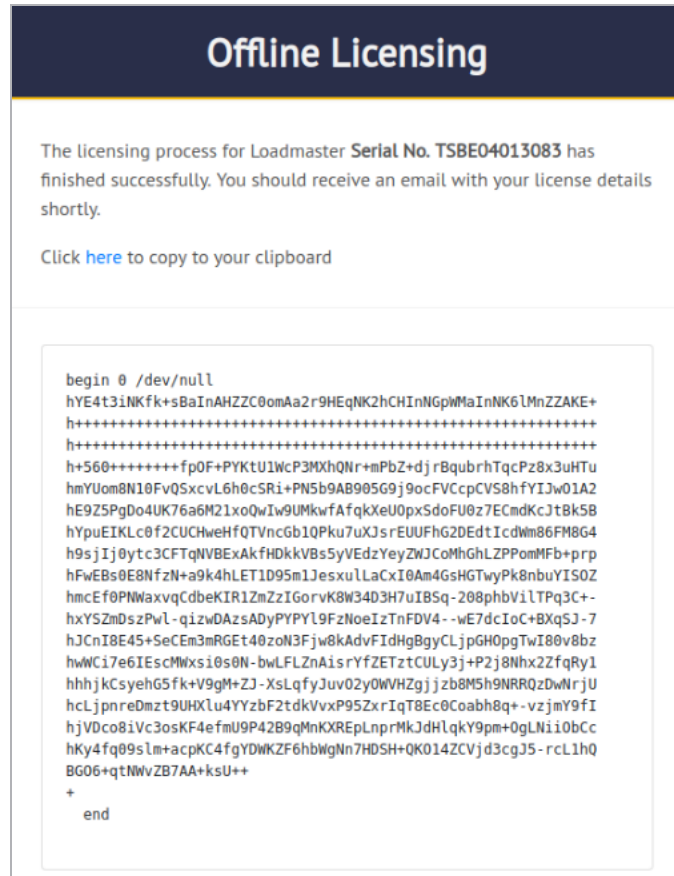

9. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.
10. Paste the license into the **License** text area and click **Apply License**.
11. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

Licensing a Trial LoadMaster

2 License the LoadMaster

When you are in an isolated network, use a workstation with internet access within your organization and go to <https://alsi2.kemptechnologies.com/offLine.php>. Complete the form with the requested information, because in this case it will not be pre-populated.

Offline Licensing

Select your LoadMaster's platform type:

Bare-metal LoadMaster

Choose your license action:

Get a trial license

Serial number:

LoadMaster access code:

Firmware version:

Choose firmware version...

Kemp ID:


Password:

GENERATE LICENSE

1. Select **Bare-metal LoadMaster** as the platform type.
2. Select **Get a trial license** as the action.
3. Enter the LoadMaster **Serial number**. You can find the serial number on the physical device label or on the LoadMaster home page.
4. Enter the **LoadMaster access code**. This is displayed on the LoadMaster **Offline Licensing** page.
5. Select the **Firmware version**. This is displayed in the top-right of the LoadMaster WUI.

2 License the LoadMaster

6. Enter the **Kemp ID** (email address used when registering the Kemp account).
7. Enter the **Password** of the Kemp account.
8. Click **GENERATE LICENSE**.

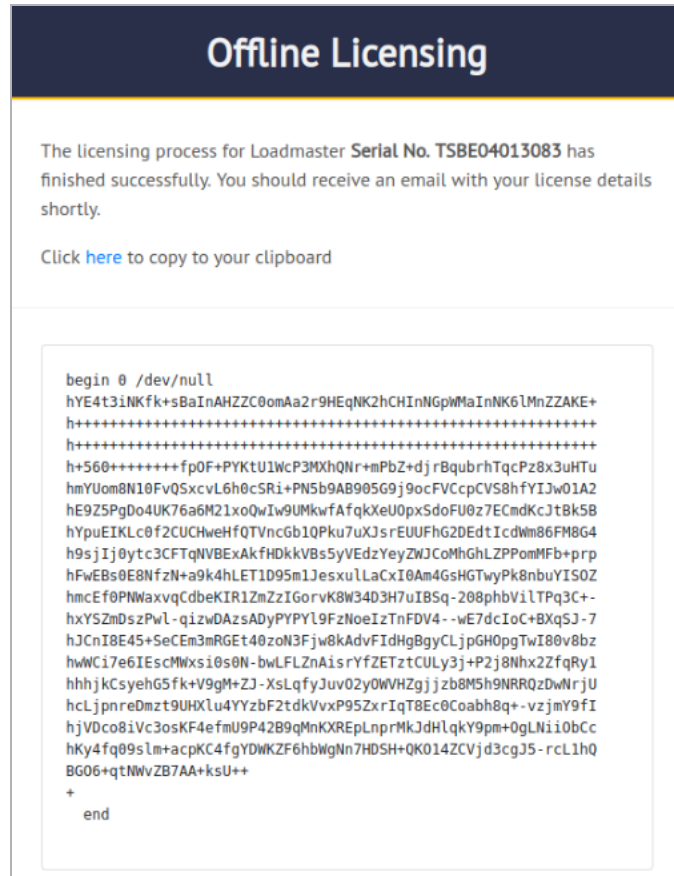

9. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.
10. Paste the license into the **License** text area and click **Apply License**.
11. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.4 License a Cloud Bring Your Own License (BYOL) LoadMaster

There are two methods to activate a license – online or offline.

Online licensing can be used when the LoadMaster has access to the internet. Offline licensing can be used when the LoadMaster does not have access to the internet.

Refer to the relevant section below depending on the licensing method you are using.

2.4.4.1 Online Licensing (Cloud BYOL LoadMasters)

Online licensing can be used when the LoadMaster has access to the internet.

A Kemp ID is required to license the LoadMaster. If a Kemp ID does not already exist, refer to the **Register for a Kemp ID** section. Instructions on how to license the LoadMaster are below.

To activate the LoadMaster license, perform the following steps:

1. In an internet browser, enter the IP address of the LoadMaster.

Ensure that **https://** is entered before the IP address.

2. A warning may appear regarding website security certificates. Click the continue/ignore option.

If this is the first time accessing the WUI, the End User License Agreement (EULA) may need to be accepted.

3. Ensure that **Online Licensing** is selected in the drop-down menu.

License Required To Continue

Please select License Method to proceed: Online Licensing ▼

Please enter your Kemp ID and password below to license this LoadMaster.

If you do not have a Kemp ID, please create one by visiting:
<https://kemptechnologies.com/kemp-id-registration>

Kemp ID:

Password:

Order ID# (optional):

HTTP(S) Proxy (optional):

License Now

4. Enter the **Kemp ID**. This is the email address used during Kemp ID registration.
5. Enter the **Password** for the Kemp account.
6. If you are applying a temporary license, you are not required to enter an **Order ID**. If this is the first time you are licensing this LoadMaster and you are adding a permanent license, the Kemp **Order ID** is required.
7. If needed, a **HTTP(S) Proxy** server address can be entered, in the format **<ProxyServerAddress>:<Port>**.
8. Click **License Now**.
9. Click **OK**.

If you entered an **Order ID**, a screen appears that provides a list of available licenses for that order ID.

10. Select the license type that you want to apply to the LoadMaster.

If the license type you want is not displayed, contact your Kemp representative.

11. Click **Continue**.

The LoadMaster is now fully installed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.4.2 Offline Licensing

Before licensing the LoadMaster, a Kemp ID is required. If one does not already exist, follow the steps in the **Register for a Kemp ID** section to get one.

If the LoadMaster WUI can be accessed but the LoadMaster does not have access to the internet, a license can be obtained using the offline method. You can license using the offline method in the following ways:

- Through clicking the link in the LoadMaster
- Through accessing the Offline Licensing page directly

Refer to the relevant section below, depending on what method you use.

2.4.4.2.1 Offline Licensing Through Clicking the Link from the LoadMaster (Cloud BYOL LoadMasters)


To perform offline licensing on a Cloud BYOL LoadMaster through clicking the link from the LoadMaster, follow these steps:

1. In an internet browser, enter the IP address of the LoadMaster.

Ensure to enter **https://** before the IP address.

2. A warning may appear regarding website security certificates. Click the continue/ignore option. To stop this warning from appearing - download the root certificate of the LoadMaster by clicking **Download Root Cert** under the main menu after initially logging in.

If this is the first time accessing the WUI, the End User License Agreement (EULA) may need to be accepted.

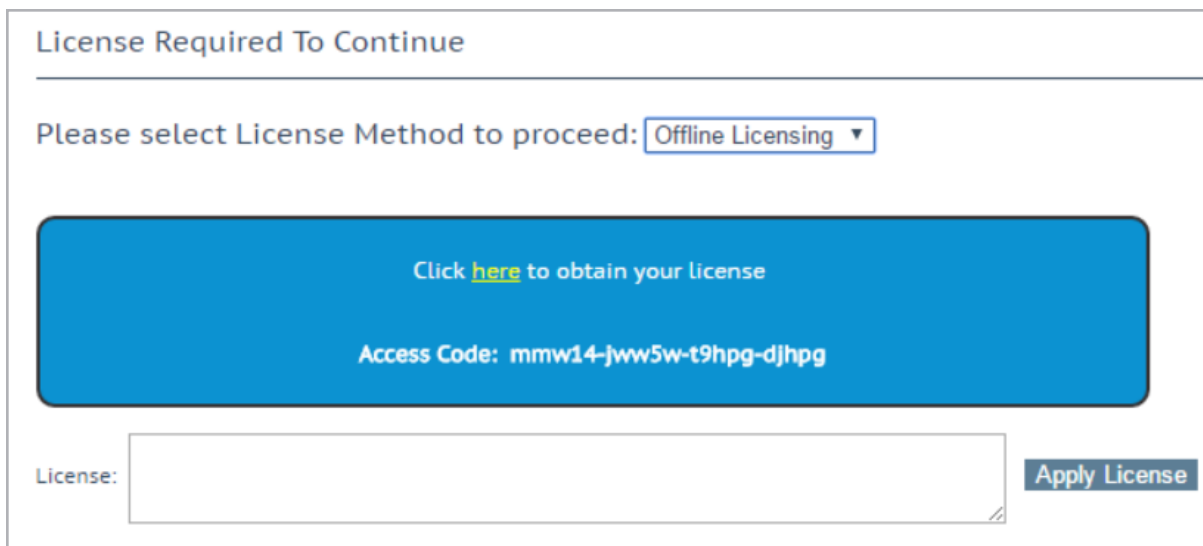

License Required To Continue

Please select License Method to proceed: Offline Licensing ▼

Click [here](#) to obtain your license

Access Code: mmw14-jww5w-t9hpg-djhpg

License:

Apply License

3. Select **Offline Licensing** from the drop-down menu provided.
4. Click the **here** link provided on the page.

Offline Licensing

Licensing LoadMaster Serial No. 1176487

Kemp ID:

Password:

GENERATE LICENSE

5. If you want to convert your deployed trial to a permanent license and you have a purchase order ID, enter the **Order ID**. There is no need to enter an **Order ID** if you are registering for a 30-day trial license.

6. Enter the **Kemp ID** (email address used when registering the Kemp account).

7. Enter the **Password** of the Kemp account.

If there are any parameters missing in the request that came from the LoadMaster, the complete form with all fields is displayed.

8. Click **GENERATE LICENSE**.

Offline Licensing

The licensing process for Loadmaster **Serial No. TSBE04013083** has finished successfully. You should receive an email with your license details shortly.

Click [here](#) to copy to your clipboard

```
begin 0 /dev/null
hYE4t3iNKfk+sBaInAHZZC0omAa2r9HEqNK2hCHInNGpWmaInNK6lMnZZAKE+
h+++++
h+560+++++fp0F+PYKtU1WcP3MXhQNr+mPbZ+djrBqubrhtQcPz8x3uHTu
hmYUom8N10FvQ5xcvL6h0cSRi+PN5b9AB905G9j9ocFVCcpCVS8hfYIjW01A2
hE9Z5PgDo4UK76a6M2lXoQwIw9UMkwfAfqkXeU0pxSdoFU0z7ECmdKcJtBk5B
hYpuEIKLc0f2CUChweHfQTVncGb1QPku7uXJsreUUFhG2DEdtIcdWm86FM8G4
h9sjIj0ytc3CFTqNVBExAkfHdkkVBs5yVEdzYeyZWJCoMhGhLZPPomMFb+prp
hFwEBs0E8NfzN+a9k4hLET1D95m1JesxulLaCxI0Am4GsHGTWypk8nbuYIS0Z
hmcEf0PNWaxvqCdbEKIR1ZmZzIGorvK8W34D3H7uIB5q-208phbVilTPq3C+-
hxYSZm0szPwL-qizw0AzsADyPYPYl9FzNoeIzTnFDV4--wE7dcIoC+BXqSJ-7
hJCNt8E45+SeCEm3mRGEt40zoN3Fjw8kAdvFIIdHgBgYCLjPGH0pgTwI80v8bz
hwWCi7e6IEscMwxsioS0N-bwLFLZnAisrYfZETztCULy3j+P2j8Nhx2ZfqRy1
hhhjkCsyeH5fk+V9gm+ZJ-XsLqfyJuv02y0WVHZgjzb8M5h9NRRQzDwNrjU
hCLjpnreDmzt9UHXlu4YYzbF2tdkVvxP95ZxrIqT8Ec0Coabh8q+-vzjmY9fI
hjVDco8iVc3osKF4efmU9P42B9qMnKXREpLnprMkJdHlqkY9pm+0gLnii0bCc
hKy4fq09sLm+acpKC4fgYDwKZF6hbWgNn7HDSH+0K014ZCVjd3cgJ5-rcL1hQ
BG06+qtNWvZB7AA+ksU++
+
end
```

9. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.

10. Paste the license into the **License** text area and click **Apply License**.

11. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.4.2.2 Offline Licensing Through Accessing the Offline Licensing Page Directly (Cloud BYOL LoadMasters)

When you are in an isolated network, use a workstation with internet access within your organization and go to <https://alsi2.kemptechnologies.com/offLine.php>. Complete the form with the

requested information, because in this case it will not be pre-populated.

Offline Licensing

Select your LoadMaster's platform type:

Cloud LoadMaster

Choose your LoadMaster license:

AWS BYOL

Do you have a purchase order?

Yes

Do you have a serial number?

Yes

Serial number:

LoadMaster access code:

Firmware version:

Choose firmware version...

Order ID:

Kemp ID:


Password:

GENERATE LICENSE

1. Select **Cloud LoadMaster** as the platform type.
2. Select your BYOL LoadMaster license type.
3. Specify if you have a purchase order. If you do, two additional fields appear (**Do you have a serial number?** and **Order ID**).

2 License the LoadMaster

4. If the **Do you have a serial number?** field is shown, select the relevant option. If you select **Yes**, an additional field to enter the serial number appears.
5. Enter the **Serial number**, if relevant. This is displayed on the LoadMaster home page.
6. Enter the **LoadMaster access code**. This is displayed on the LoadMaster **Offline Licensing** page.
7. Select the **Firmware version**. This is displayed in the top-right of the LoadMaster WUI.
8. Enter the **Order ID**, if relevant.
9. Enter the **Kemp ID** (email address used when registering the Kemp account).
10. Enter the **Password** of the Kemp account.
11. Click **GENERATE LICENSE**.

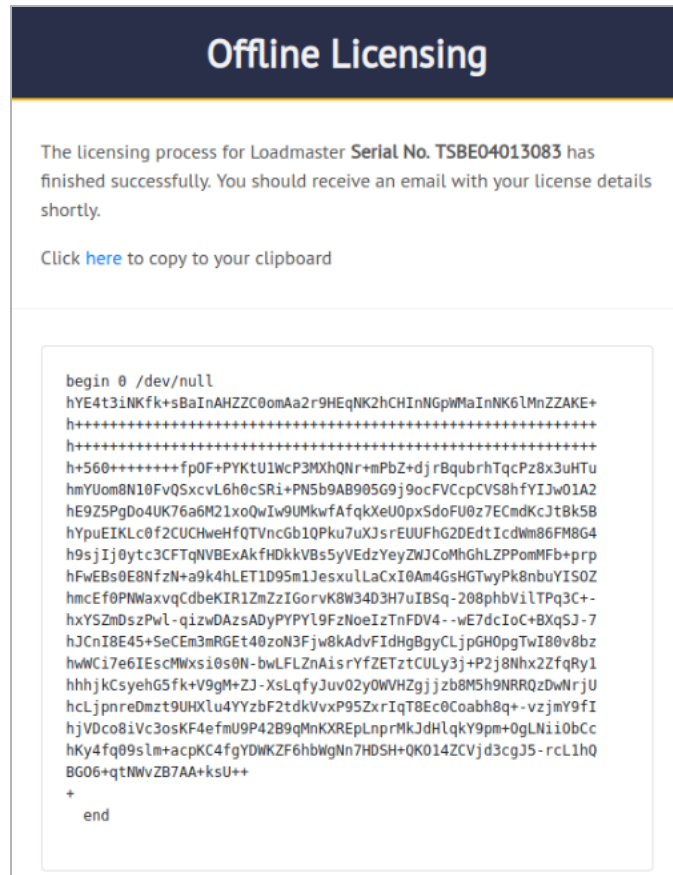

12. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.

13. Paste the license into the **License** text area and click **Apply License**.
14. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.5 License a Cloud Pay As You Go (PAYG) LoadMaster

There are two methods to activate a license – online or offline.

Online licensing can be used when the LoadMaster has access to the internet. Offline licensing can be used when the LoadMaster does not have access to the internet.

Refer to the relevant section below depending on the licensing method you are using.

2.4.5.1 Online Licensing (Cloud PAYG LoadMasters)

Online licensing can be used when the LoadMaster has access to the internet.

A Kemp ID is required to license the LoadMaster. If a Kemp ID does not already exist, refer to the **Register for a Kemp ID** section. Instructions on how to license the LoadMaster are below.

To activate the LoadMaster license, perform the following steps:

1. In an internet browser, enter the IP address of the LoadMaster.


Ensure that **https://** is entered before the IP address.

2. A warning may appear regarding website security certificates. Click the continue/ignore option.

If this is the first time accessing the WUI, the End User License Agreement (EULA) may need to be accepted.

3. Ensure that **Online Licensing** is selected in the drop-down menu.

2 License the LoadMaster

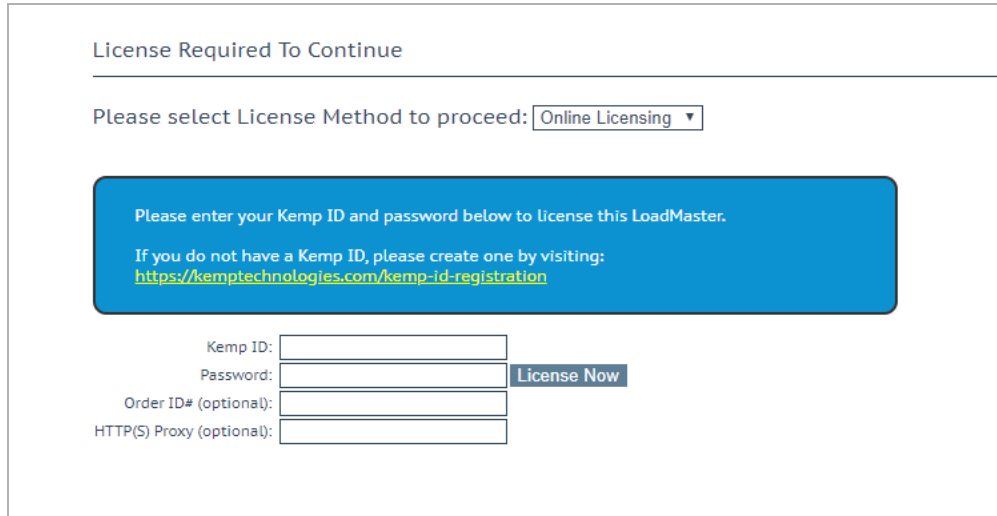

4. Enter the **Kemp ID**. This is the email address used during Kemp ID registration.
5. Enter the **Password** for the Kemp account.
6. There is no need to enter an **Order ID**.
7. If needed, a **HTTP(S) Proxy** server address can be entered, in the format **<ProxyServerAddress>:<Port>**.
8. Click **License Now**.
9. Click **OK**.

The LoadMaster is now fully installed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.5.2 Offline Licensing

Before licensing the LoadMaster, a Kemp ID is required. If one does not already exist, follow the steps in the **Register for a Kemp ID** section to get one.

If the LoadMaster WUI can be accessed but the LoadMaster does not have access to the internet, a license can be obtained using the offline method. You can license using the offline method in the following ways:

2 License the LoadMaster

- Through clicking the link in the LoadMaster
- Through accessing the Offline Licensing page directly

Refer to the relevant section below, depending on what method you use.

2.4.5.2.1 Offline Licensing Through Clicking the Link from the LoadMaster (Cloud PAYG LoadMasters)


To perform offline licensing on a cloud PAYG LoadMaster through clicking the link from the LoadMaster, follow these steps:

1. In an internet browser, enter the IP address of the LoadMaster.

Ensure to enter **https://** before the IP address.

2. A warning may appear regarding website security certificates. Click the continue/ignore option. To stop this warning from appearing - download the root certificate of the LoadMaster by clicking **Download Root Cert** under the main menu after initially logging in.

If this is the first time accessing the WUI, the End User License Agreement (EULA) may need to be accepted.

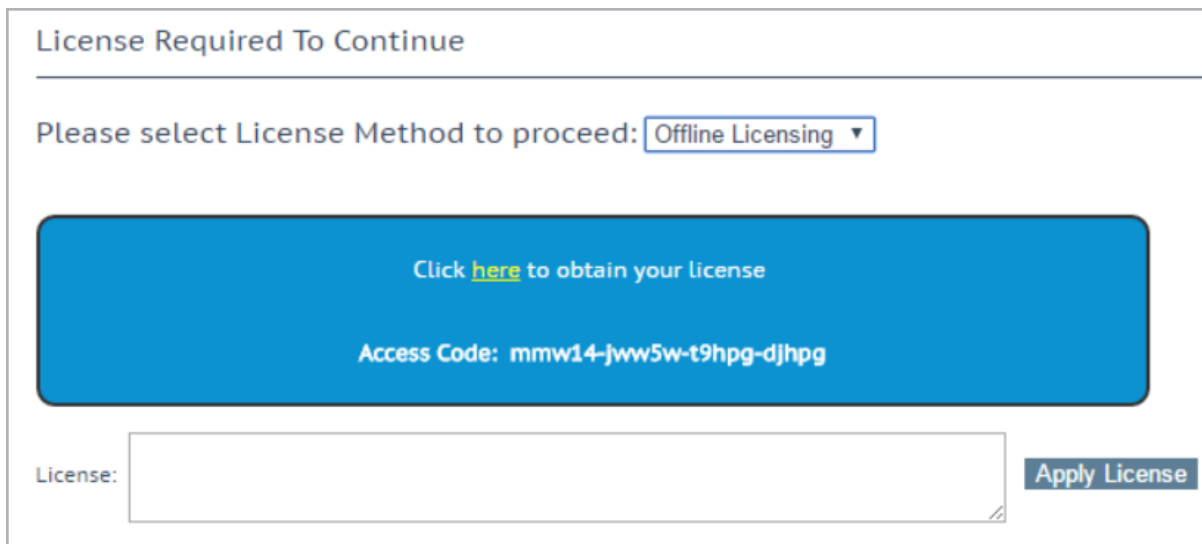

License Required To Continue

Please select License Method to proceed: Offline Licensing ▼

Click [here](#) to obtain your license

Access Code: mmw14-jww5w-t9hpg-djhpg

License:

Apply License

3. Select **Offline Licensing** from the drop-down menu provided.
4. Click the **here** link provided on the page.

Offline Licensing

Licensing LoadMaster Serial No. 1176973

Order ID:

Kemp ID:

Password:


GENERATE LICENSE

5. Enter the **Kemp ID** (email address used when registering the Kemp account).

6. Enter the **Password** of the Kemp account.

If there are any parameters missing in the request that came from the LoadMaster, the complete form with all fields is displayed.

7. Click **GENERATE LICENSE**.

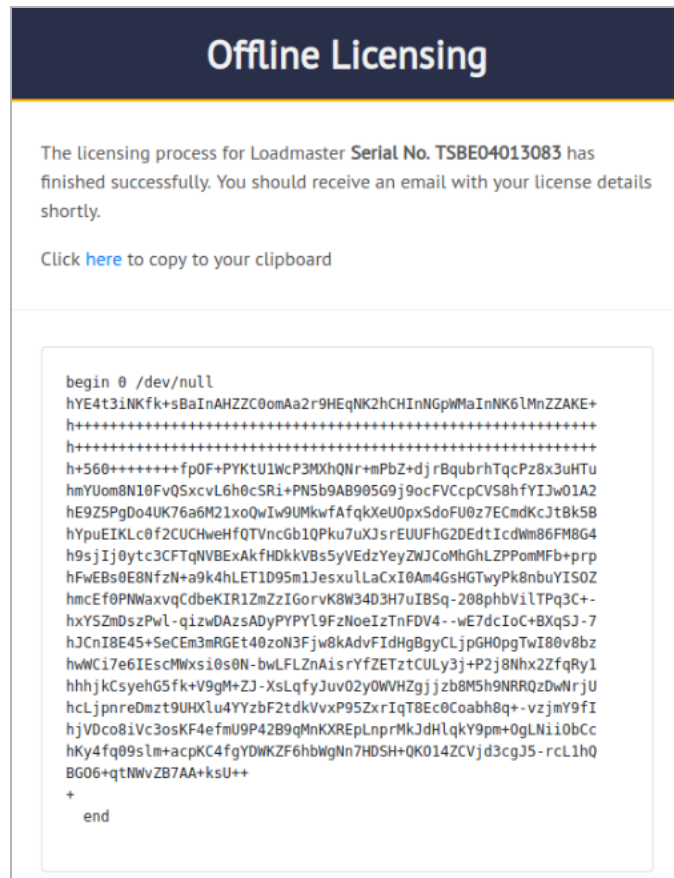

8. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.


9. Paste the license into the **License** text area and click **Apply License**.

10. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

2.4.5.2.2 Offline Licensing Through Accessing the Offline Licensing Page Directly (Cloud PAYG LoadMasters)

When you are in an isolated network, use a workstation with internet access within your organization and go to <https://alsi2.kemptechnologies.com/offLine.php>. Complete the form with the requested information, because in this case it will not be pre-populated.

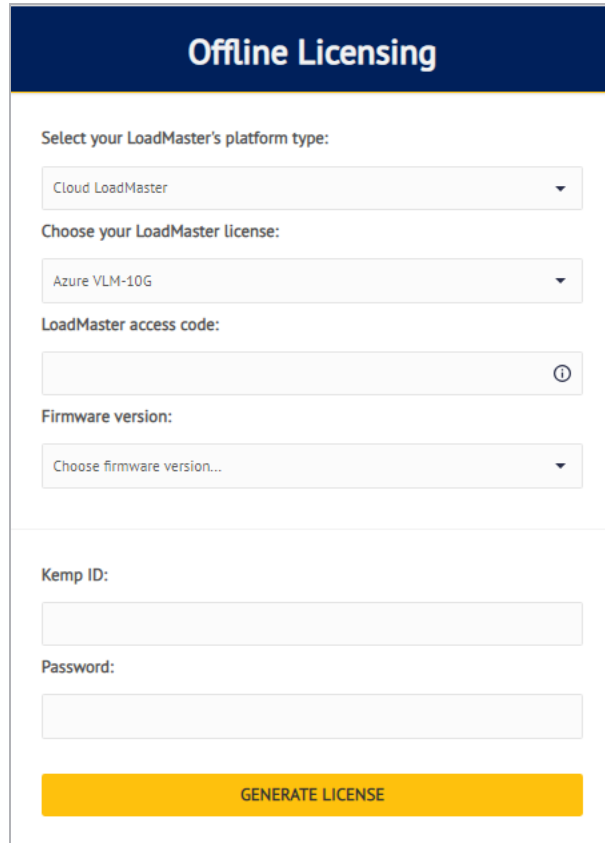

The form is titled "Offline Licensing" in a dark blue header. It contains several input fields and dropdown menus. The first section has a label "Select your LoadMaster's platform type:" followed by a dropdown menu showing "Cloud LoadMaster". Below this is a label "Choose your LoadMaster license:" followed by a dropdown menu showing "Azure VLM-10G". The next section has a label "LoadMaster access code:" followed by a text input field with an information icon. Below that is a label "Firmware version:" followed by a dropdown menu showing "Choose firmware version...". The final section has a label "Kemp ID:" followed by a text input field, and a label "Password:" followed by a text input field. At the bottom is a large yellow button labeled "GENERATE LICENSE".

1. Select **Cloud LoadMaster** as the platform type.
2. Select your PAYG LoadMaster model.
3. Enter the **LoadMaster access code**. This is displayed on the LoadMaster **Offline Licensing** page.
4. Select the **Firmware version**. This is displayed in the top-right of the LoadMaster WUI.
5. Enter the **Kemp ID** (email address used when registering the Kemp account).
6. Enter the **Password** of the Kemp account.
7. Click **GENERATE LICENSE**.

Offline Licensing

The licensing process for Loadmaster **Serial No. TSBE04013083** has finished successfully. You should receive an email with your license details shortly.

Click [here](#) to copy to your clipboard

```

begin 0 /dev/null
hYE4t3iNKfk+sBaInAHZZC0omAa2r9HEqNK2hCHInNGpWmaInNK6lMnZZAKE+
h+++++
h+560+++++fp0F+PYKtU1WcP3MXhQNr+mPbZ+djrBqubrhtqcPz8x3uHTu
hmYUom8N10FvQ5xcvL6h0cSRi+PN5b9AB905G9j9ocFVCcpCVS8hfYIjw01A2
hE9Z5PgDo4UK76a6M21xoQwIw9UMkwfAfqkXeU0pxSdoFU0z7ECmdKcJtBk5B
hYpuEIKLc0f2CUChweHfQTVncGb1QPku7uXJsreUUFhG2DEdtIcdWm86FM8G4
h9sjIj0ytc3CFTqNVBExAkfHDkkVBs5yVEdzYeyZWJCoMhGhLZPPomMFb+prp
hFwEBs0E8NfzN+a9k4hLET1D95m1JesxulLaCxI0Am4GsHGTWypk8nbuYIS0Z
hmcEf0PNWaxvqCdbeKIR1ZmZzIGorvK8W34D3H7uIB5q-208phbVilTPq3C+-
hxYSZmDszPwL-qizw0AzsADyPYPYl9FzNoeIzTnFDV4--wE7dcIoC+BXqSJ-7
hJcNt8E45+SeCEm3mRGEt40zoN3Fjw8kAdvFIIdHgBgyCLjPGH0pgTwI80v8bz
hwWCi7e6IEscMwxi0s0N-bwLFLZnAisrYfZETztCULy3j+P2j8Nhx2ZfqRy1
hhhjkCsyeH5fk+V9qM+ZJ-XsLqfyJuv02y0WVHZgjzb8M5h9NRRQzDwNrrJU
hCLjpnreDmzt9UHXlu4YYzbF2tdkVvxP95ZxrIqT8Ec0Coabh8q+-vzjmY9fI
hjVDco8iVc3osKF4efmU9P42B9qMnKXRepLnprMkJdHlqkY9pm+0gLnii0bCc
hKy4fq09sIm+acpKC4fgYDwKZF6hbWgNn7HDSH+0K014ZCVjd3cgJ5-rcL1hQ
BG06+qtNWvZB7AA+ksU++
+
end

```

8. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.

9. Paste the license into the **License** text area and click **Apply License**.

10. Click **OK**.

The Kemp LoadMaster is now licensed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license. For further details on how to configure the Kemp LoadMaster, refer to the various documents available on the Kemp Documentation page: <https://kemptechnologies.com/documentation>.

3 Troubleshooting

If licensing fails for any reason, various debug checks appear on both the WUI and the console (Command Line Interface). These options can be used to troubleshoot problems that may occur when trying to license the LoadMaster.

For more information, refer to the relevant section below.

3.1 WUI Troubleshooting Checks


If you try to license and there are any issues, a number of checks are performed automatically and the results and associated error message are displayed.



These checks perform the following tasks:

- Ping Default Gateway
- Ping DNS Servers
- Ping Licensing Server

3.2 Console Troubleshooting Options

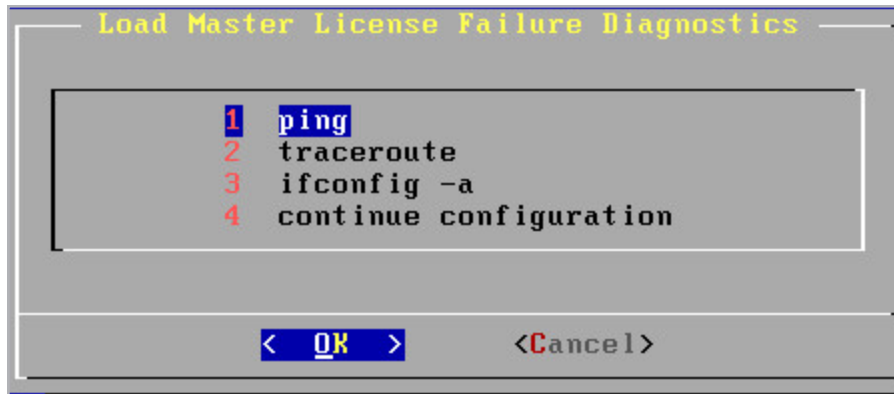

If licensing fails for any reason, a diagnostics menu will appear when the LoadMaster console is accessed. This menu has the following options:

- **Ping:** Performs a ping on the specified host.
- **Traceroute:** Performs a traceroute of the specific host.
- **Ifconfig:** Displays raw ifconfig output.
- **Continue configuration:** Use this option to reconfigure the address details of the LoadMaster.

Steps to access the console will vary depending on your environment.

4 Temporary and Permanent Licenses

A Temporary License can be replaced by a Permanent License that can be obtained by contacting a Kemp partner, by [Contacting our Sales team](#) or by using the Upgrade option in the LoadMaster.

After contacting Kemp Sales to upgrade the license, use the **Update License** screen in the LoadMaster WUI to update to a permanent license. Kemp recommends rebooting the LoadMaster after updating the license to ensure all features get licensed appropriately.

A Temporary License has a time limit of 30 days. A temporary license cannot be added to a LoadMaster that currently has a temporary license in place.

Pay As You Go (PAYG) LoadMaster instances in Azure and AWS receive permanent licenses by default.

5 Updating a License

You would use the **Update License** function if your license has changed, for example if:

- You have renewed support
- You have renewed your license
- You have changed your license type

Before updating the license in the LoadMaster, you must either contact your Kemp representative, or use the **Upgrade** option. After you have contacted Kemp or used the upgrade option, there are two ways to update a license – using the **Online** method and using the **Offline** method. Refer to the sections below to find out details about the screens for each method.

Go to the **System Configuration > System Administration > Update License** option in the main menu of the LoadMaster WUI. There are two ways in which you can update the license – using the online method or the offline method. A drop-down list is provided on this page to select the chosen method.

Follow the steps in the relevant section below.


A Kemp ID is required to upgrade a license.

If you do not already have one, refer to the **Register for a Kemp ID** section for instructions on how to register for a Kemp ID.

If you have a Kemp ID but cannot remember the password, follow the instruction in the **Reset the Kemp ID Password** section to reset the password.

To use a different Kemp ID for this LoadMaster, ensure the new Kemp ID has been set up and validated and then enter the new Kemp ID when updating the license. If the Kemp ID of the LoadMaster is changed, an email will be sent to the old Kemp ID, the new Kemp ID and to Kemp.


5.1 Update using the Online Licensing Method

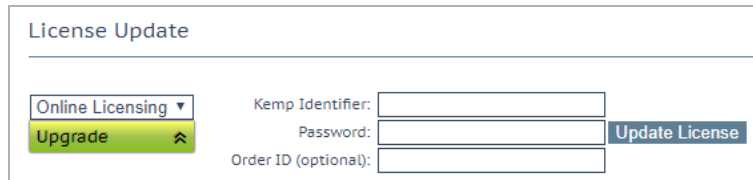

The screenshot shows a 'License Update' window. On the left, there is a dropdown menu with 'Online Licensing' selected and an 'Upgrade' button with an upward arrow. To the right of this are three input fields: 'Kemp Identifier:', 'Password:', and 'Order ID (optional):'. An 'Update License' button is positioned to the right of the 'Password' field.

1. In the main menu of the LoadMaster WUI, navigate to **System Configuration > System Administration > Update License**.
2. Enter the Kemp ID in the **Kemp Identifier** text box.
3. Enter the **Password**.
4. Click **Update License**.
5. Kemp recommends rebooting to activate the updated license.

5.2 Update using the Offline Licensing Method

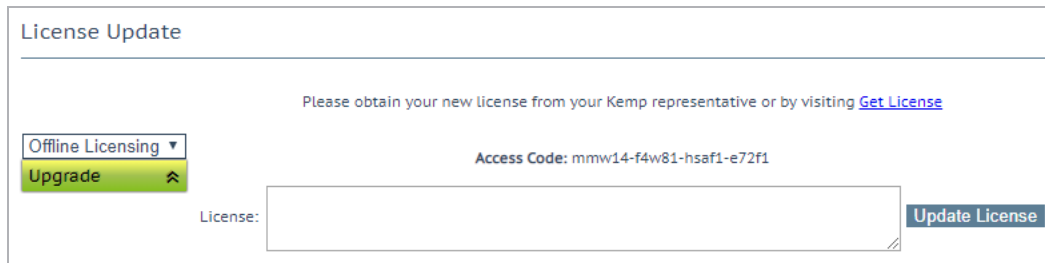


The screenshot shows a 'License Update' window. At the top, it says 'Please obtain your new license from your Kemp representative or by visiting [Get License](#)'. Below this, there is a dropdown menu with 'Offline Licensing' selected and an 'Upgrade' button with an upward arrow. To the right of this is an 'Access Code' field containing the text 'mmw14-f4w81-hsaf1-e72f1'. Below the 'Access Code' field is a large 'License:' text area. An 'Update License' button is located to the right of the 'License:' text area.

To upgrade the license using the offline method, you need to enter license text in the LoadMaster. You can either get this from Kemp or by using the **Get License** link.

To get the license text using the **Get License** link:

1. Click the **Get License** link.

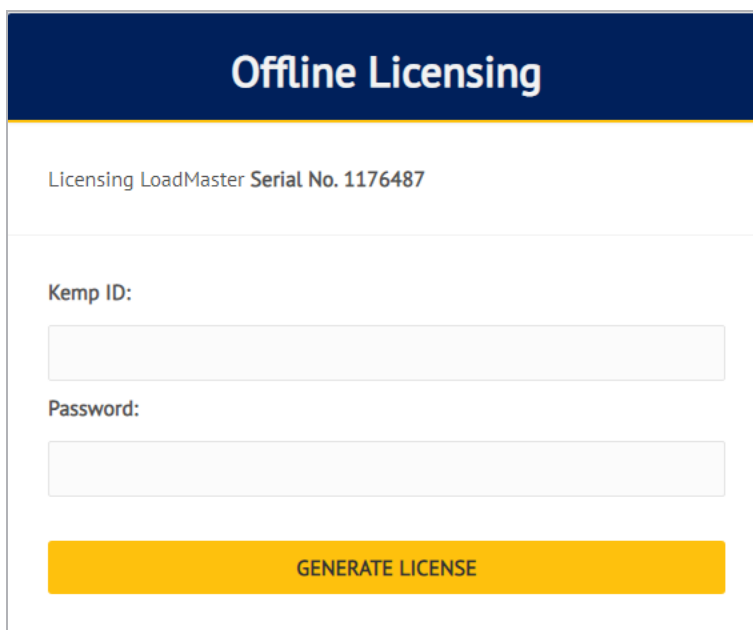


The screenshot shows a web form titled "Offline Licensing" with a dark blue header. Below the header, the text "Licensing LoadMaster Serial No. 1176487" is displayed. The form contains two input fields: "Kemp ID:" and "Password:". At the bottom of the form is a yellow button labeled "GENERATE LICENSE".

2. Enter the **Kemp ID**. This is the email address used during Kemp ID registration.
3. Enter the **Password** for the Kemp account.
4. Click **GENERATE LICENSE**.
5. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the LoadMaster WUI.
6. Paste the license into the **License** text area and click **Apply License**.
7. Click **OK**.
8. Click **Update License**.
9. Kemp recommends rebooting to activate the updated license.

6 Downgrading From LoadMaster Version 7 to Version 6

The format of the license stored in the LoadMaster in version 6 is different from version 7. Therefore, if the LoadMaster version is downgraded from version 7 to version 6, connectivity to the LoadMaster will be lost. To recover connectivity a new license needs to be installed using the console view.

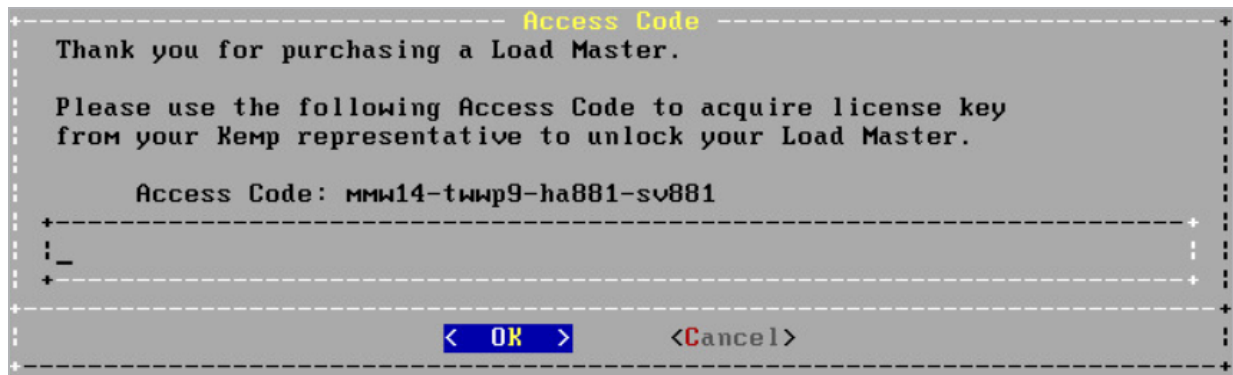

When you access the console, you will be asked to enter a license key. Go to <https://alsi.kempttechnologies.com/register/offLineLicensing.php> and fill out the form. An email will be sent containing the license key.

Upgrading from version 6 to version 7 does not cause any problems.

References

Unless otherwise specified, the following documents can be found at <http://kemptechnologies.com/documentation>.

VMWare Workstation and Player, Installation Guide

XEN (Fully Virtualized), Installation Guide

XEN (Para Virtualized), Installation Guide

Cisco UCS B-Series Blade Server, Installation Guide

Cisco UCS C-Series, Installation Guide

KVM (Para Virtualized), Installation Guide

Microsoft Hyper V, Installation Guide

Oracle VirtualBox, Installation Guide

VMWare ESX, ESXi and vSphere, Installation Guide

Last Updated Date

This document was last updated on 27 July 2023.