Progress®
Kemp® LoadMaster®

Deployment Guide MS Lync 2013 Single Pair Addendum

Generated on: 10 April 2025

Copyright

Visit the following page online to see Progress Software Corporation's current Product Documentation Copyright Notice/Trademark Legend: Product Documentation Copyright Notice & Trademarks | Progress

Table of Contents

Chapter 1: Introduction 5

Document Purpose 5

Prerequisites 5

Chapter 2: Load Balancing Microsoft Lync 2013 7

Chapter 3: Network Segmentation to support Lync deployments . . . 10

Chapter 4: General Configuration 13

Enable Use Default Route Only 13

Chapter 5: Configuring Virtual Services for Lync 2013 15

Lync Internal WebSvc HTTPS Virtual Service 15

Lync Director 2013 DNS Virtual Service 16

Lync Internal WebSvc HTTP Virtual Service 16

HLB Only Configuration 17

Lync Director 2013 HLB Virtual Service 17

Lync Internal Director SIP Virtual Service 17

Lync Mediation Virtual Service 17

Lync Edge Internal AV Media TCP Virtual Service 18

Lync Edge Internal SIP Virtual Service 18

Lync Internal WebSvc HTTP Virtual Service 18

Lync Internal Front-End DCOM Virtual Service 19

Lync Internal WebSvc HTTPS Virtual Service 19
Lync Internal Front-End SIP Virtual Service 20
Configure Edge Virtual Services 20
Common to Both 22
Lync Office Web App Servers Virtual Service 22
Lync Reverse Proxy HTTP Virtual Service 22
Lync Reverse Proxy HTTPS Virtual Service 23

Chapter 6: Additional Information 24
Server Maintenance 24
Loss of Failover while using DNS 24
Hardware Load Balancing 25
Configuration Caution 25

Chapter 7: References 26

1

Introduction

Refer to the following sections for details about the purpose of this document and prerequisites that should be met before proceeding.

Related Links

For details, see the following topics:

- Document Purpose
- Prerequisites

Document Purpose

This documentation is intended to provide guidance on how to configure a single pair of LoadMaster products to provide high availability for a Microsoft Lync Server 2013 environment. This documentation is created using a representative sample environment described later in the document. As this documentation is not intended to cover every possible deployment scenario it may not address unique setup or requirements. The Progress Kemp Support Team is available to provide solutions for scenarios not explicitly defined.

Prerequisites

It is assumed that the reader is a network administrator or a person otherwise familiar with networking and general computer terminology. It is further assumed that the Microsoft Lync Server 2013 environment has

been set up and the LoadMaster has been installed.


Other LoadMaster documentation can be referred to as needed from http://docs.progress.com/.

The minimum requirements that should be met before proceeding are as follows:

- LoadMaster firmware version 7.0-6 or above should be installed
- Configured and published Microsoft Lync Server architecture with Lync Topology builder
- Installed the Microsoft Servers, Active Directories and followed other Microsoft requirements
- Configured internal and external DNS entries for Front-End, Director and Edge pools
- Established access to the LoadMaster Web User Interface (WUI)

2

Load Balancing Microsoft Lync 2013

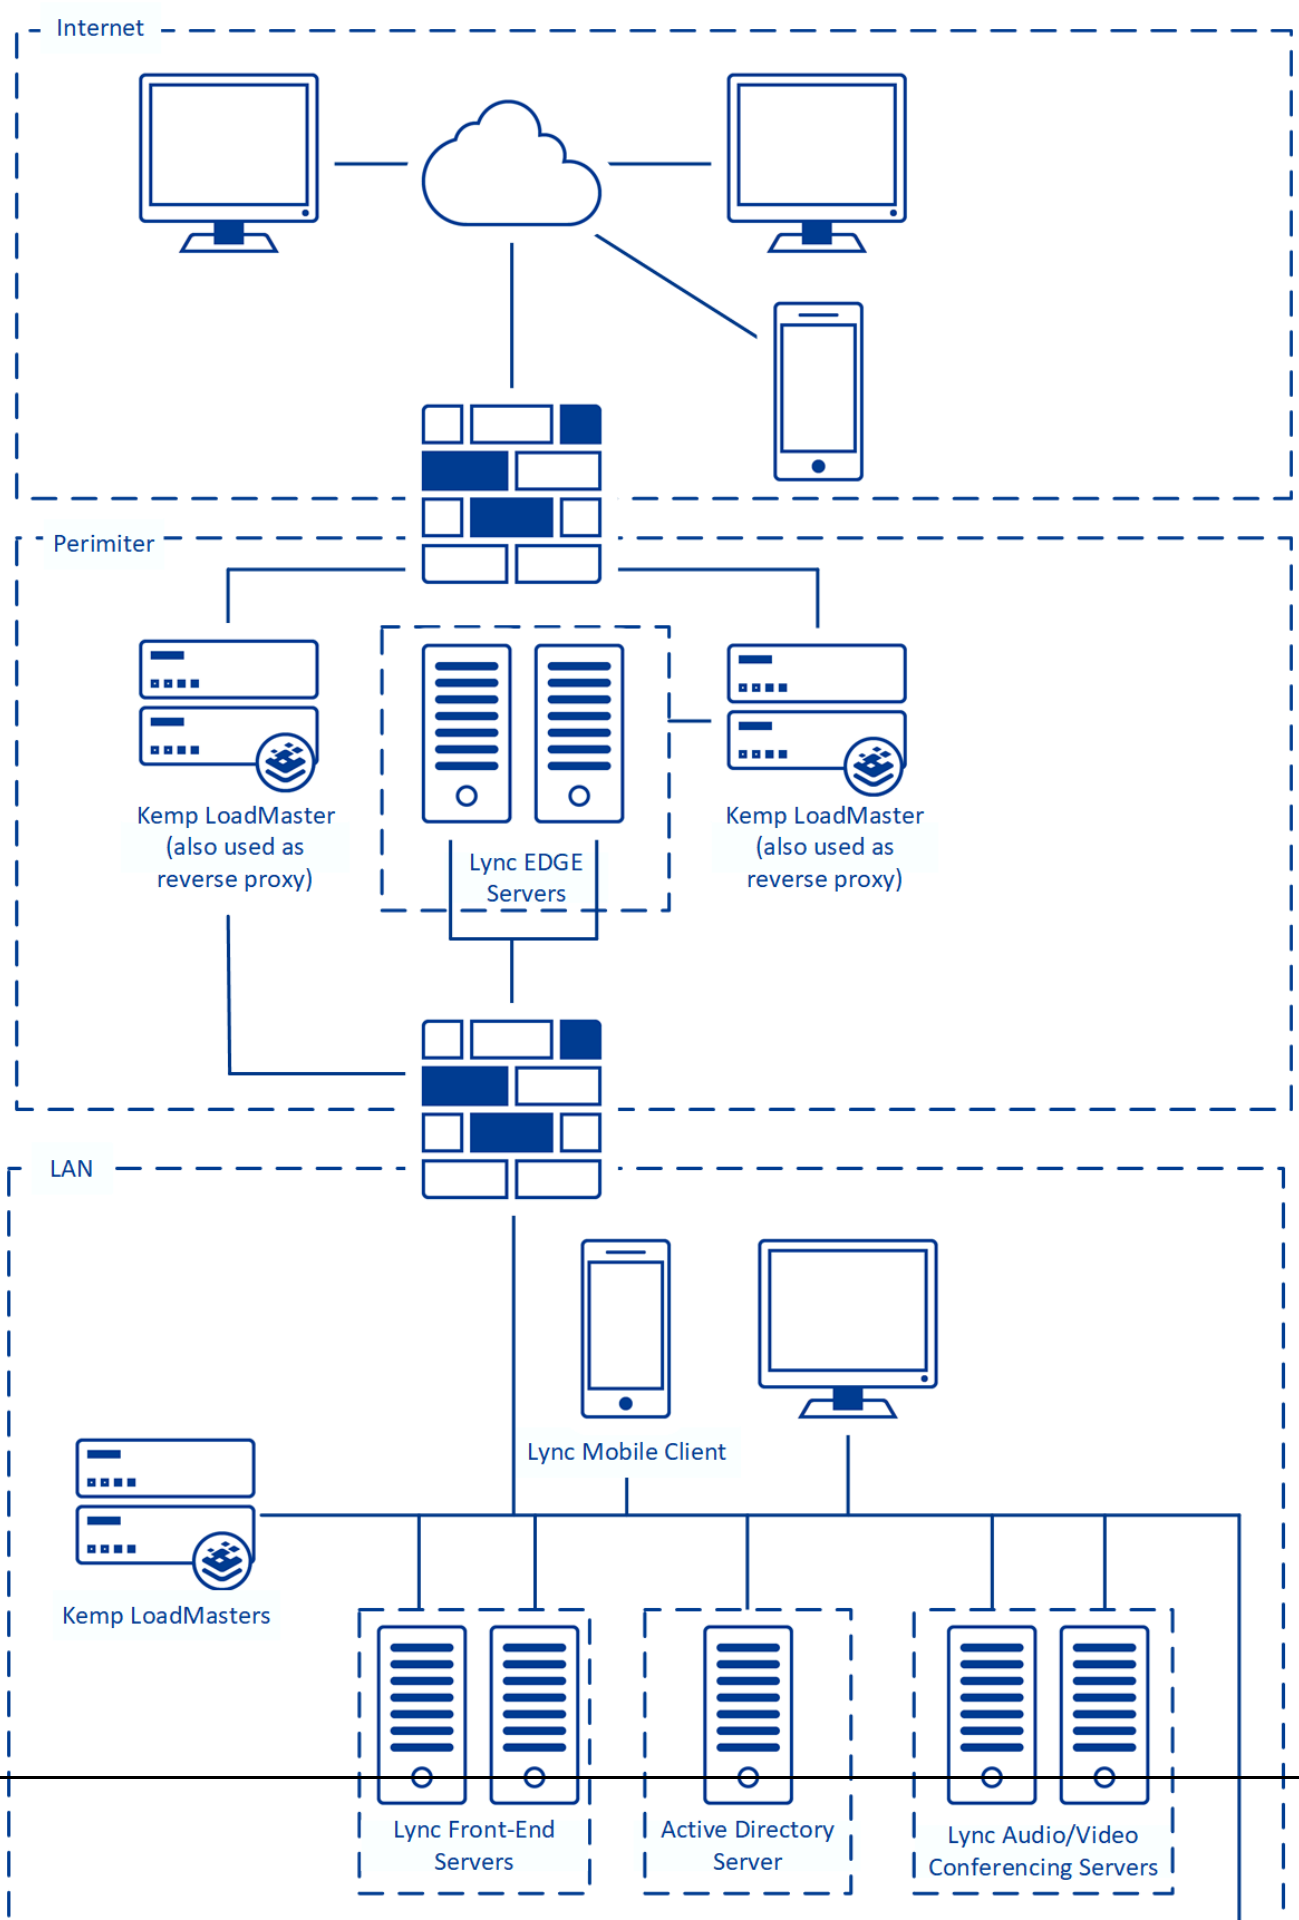

Internet
Perimiter
Kemp LoadMaster
(also used as
reverse proxy)
Lync EDGE
Servers
Kemp LoadMaster
(also used as
reverse proxy)
LAN
Lync Mobile Client
Kemp LoadMasters
Lync Front-End
Servers
Active Directory
Server
Lync Audio/Video
Conferencing Servers

CAUTION! – While Progress Kemp supports the configuration as depicted in the above diagram, this deployment option departs from the Microsoft recommended standard, as described in http://technet.microsoft.com/en-us/library/gg398478(v=ocs.14).aspx. If your configuration differs from that depicted above, please contact the local Progress Kemp Support Team for assistance.

3

Network Segmentation to support Lync deployments


LoadMaster uses the concept of a Virtual Service to publish services to clients. Clients can be actual end user clients or other servers which require access to the servers published by the Virtual Service. Virtual Services within the LoadMaster give the LoadMaster knowledge about local routes between networks. Using the local route/short cut between these interfaces may not always be the desired behaviour and this can be true within the Lync context specifically when configuring a Multi headed deployment on a single pair of LoadMaster devices.

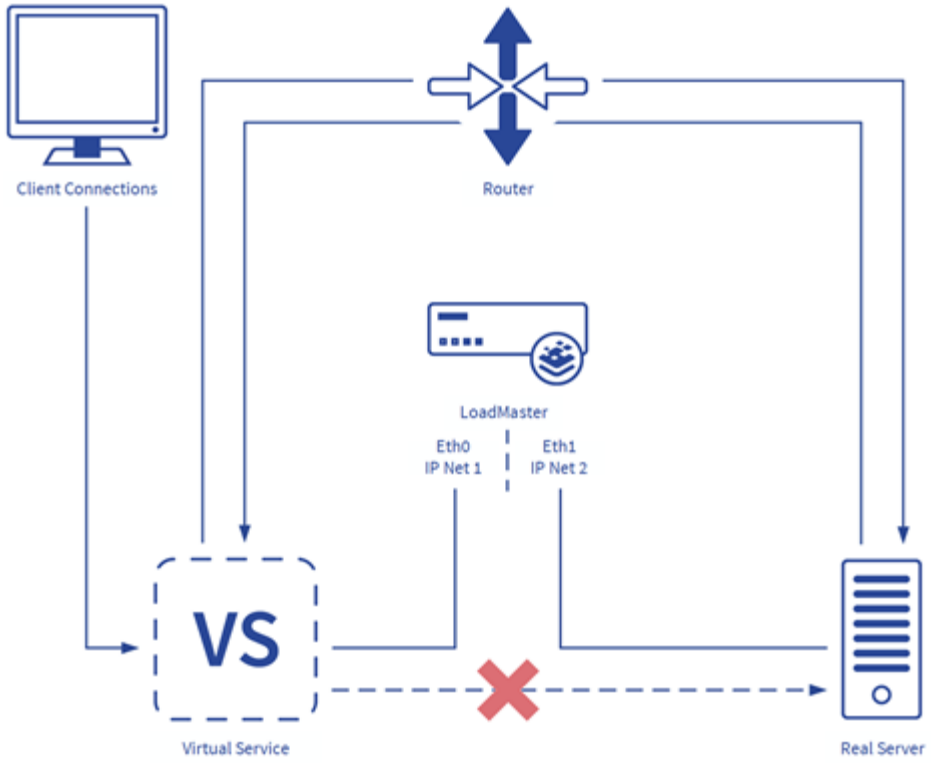

Enabling Use Default Route Only “forces” traffic to follow back from Virtual Services to Real Server when a Default Gateway is configured on the specific Virtual Service.

If the traffic flowing between Virtual Service and the Real Server is able to take the shorter route using the LoadMaster when symmetric network operation is not required then that is achieved by not having a Virtual Service Default Gateway. Note - If a Virtual Service does not have a default route then the LoadMaster default route will be used.

To apply the above set up to the Lync Single Pair deployment a typical packet flow is shown in the below diagram. Deployments are unique and alternative flows may be configured or required depending on the specific deployment.

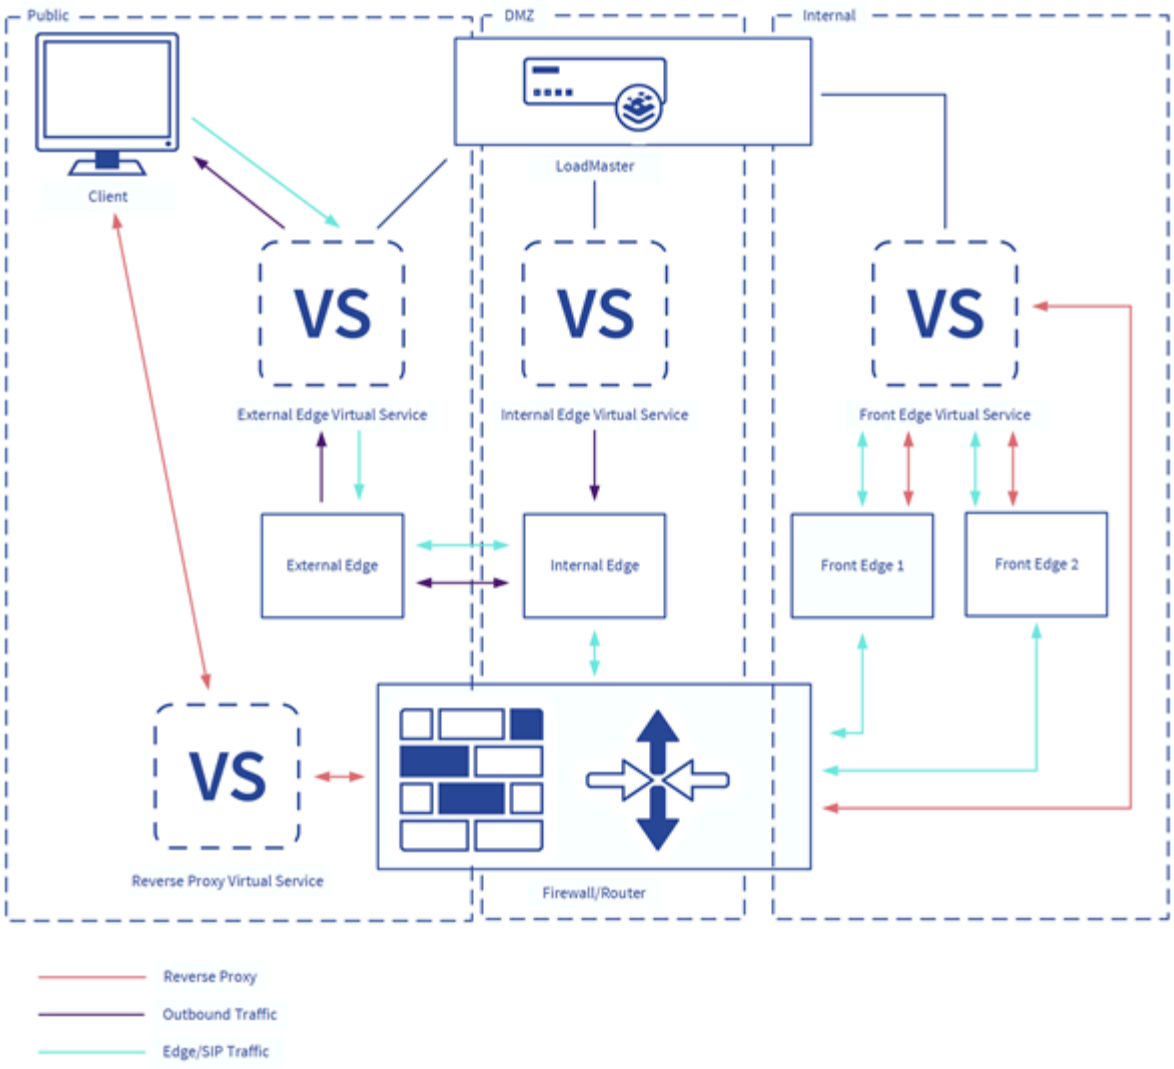
Public
DMZ
Internal
Client
LoadMaster
VS
VS
VS
External Edge Virtual Service
Internal Edge Virtual Service
Front Edge Virtual Service
External Edge
Internal Edge
Front Edge 1
Front Edge 2
VS
Reverse Proxy Virtual Service
Firewall/Router
Reverse Proxy
Outbound Traffic
Edge/SIP Traffic

4

General Configuration

The required additional LoadMaster configuration settings are outlined below to support a single pair deployment. These options can be set within the LoadMaster WUI.

Related Links


For details, see the following topics:

- Enable Use Default Route Only

Enable Use Default Route Only

In order to route traffic properly in a single pair configuration, the Use Default Route Only option must be enabled globally.

1. In the main menu, select **System Configuration**.
2. Select **Miscellaneous Options**.
3. Select **Network Options**.

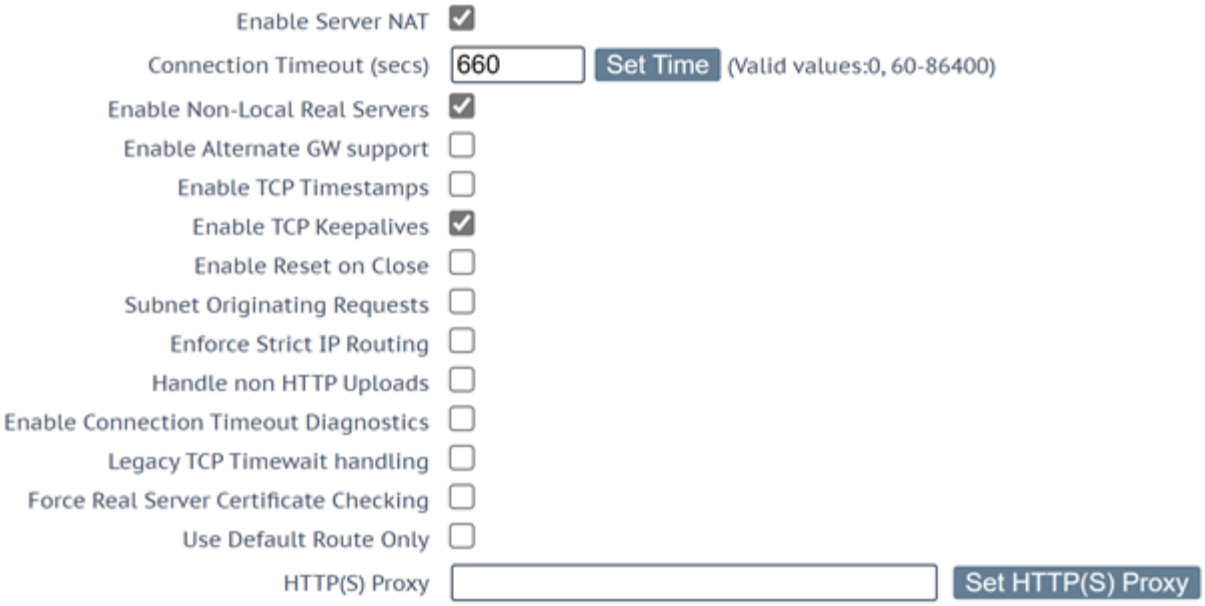

4. Enable **Use Default Route Only**.

When enabled, this option forces traffic from Virtual Services that have default route entries set, to only be routed to the interface where the Virtual Services' default route is located.

5

Configuring Virtual Services for Lync 2013

This guide covers three types of Virtual Service; **DNS Only**, **HLB only** and those that are common to both types of environment. The below sections provide the additional instructions and recommended configuration options for setting up a single pair of LoadMasters to work with Lync 2013 using these configuration options.

For an explanation of each of the fields mentioned, refer to the Web User Interface (WUI), Configuration Guide.


Related Links

For details, see the following topics:

- Lync Internal WebSvc HTTPS Virtual Service
- HLB Only Configuration
- Common to Both

Lync Internal WebSvc HTTPS Virtual Service


To configure a Virtual Service for Lync Internal WebSvc HTTP, follow the additional steps below:

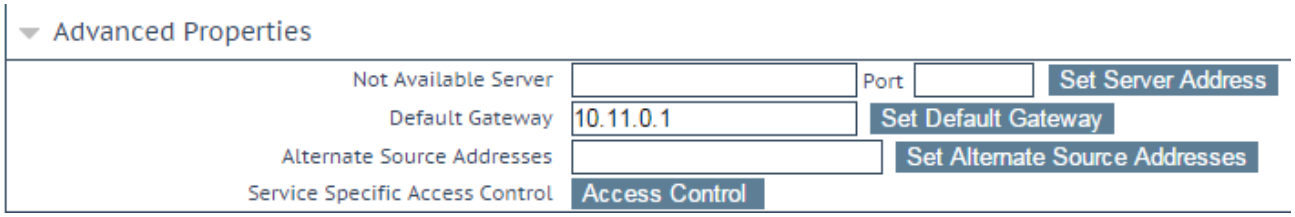

1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Director 2013 DNS Virtual Service


To configure a Virtual Service for Lync Director, follow the additional steps below:

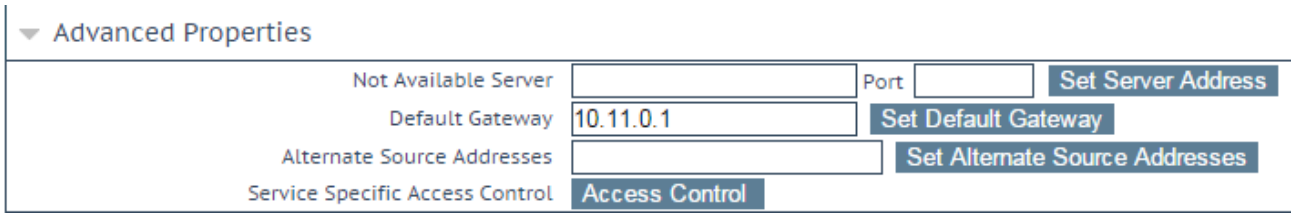

1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Internal WebSvc HTTP Virtual Service

To configure a Virtual Service for Lync Internal WebSvc HTTP, follow the additional steps below:

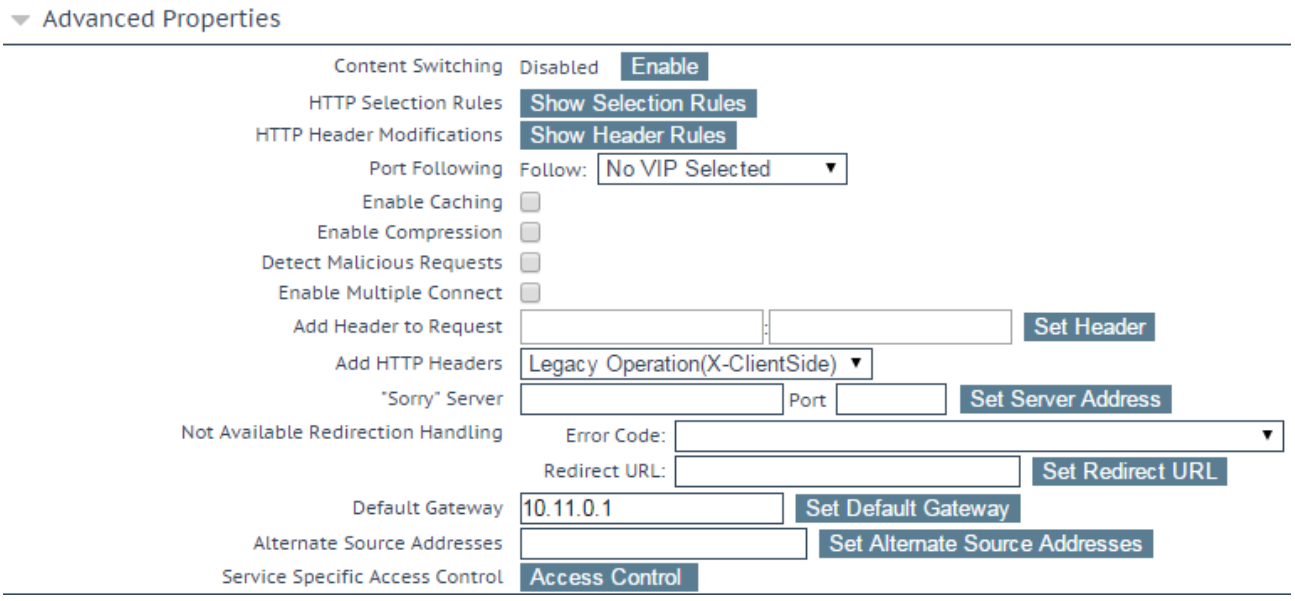


1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the internal network (this default gateway will be on the same network as the Virtual Service)

HLB Only Configuration

The HLB only configuration instructions are below.

Lync Director 2013 HLB Virtual Service


To configure a Virtual Service for Lync Director, follow the additional steps below:

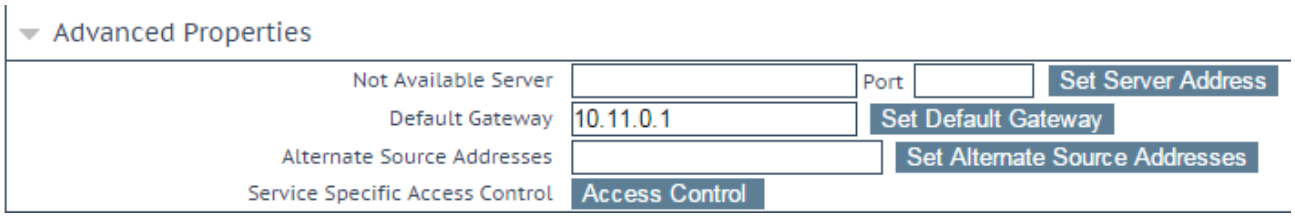

1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Internal Director SIP Virtual Service

To configure a Virtual Service for Lync Internal Director SIP, follow the additional steps below:

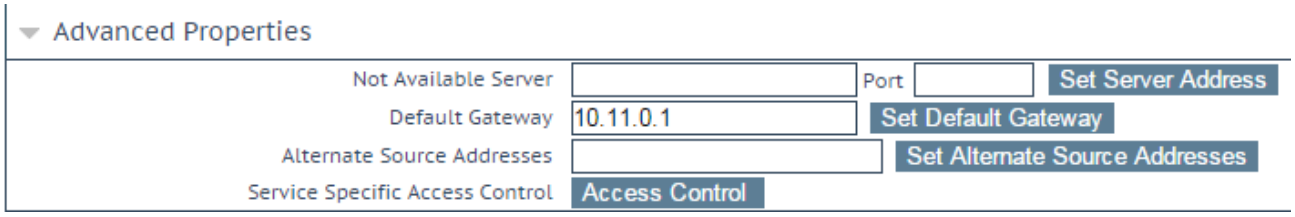


1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Mediation Virtual Service

DNS-only load balancing is sufficient for Mediation pools. If using the LoadMaster instead of DNS, load balance only TCP port **5070**.

To configure a Virtual Service for Lync Mediation, follow the additional steps below:

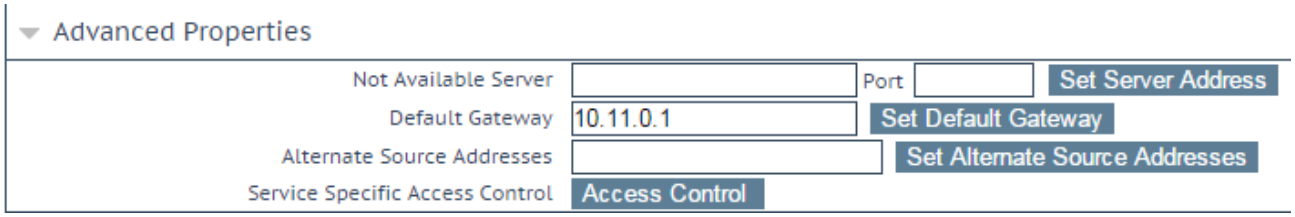


1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Edge Internal AV Media TCP Virtual Service

This is the failback path for A/V media transfer. It is used for file transfer and desktop sharing.

To configure a Virtual Service for Lync Edge Internal AV Media TCP, follow the additional steps below:

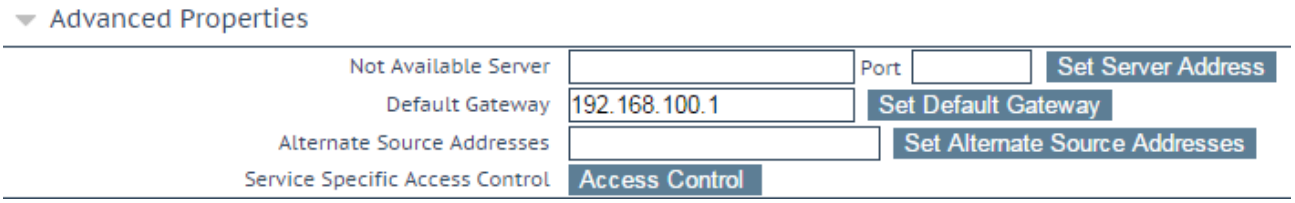


1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Edge Internal SIP Virtual Service

This is used by Directors and FE Pools.


To configure a Virtual Service for Lync Edge Internal SIP, follow the additional steps below:

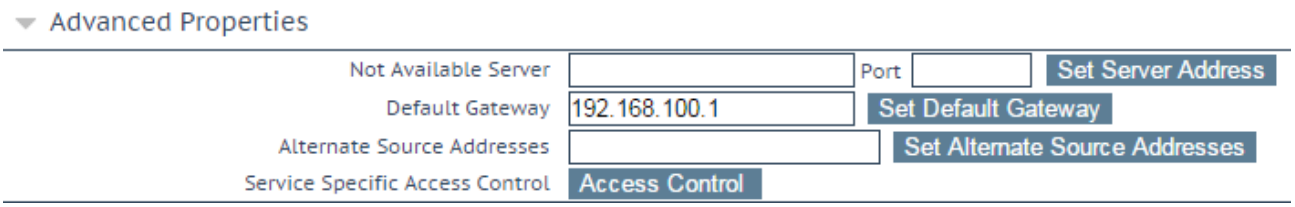

1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Internal WebSvc HTTP Virtual Service


To configure a Virtual Service for Lync Internal WebSvc HTTP, follow the additional steps below:

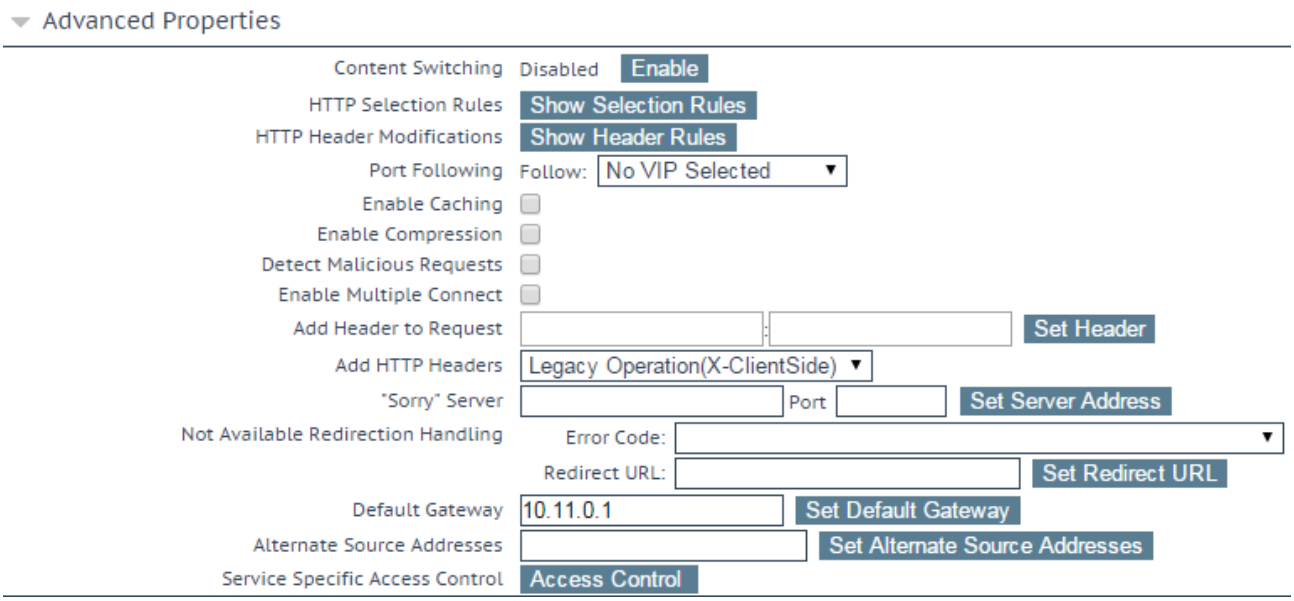

1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Internal Front-End DCOM Virtual Service


To configure a Virtual Service for Lync Internal WebSvc HTTP, follow the additional steps below:

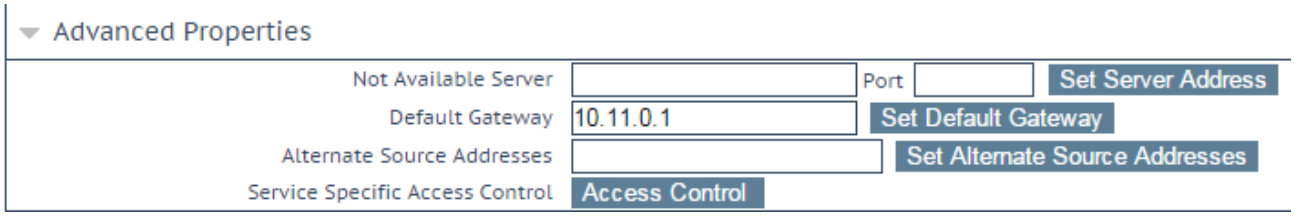

1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Internal WebSvc HTTPS Virtual Service


To configure a Virtual Service for Lync Internal WebSvc HTTPS HLB Only, follow the additional steps below:

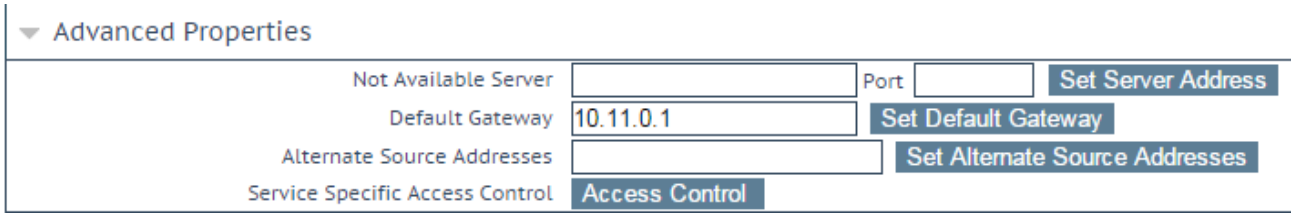

1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Internal Front-End SIP Virtual Service

To configure a Virtual Service for Lync Internal Front-End SIP, follow the additional steps below:

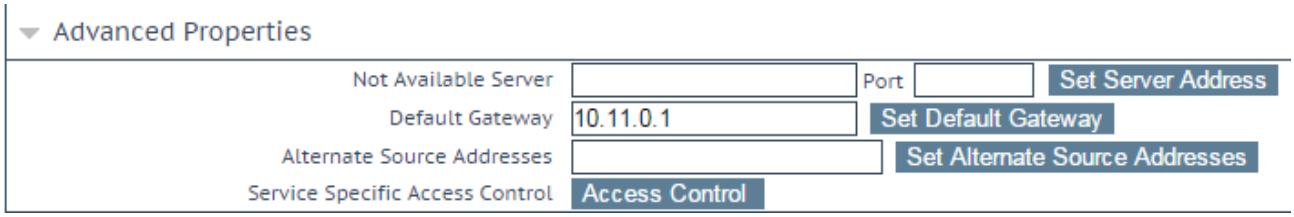

1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)


Configure Edge Virtual Services

To configure the various Edge Virtual Services, refer to the sections below.

When load balancing external interfaces of Edge pools, Access VIP should be used as the default gateway on all Edge interfaces. Also, a publicly routable IP with no NAT or port translation must be used.

Lync Edge External SIP Virtual Service


To configure a Virtual Service for Lync Edge External SIP, follow the additional steps below:

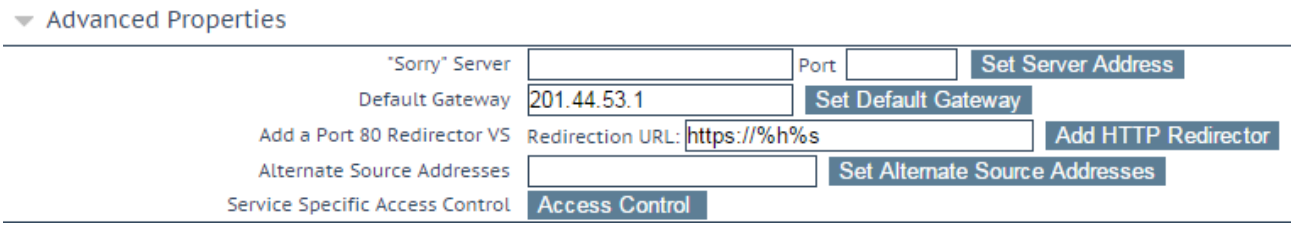

1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Edge External SIP Federation Virtual Service

To configure a Virtual Service for Lync Edge External SIP Federation, follow the additional steps below:

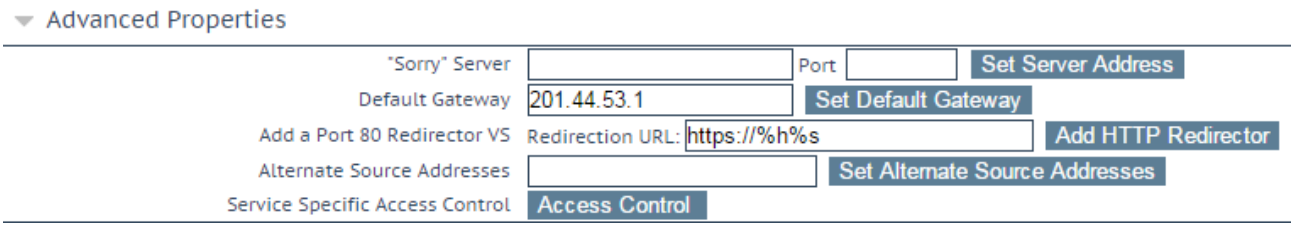

1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Edge External XMPP Virtual Service

To configure a Virtual Service for Lync Edge External XMPP, follow the additional steps below:



1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Edge External Conferencing Virtual Service


To configure a Virtual Service for Lync Edge External Conferencing, follow the additional steps below:



1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Edge External AV Media TCP Virtual Service

To configure a Virtual Service for Lync Edge External AV, follow the additional steps below:

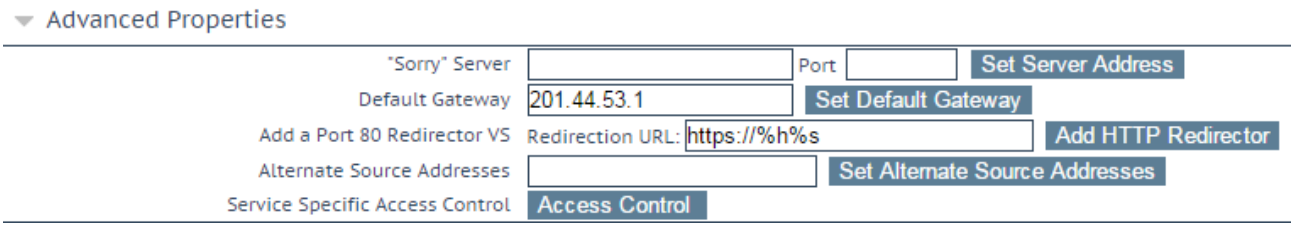


1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Common to Both

The Virtual Services listed below are common to both DNS and HLB configurations.

Lync Office Web App Servers Virtual Service


To configure a Virtual Service for Office Web App Servers, follow the additional steps below:

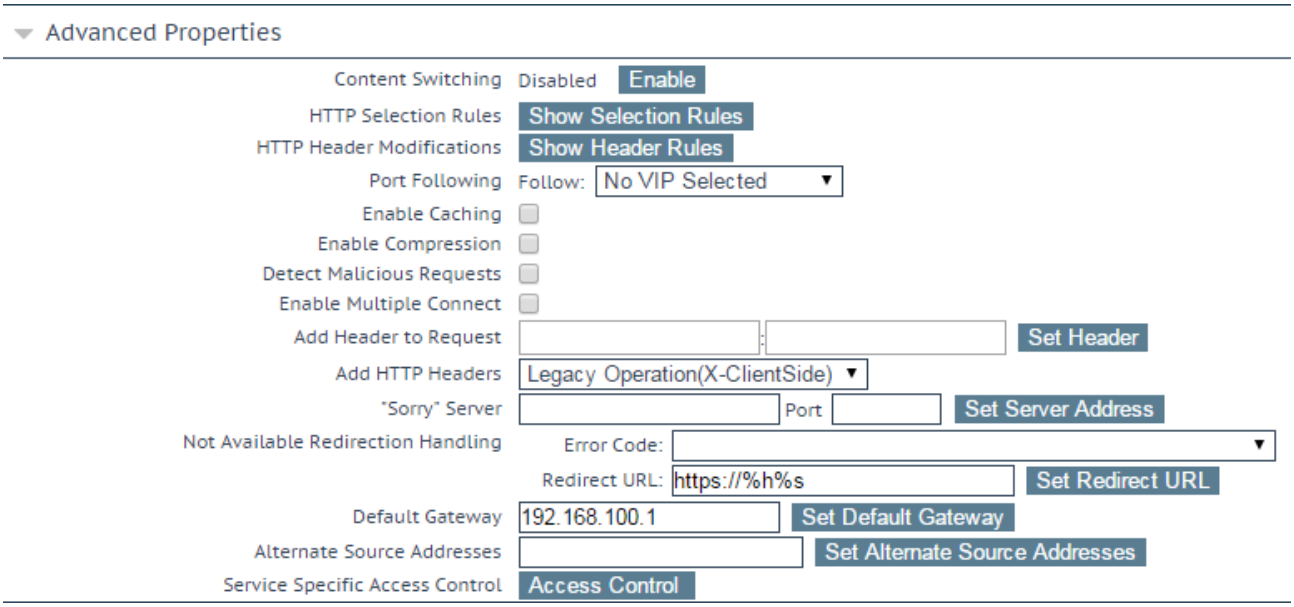

1. Expand the **Advanced Properties** section.
2. Enter **https://%h%s** in the **Redirection URL** field and click **Add HTTP Redirector**.
3. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Reverse Proxy HTTP Virtual Service


To configure a Virtual Service for Lync Reverse Proxy HTTP, follow the additional steps below:

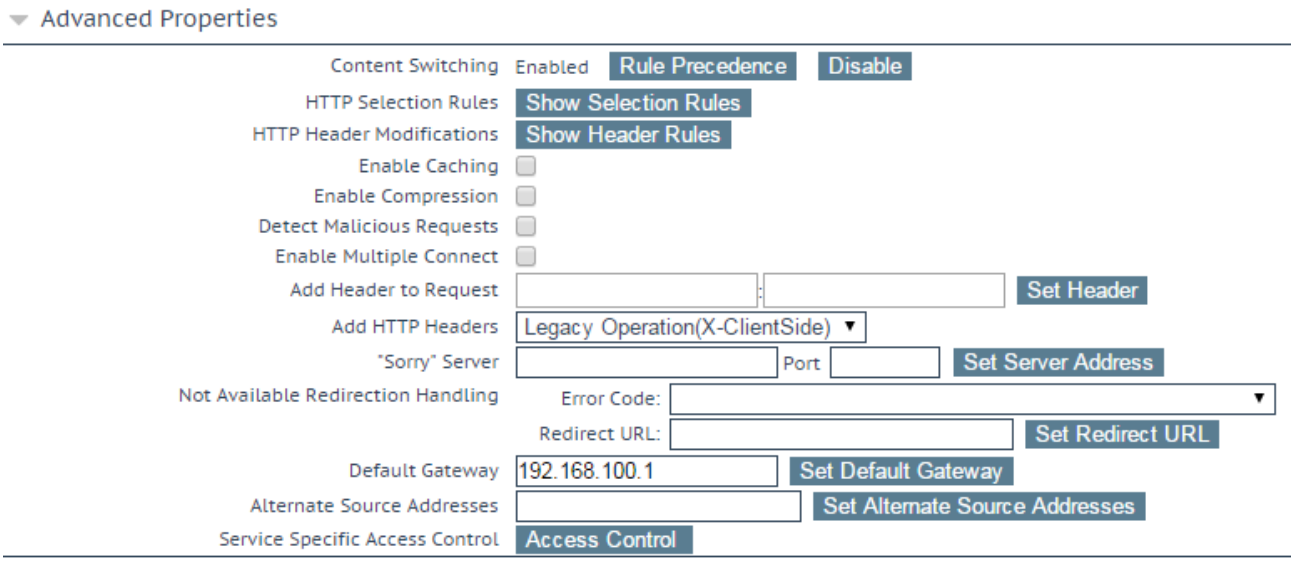

1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

Lync Reverse Proxy HTTPS Virtual Service

To configure a Virtual Service for Lync Reverse Proxy HTTPS, follow the additional steps below:

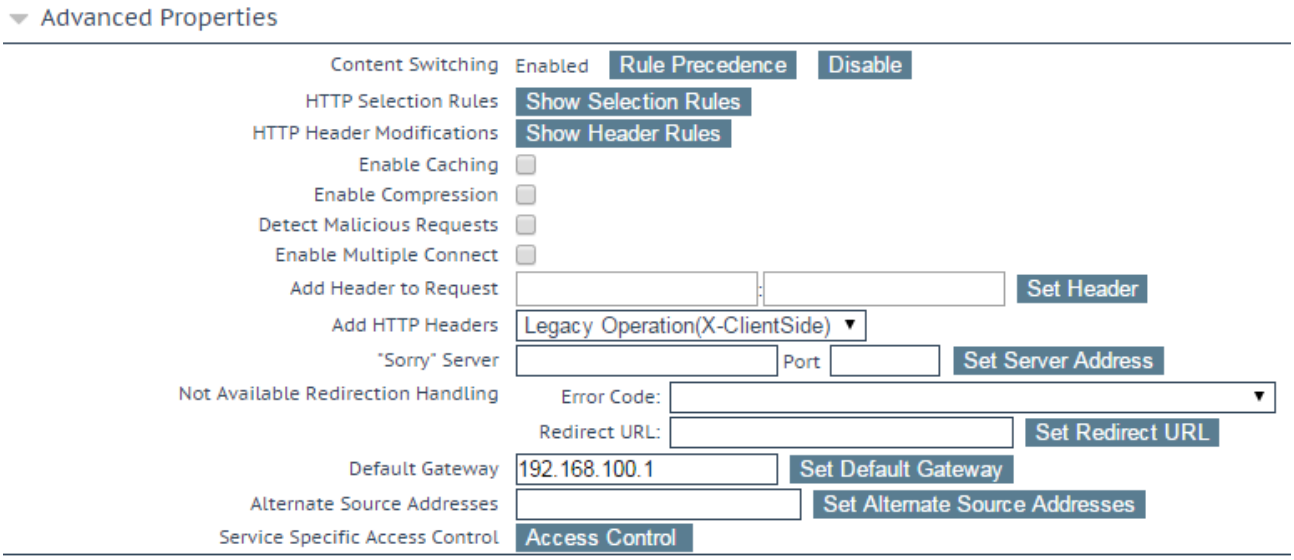

1. Expand **Advanced Properties** section and input the following options:
2. Enter the **Default Gateway** for the connected network (this default gateway will be on the same network as the Virtual Service)

6

Additional Information

Some additional information that may be of use is contained within the sections below.

Related Links

For details, see the following topics:

- Server Maintenance
- Loss of Failover while using DNS
- Hardware Load Balancing
- Configuration Caution

Server Maintenance

When blocking traffic to a server during maintenance, removing the server IP entry from the pool Fully Qualified Domain Name (FQDN) is not sufficient. The server entry must be removed from the DNS. As the server to server traffic is topology-aware, in order to block server to server traffic the server must be removed from the DNS topology.

Loss of Failover while using DNS

Loss of failover when load balancing Edge pools using DNS is possible in the following scenarios:

- Federation with organizations running OCS versions older than Lync 2010
- PIM connectivity with Skype, Windows Live, AOL, Yahoo! and XMPP partners
- UM Play on Phone functionality
- Transferring calls from UM Auto Attendant

Hardware Load Balancing

If hardware load balancing is being used, a list of the ports that must be open can be found here: http://technet.microsoft.com/en-us/library/gg398833.aspx

Hardware load balancing Edge servers requires N+1 Public IP addresses.

Refer to the two links below for further information on hardware load balancing:

- http://technet.microsoft.com/en-us/library/gg398739.aspx
- http://technet.microsoft.com/en-us/library/gg398478.aspx

Configuration Caution

CAUTION – A Single Pair deployment means that Internal and External traffic traverses the same LoadMaster unit. As a result, a denial of service could impact both the internal and external Lync Server deployment.

7

References

The following sources are referred to in this document:

Progress Kemp website

www.kemptechnologies.com

Progress Kemp Documentation page

https://docs.progress.com/category/loadmaster-documentation

Web User Interface (WUI), Configuration Guide

https://docs.progress.com/bundle/loadmaster-configuration-guide-web-user-interface-wui-ga

Virtual Services and Templates, Feature Description

https://docs.progress.com/bundle/loadmaster-feature-description-virtual-services-and-templates-ga

Ports and Protocols for Internal Servers

- Port and protocol requirements for servers
- Port summary - Scaled consolidated edge with hardware load balancers in Lync Server 2013
- Scaled consolidated edge with hardware load balancers in Lync Server 2013