Progress®
Kemp® LoadMaster®

Feature Description LoadMaster Licensing

Generated on: 21 April 2026

Copyright

Visit the following page online to see Progress Software Corporation's current Product Documentation Copyright Notice/Trademark Legend: Product Documentation Copyright Notice & Trademarks | Progress

Table of Contents

Chapter 1: Introduction 5

Chapter 2: License the LoadMaster 6

Add Progress Kemp Licensing Server to Allowed URLs on the Firewall 6

Register for a Progress ID 7

Reset the Progress ID Password 9

Activate the LoadMaster License 10

Online Licensing 11

Offline Licensing 13

Chapter 3: Activate the LoadMaster license using LoadMaster 360 . . 34

Chapter 4: Troubleshooting. 35

Chapter 5: Temporary and Permanent Licenses 36

Transfer Permanent Licenses between LoadMaster devices 37

Chapter 6: Updating a License 39

Update using the Online Licensing Method. 40

Update using the Offline Licensing Method. 41

Chapter 7: Changing the Progress ID Associated with the License . . 43

Changing the Progress ID - Online Method 43

Changing the Progress ID - Offline Method 44

Chapter 8: Downgrading From LoadMaster Version 7 to Version 6 . . 45

Chapter 9: References 46

1

Introduction

Before the LoadMaster can be used it needs to be licensed. A Progress ID is required to license a LoadMaster.

Follow the steps in the Register for a Progress ID section to register for a Progress ID (if this has not already been done) and then license the LoadMaster.

If the password for the Progress ID has been forgotten, it can be reset. Refer to the Reset the Progress ID Password section for instructions on how to do this.

Note: Registration of a Progress ID only needs to be done once. Future licensing requirements can use this same Progress ID account.

Prerequisites

This document assumes that the LoadMaster has already been installed up to the point where it needs to be licensed.

For installation instructions, refer to the relevant Installation Guide on the documentation page: LoadMaster GA documentation.

Licensing requires a connection to the Progress Kemp licensing database (internet access). Either directly from the LoadMaster itself (to do online licensing) or from any browser with internet access (to do offline licensing, if you do not have internet access directly from the LoadMaster).

2

License the LoadMaster

A Progress ID is required to license the product. The Register for a Progress ID section details instructions on how to register for a Progress ID, if you do not already have one.

The LoadMaster license is tied to the MAC address so it should be set to static for virtual units. For further details if you are using VMware or Hyper-V, refer to the relevant Installation Guide.

- VMware Installation Guide
- Microsoft Hyper-V Installation Guide

Contents

- Add Progress Kemp Licensing Server to Allowed URLs on the Firewall
- Register for a Progress ID
- Activate the LoadMaster License

Add Progress Kemp Licensing Server to Allowed URLs on the Firewall

We recommend adding the Progress Kemp Licensing Server URLs as allowed URLs on your firewall to ensure all licensing features work, including the downloading and updating of Web Application Firewall (WAF) rules.

The URLs to allow vary depending on your LoadMaster firmware version:

- LoadMaster firmware version 7.2.53 or above (or 7.2.48.3 Long Term Support (LTS) and above): **licensing.kemp.ax**
- LoadMaster firmware versions below 7.2.53 (or below 7.2.48.3 LTS): **alsi.kemptechnologies.com** and **alsi2.kemptechnologies.com**

Register for a Progress ID

To register for a Progress ID, follow the steps below:

1. Go to the following page: Create a Progress ID.

   Note: If you are already logged in to the Progress Kemp website with your Progress ID, clicking the above link brings you to the home page.

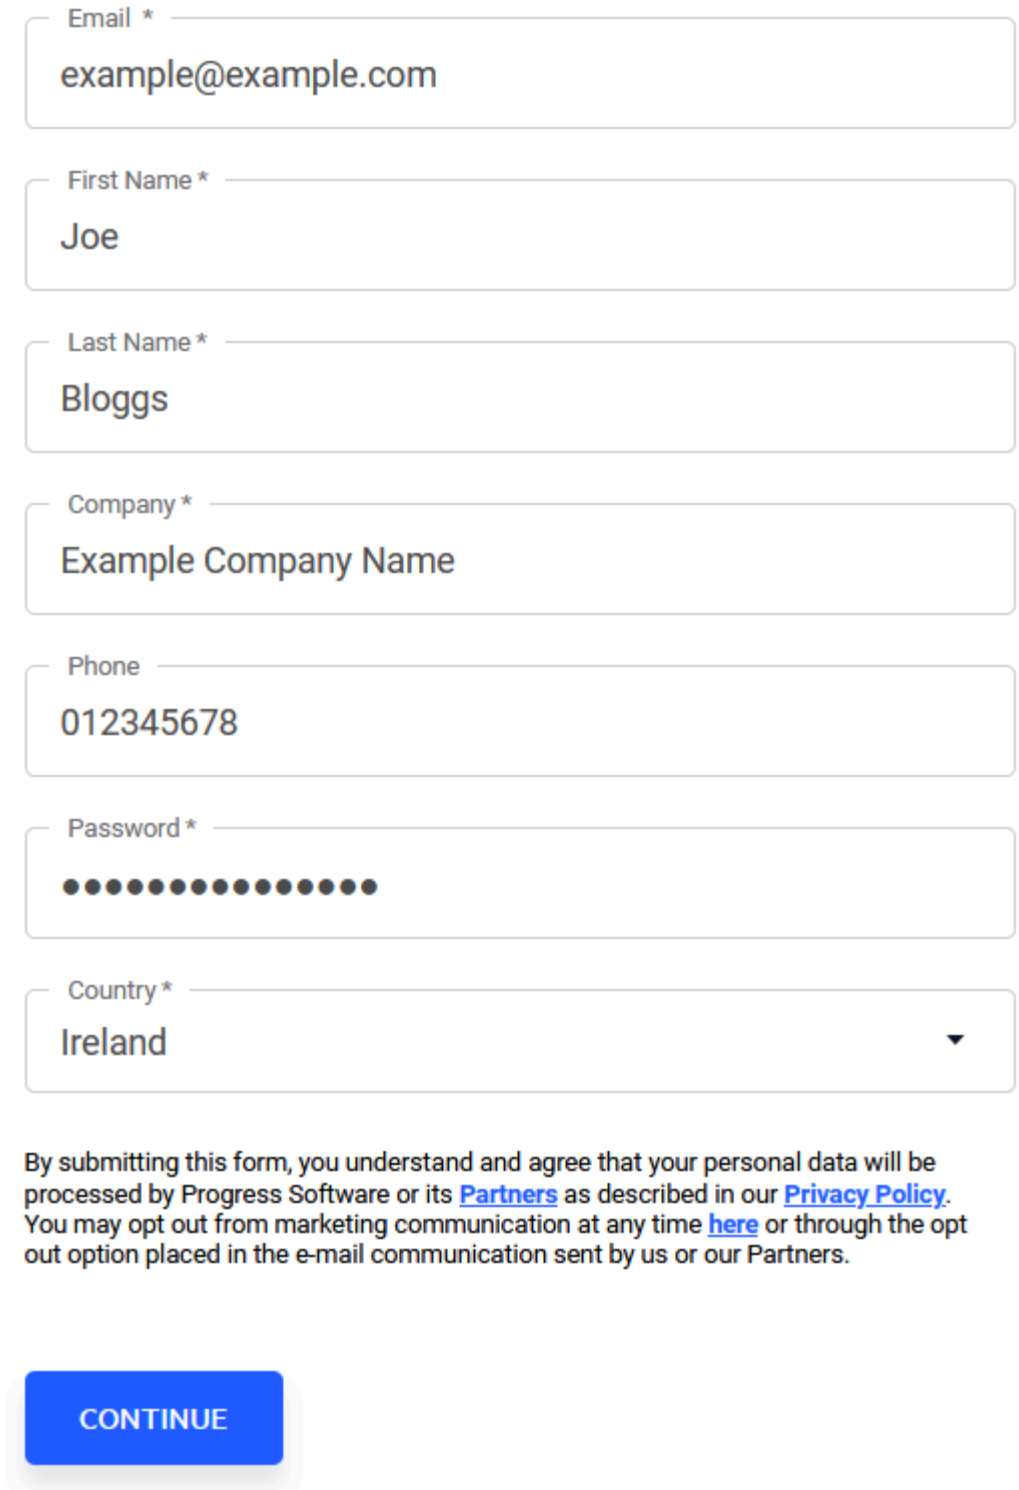

Note: There is a link to this page on the initial licensing screen in the LoadMaster.

2. Fill out the fields on the form.

Note: Enter a valid **Email** address. The validation email and license information will be sent to this email

address.

Note: Only a single user (Progress ID) can be associated with the license. If you want a group to be associated with the Progress ID, then create a Progress ID that uses a group email address.

3. Make note of the password because it will be needed to activate and access the account.
4. Click **Continue**.
5. A success message is displayed. An email is sent from Progress Kemp (alsilicensingregistration@kemptechnologies.com) to the address specified in the form.
6. Go to the email and click **Confirm** to open the validation screen.

Note: If you do not activate the account within 24 hours of registering, the activation link in the email be expired.

7. Enter the password that you specified on the registration form.
8. Click **Activate Now**.
9. A success message appears. Another email is sent to inform that the account is now active.

This Progress ID account can now be used to activate products immediately.

Contents

- Reset the Progress ID Password

Reset the Progress ID Password

If the password for the Progress ID account is not known, it can be reset. To reset the Progress ID password, follow the steps below:

1. Go to the reset password page: Reset Progress ID Password

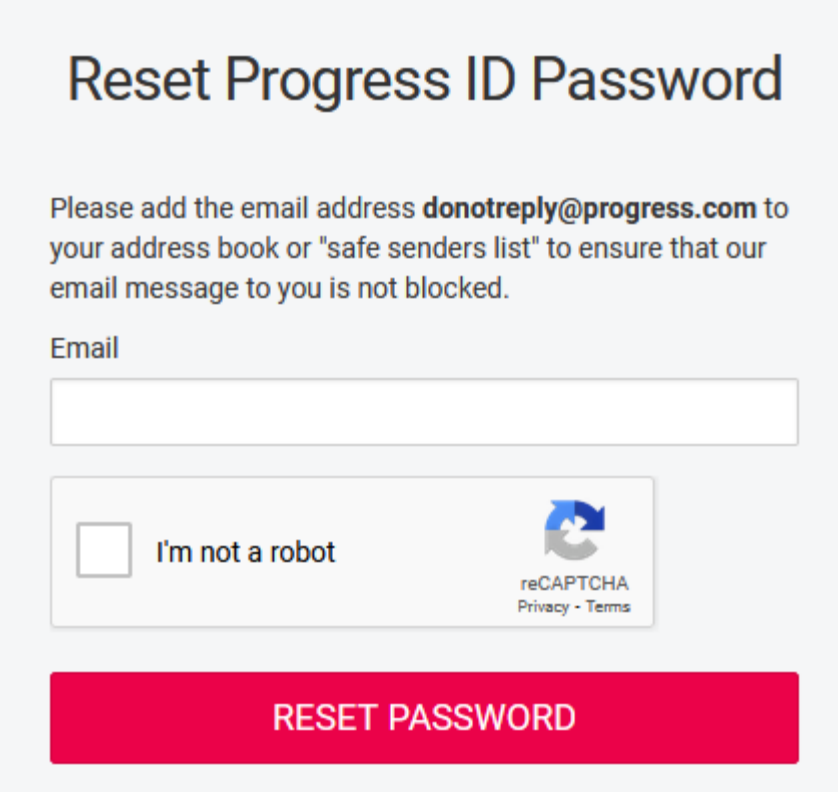

2. Enter the Progress ID in the **Email** field.
3. Click **RESET PASSWORD**.
4. An email will be sent to the address specified. Click the link in the email.
5. Enter the new password in both the **Password** and **Retype Password** fields.
6. Click **Reset**.

A message appears saying the password has been successfully changed.

Activate the LoadMaster License

The licensing process varies slightly depending on what LoadMaster type you have.

The different types of LoadMasters are as follows:

- Hardware LoadMaster
- Virtual LoadMaster
- Bare Metal LoadMaster
- Cloud Bring Your Own License (BYOL) LoadMaster
- Cloud Pay As You Go (PAYG) LoadMaster

Note: This document discusses licensing your LoadMaster using a license obtained from the Progress Kemp Licensing Server, using either the online (preferred) or offline methods. The licensing screen on your

LoadMaster may also present an option for:

- **Kemp 360 Central Licensing**. For further information, refer to the Kemp 360 Central Feature Description.
- **LoadMaster 360 licensing**. For details on how to license a newly-deployed, unlicensed LoadMaster using LoadMaster 360, refer to the Technical Note - LoadMaster Licensing in LoadMaster 360 document.

There are two methods with in the LoadMaster to activate a license – online or offline.

You can use online licensing when the LoadMaster has access to the internet. You can use offline licensing when the LoadMaster does not have access to the internet.

Note: If you are licensing a Free LoadMaster or Service Provider License Agreement (SPLA) LoadMaster, you can only use the online licensing method.

Note: When licensing a High Availability (HA) pair of LoadMasters, each unit requires its own license. When updating the license on a HA pair, you should update both units separately.

Refer to the relevant section below depending on the licensing method you are using.

Contents

- Online Licensing
- Offline Licensing

Online Licensing

You can use online licensing when the LoadMaster has access to the internet.

A Progress ID is required to license the LoadMaster. If a Progress ID does not already exist, refer to the Register for a Progress ID section. Instructions on how to license the LoadMaster are as follows.

To activate the LoadMaster license, follow these steps:

1. In an internet browser, enter the IP address of the LoadMaster.

   Note: Ensure that **https://** is entered before the IP address.

2. A warning may appear regarding website security certificates. Click the continue/ignore option.

   Note: If this is the first time accessing the Web User Interface (WUI), the End User License Agreement (EULA) may need to be accepted.

3. Ensure that **Online Licensing** is selected in the drop-down menu.

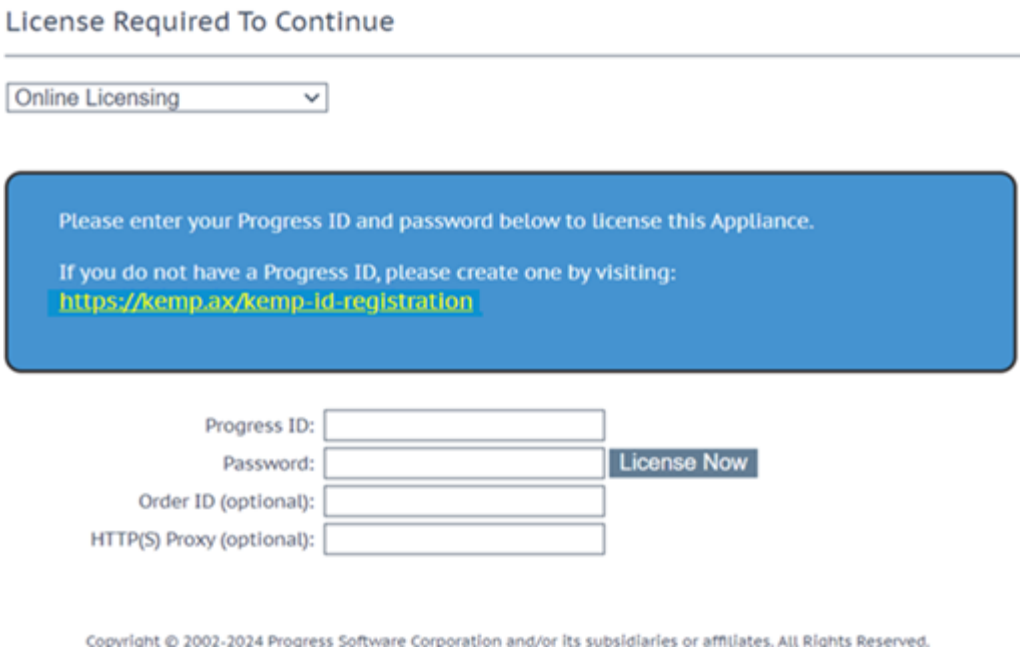

4. Enter the Progress ID (formerly Kemp ID). This is the email address used during Progress ID registration.
5. Enter the **Password** for the Kemp account.
6. Enter an **Order ID** if you have one.

   Note: After placing an order with Progress Kemp, you receive a confirmation email that typically includes your Order ID. The Order ID ensures that your LoadMaster is properly licensed. If you are applying a temporary license, you are not required to enter an **Order ID**. If this is the first time you are licensing this LoadMaster and you are adding a permanent license, the **Order ID** is required.

7. If needed, you can enter a **HTTP(S) Proxy** server address, in the format **<ProxyServerAddress>:<Port>**.
8. Click **License Now**.
9. Click **OK**.
10. If you entered an **Order ID**, a screen appears that provides a list of available licenses for that order ID. Select the license type to apply to the LoadMaster.

    Note: If the license type you want is not displayed, contact your Progress Kemp representative.

11. Click **Continue**.

The LoadMaster is now fully installed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license.

For further details on how to configure the LoadMaster, refer to the various documents available on the LoadMaster documentation page.

Offline Licensing

Note: Offline licensing is not available for Free or Service Provider License Agreement (SPLA) LoadMasters.

Note: Before licensing the LoadMaster, a Progress ID (formerly Kemp ID) is required. If one does not already exist, follow the steps in the Register for a Progress ID section to get one.

If you can access the LoadMaster User Interface (UI) but the LoadMaster does not have access to the internet, you can license using the offline method. You can license using the offline method in the following ways:

- Through clicking the link in the LoadMaster
- Through accessing the **Offline Licensing** page directly

Refer to the relevant section below, depending on what method you use.

Contents

- Offline Licensing Through Clicking the Link from the LoadMaster
- Offline Licensing Through Accessing the Offline Licensing Page Directly

Offline Licensing Through Clicking the Link from the LoadMaster

To perform offline licensing clicking the link from the LoadMaster, follow these steps:

1. In an internet browser, enter the IP address of the LoadMaster.

   Note: Ensure to enter **https://** before the IP address.

2. A warning may appear regarding website security certificates. Click the continue/ignore option. To stop this warning from appearing - download the root certificate of the LoadMaster by clicking **Download Root Cert** under the main menu after initially logging in.

   Note: If this is the first time accessing the User Interface (UI), you may need to accept the End User License Agreement (EULA).

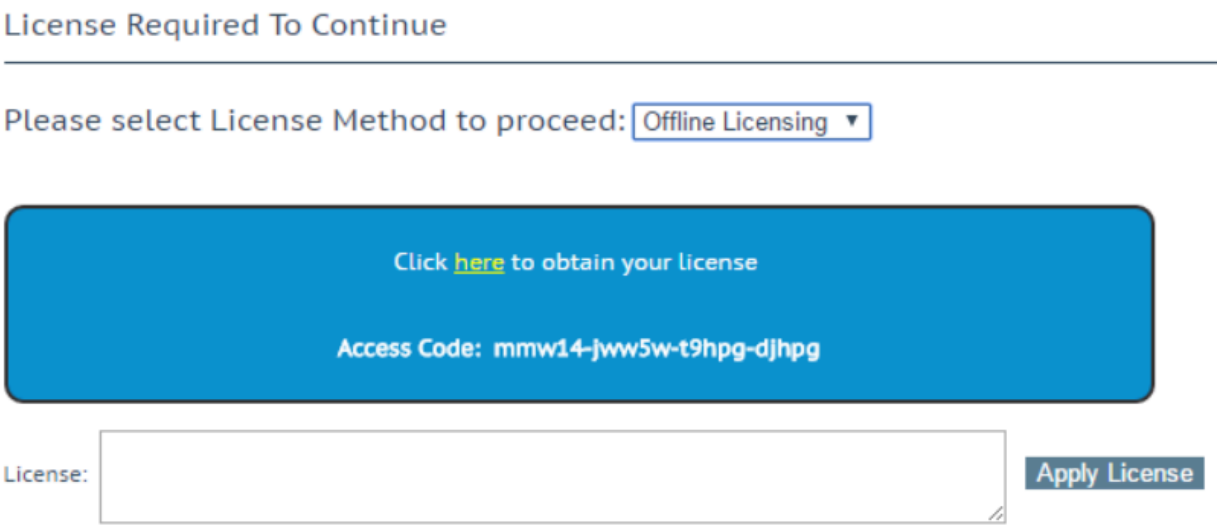

3. Select **Offline Licensing** from the drop-down menu provided.
4. Click the **here** link provided on the page.

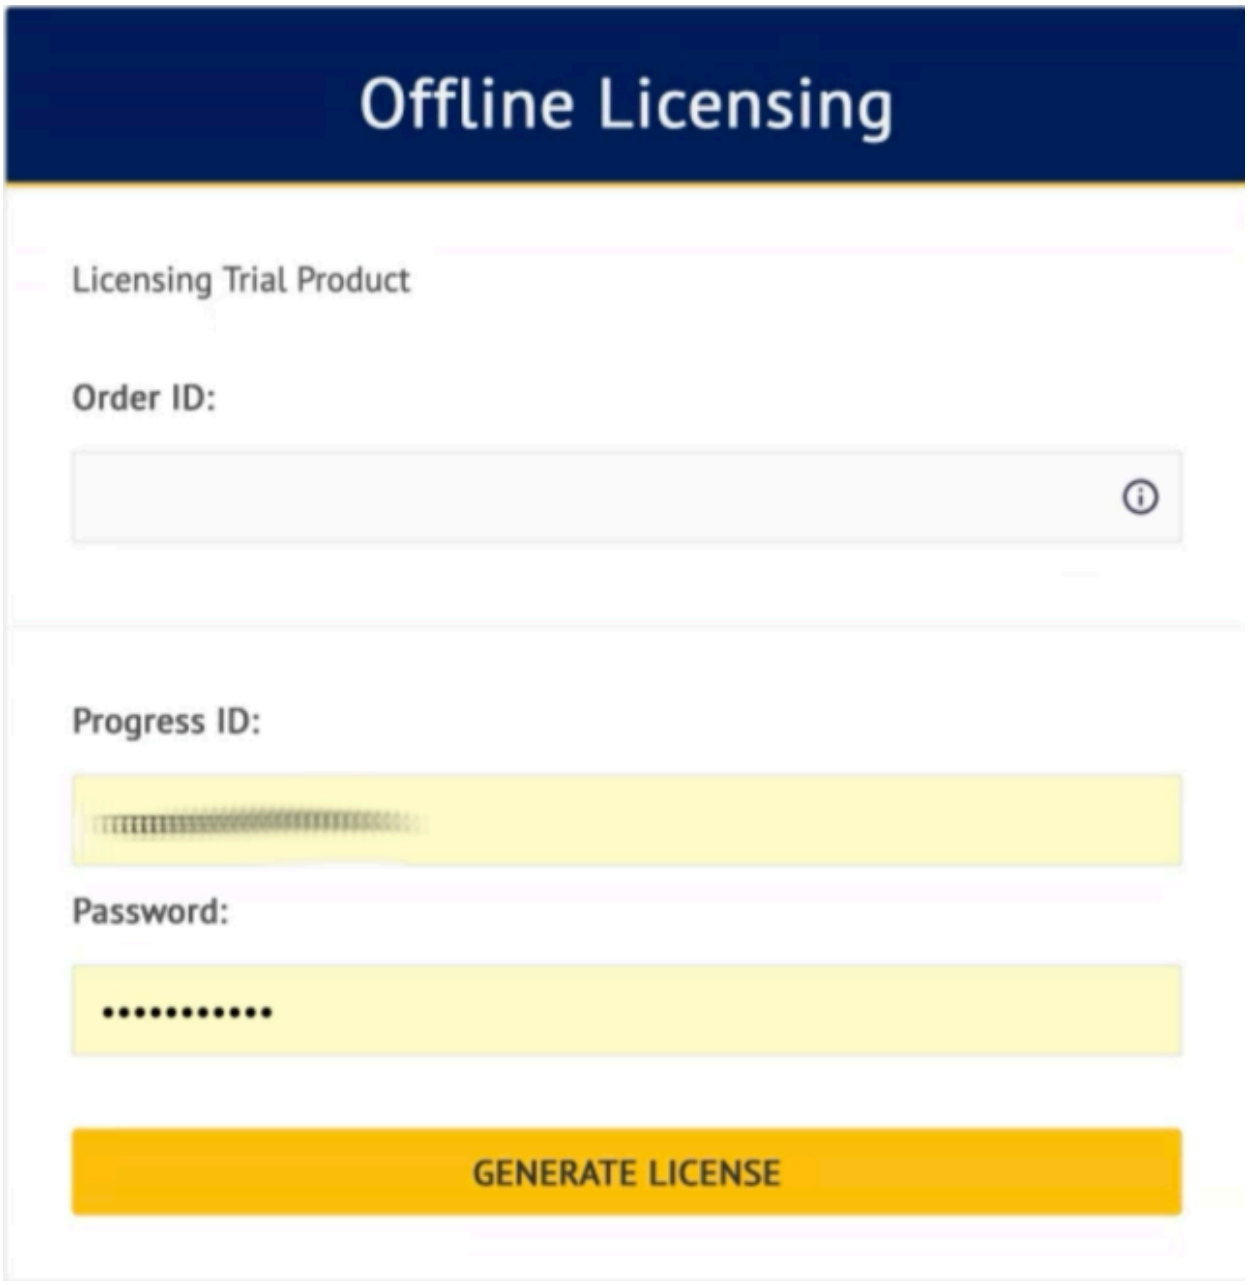

5. If you are licensing a Virtual LoadMaster, select the license action.
6. Enter an **Order ID** if you have one.

Note: After placing an order with Progress Kemp, you receive a confirmation email that typically includes your Order ID. The Order ID ensures that your LoadMaster is properly licensed. If you are applying a temporary license, you are not required to enter an **Order ID**. If this is the first time you are licensing this LoadMaster and you are adding a permanent license, the **Order ID** is required.

---

7. Enter the Progress ID. The Progress ID was formerly known as the Kemp ID. This is the email address used when initially registering for a Kemp ID or Progress ID.
8. Enter the **Password** of the Kemp account.

Note: If there are any parameters missing in the request that came from the LoadMaster, the complete form with all fields is displayed.

9. Click **GENERATE LICENSE**.

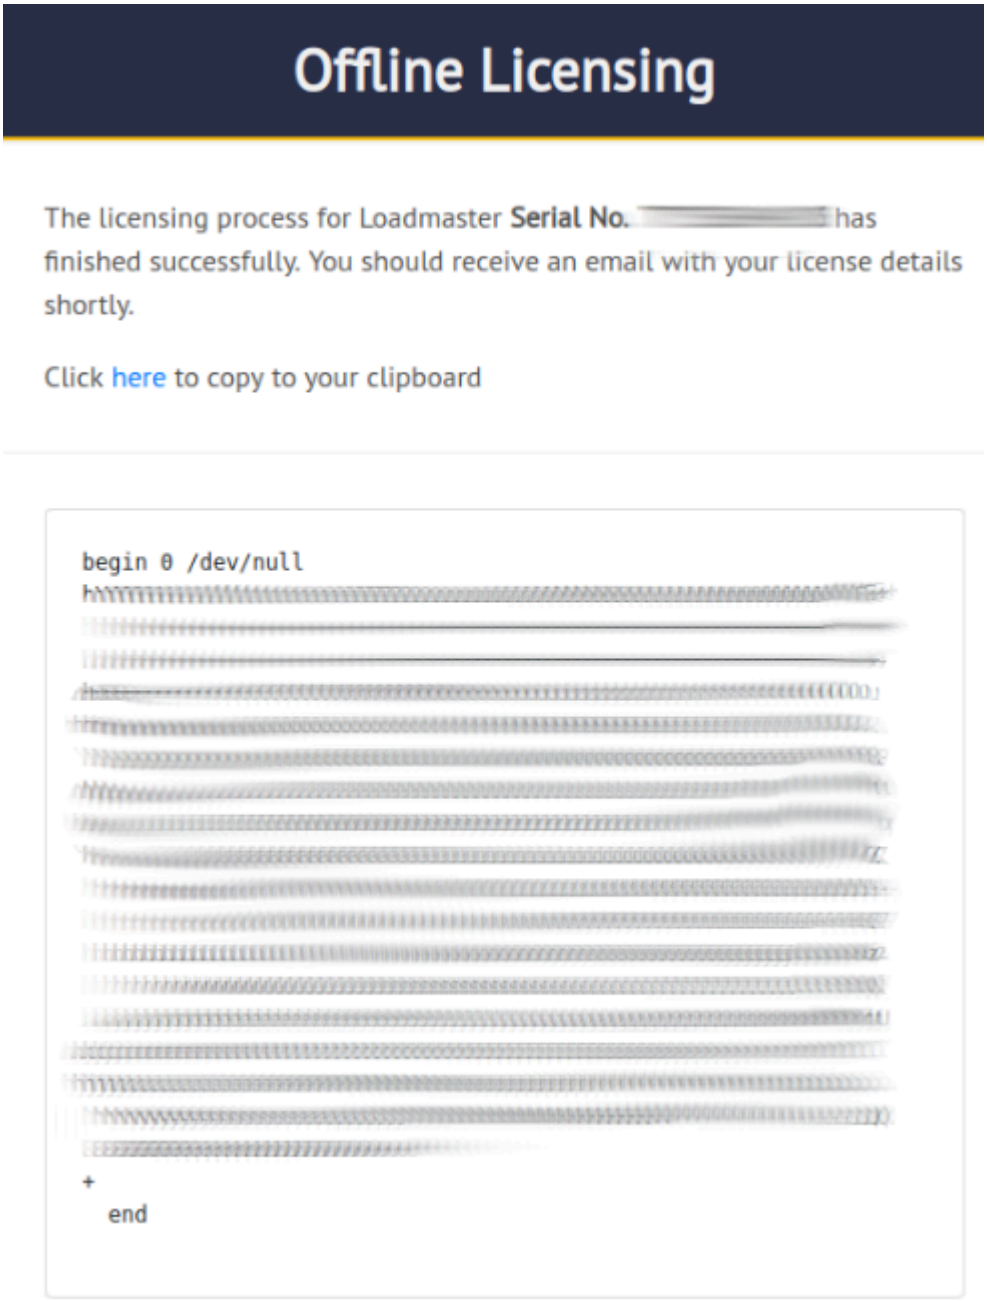

10. A page displays the license text. Click the **here** link to copy the license text. Go back to the LoadMaster UI.



11. Paste the license into the **License** text area and click **License Now**.
12. Click **OK**.

The LoadMaster is now fully installed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license.

For further details on how to configure the LoadMaster, refer to the various documents available on the LoadMaster documentation page.

Offline Licensing Through Accessing the Offline Licensing Page Directly

When accessing the offline licensing page directly, the fields that appear on the offline licensing page vary depending on what action you are performing.

Refer to the relevant section below depending on what licensing action you want to perform.

Contents

- First-Time Licensing of a Purchased LoadMaster
- Updating an Existing License
- Licensing a Trial LoadMaster
- Converting a Trial License to a Permanent License

First-Time Licensing of a Purchased LoadMaster

When you are in an isolated network, use a workstation with internet access within your organization and go to https://licensing.kemp.ax/offline. Complete the form with the requested information, because (in this case) it will not be pre-populated.

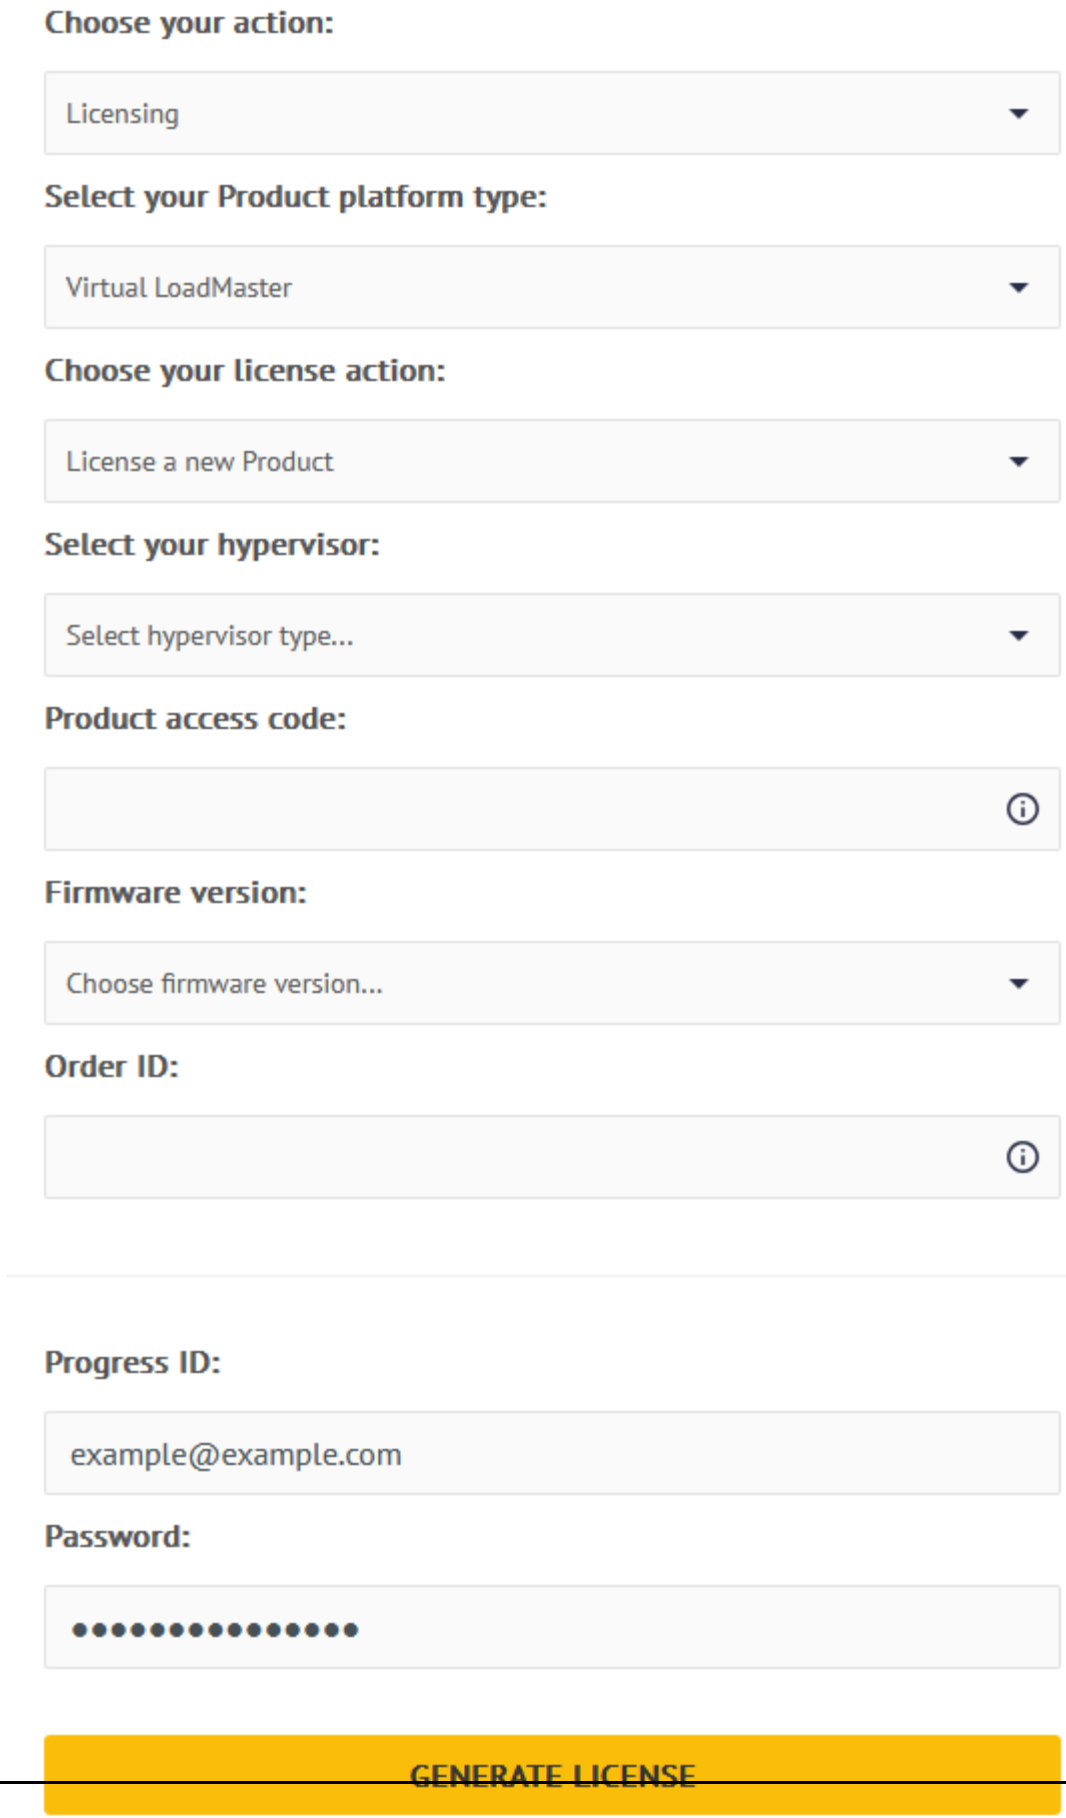
Choose your action:
Licensing
Select your Product platform type:
Virtual LoadMaster
Choose your license action:
License a new Product
Select your hypervisor:
Select hypervisor type...
Product access code:
Firmware version:
Choose firmware version...
Order ID:
Progress ID:
example@example.com
Password:
GENERATE LICENSE

1. Select **Licensing** as the action.
2. Select the relevant platform type.
3. Select **License a new Product** as the license action.
4. Select the hypervisor type, if relevant.
5. Enter the **Product access code**. This is displayed on the LoadMaster **Offline Licensing** page.
6. Select the **Firmware version**.
7. Enter the **Order ID**. This is provided by your Progress Kemp representative.
8. Enter the Progress ID. The Progress ID was formerly known as the Kemp ID. This is the email address used when initially registering for a Kemp ID or Progress ID.
9. Enter the **Password** of the Kemp account.
10. Click **GENERATE LICENSE**.

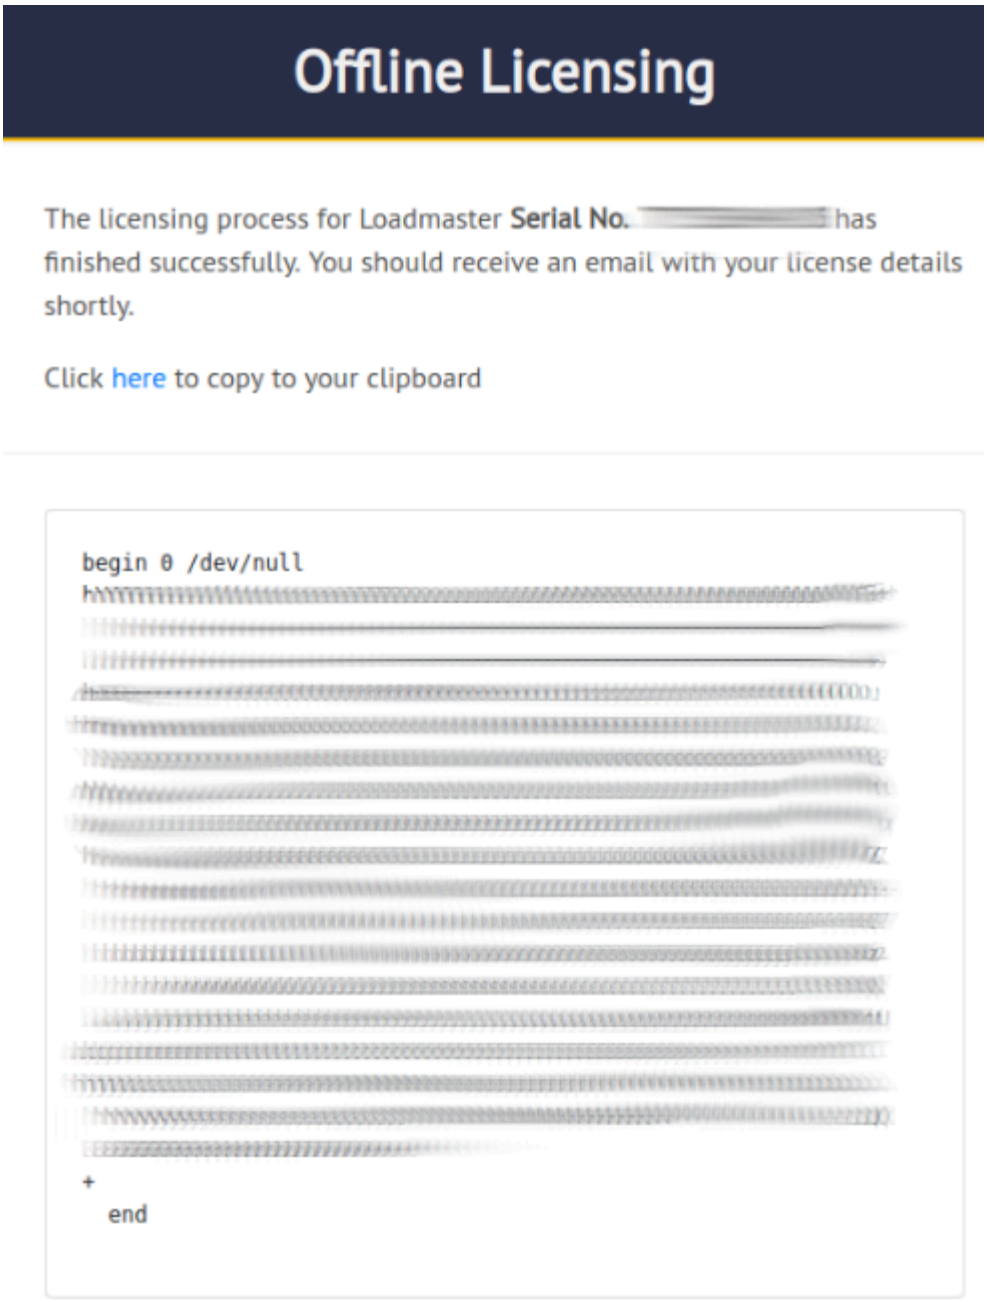

11. A page displays the license text. Click the **here** link to copy the license text. Go back to the LoadMaster UI.



12. Paste the license into the **License** text area and click **License Now**.
13. Click **OK**.

The LoadMaster is now fully installed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license.

For further details on how to configure the LoadMaster, refer to the various documents available on the LoadMaster documentation page.

Updating an Existing License

When you are in an isolated network, use a workstation with internet access within your organization and go to https://licensing.kemp.ax/offline. Complete the form with the requested information, because (in this case) it will not be pre-populated.

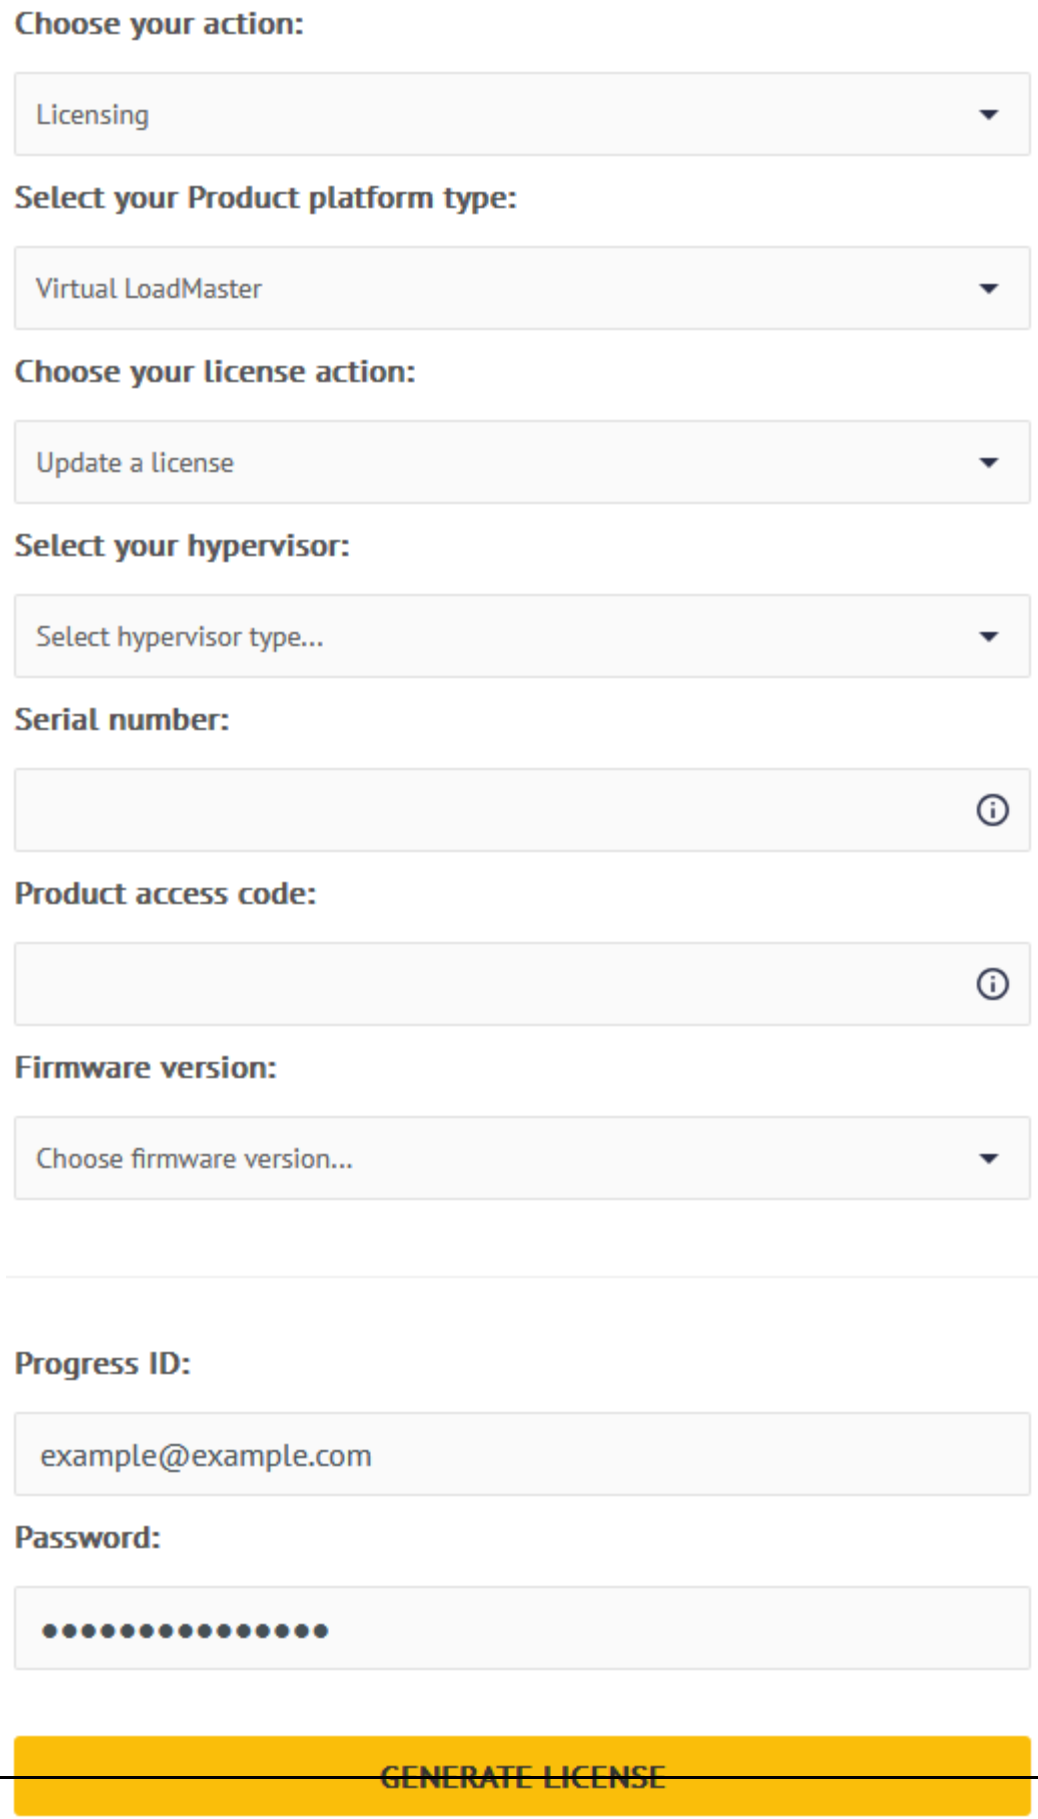
Choose your action:
Licensing
Select your Product platform type:
Virtual LoadMaster
Choose your license action:
Update a license
Select your hypervisor:
Select hypervisor type...
Serial number:
Product access code:
Firmware version:
Choose firmware version...
Progress ID:
example@example.com
Password:
GENERATE LICENSE

1. Select **Licensing** as the action.
2. Select the relevant platform type.
3. Select **Update a license** as the action.
4. Select the hypervisor type, if relevant.
5. Enter the **Serial number** of the LoadMaster. This is displayed on the LoadMaster home page.
6. Enter the **Product access code**. This is displayed on the LoadMaster **Offline Licensing** page (in **System Configuration > System Administration > License Management**.
7. Select the **Firmware version**. This is displayed in the top-right of the LoadMaster User Interface (UI).
8. Enter the Progress ID. The Progress ID was formerly known as the Kemp ID. This is the email address used when initially registering for a Kemp ID or Progress ID.
9. Enter the **Password** of the Kemp account.
10. Click **GENERATE LICENSE**.

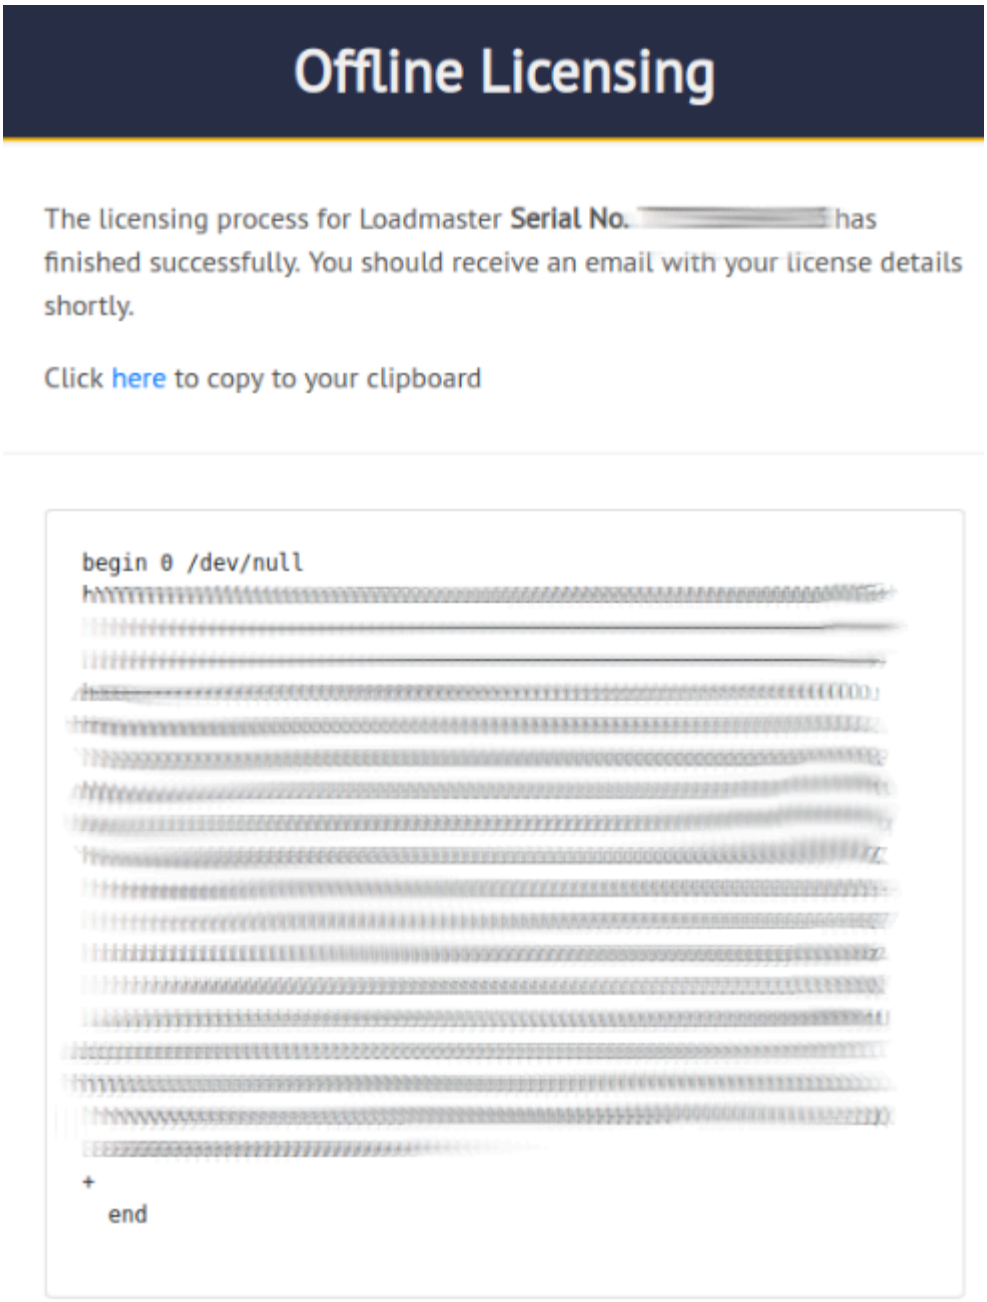

11. A page displays the license text. Click the **here** link to copy the license text. Go back to the LoadMaster UI.

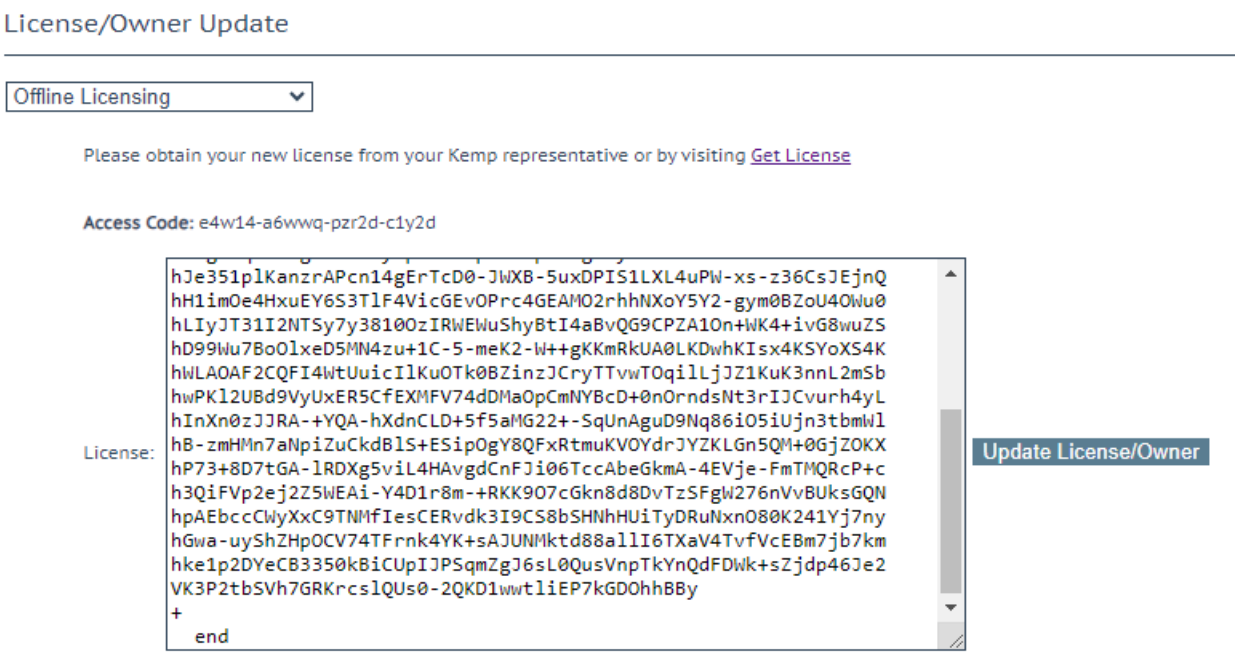

12. Paste the license into the **License** text area and click **Apply License**.
13. Click **OK**.

The LoadMaster is now fully installed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license.

For further details on how to configure the LoadMaster, refer to the various documents available on the LoadMaster documentation page.

Licensing a Trial LoadMaster

When you are in an isolated network, use a workstation with internet access within your organization and go to https://licensing.kemp.ax/offline. Complete the form with the requested information, because (in this case) it will not be pre-populated.

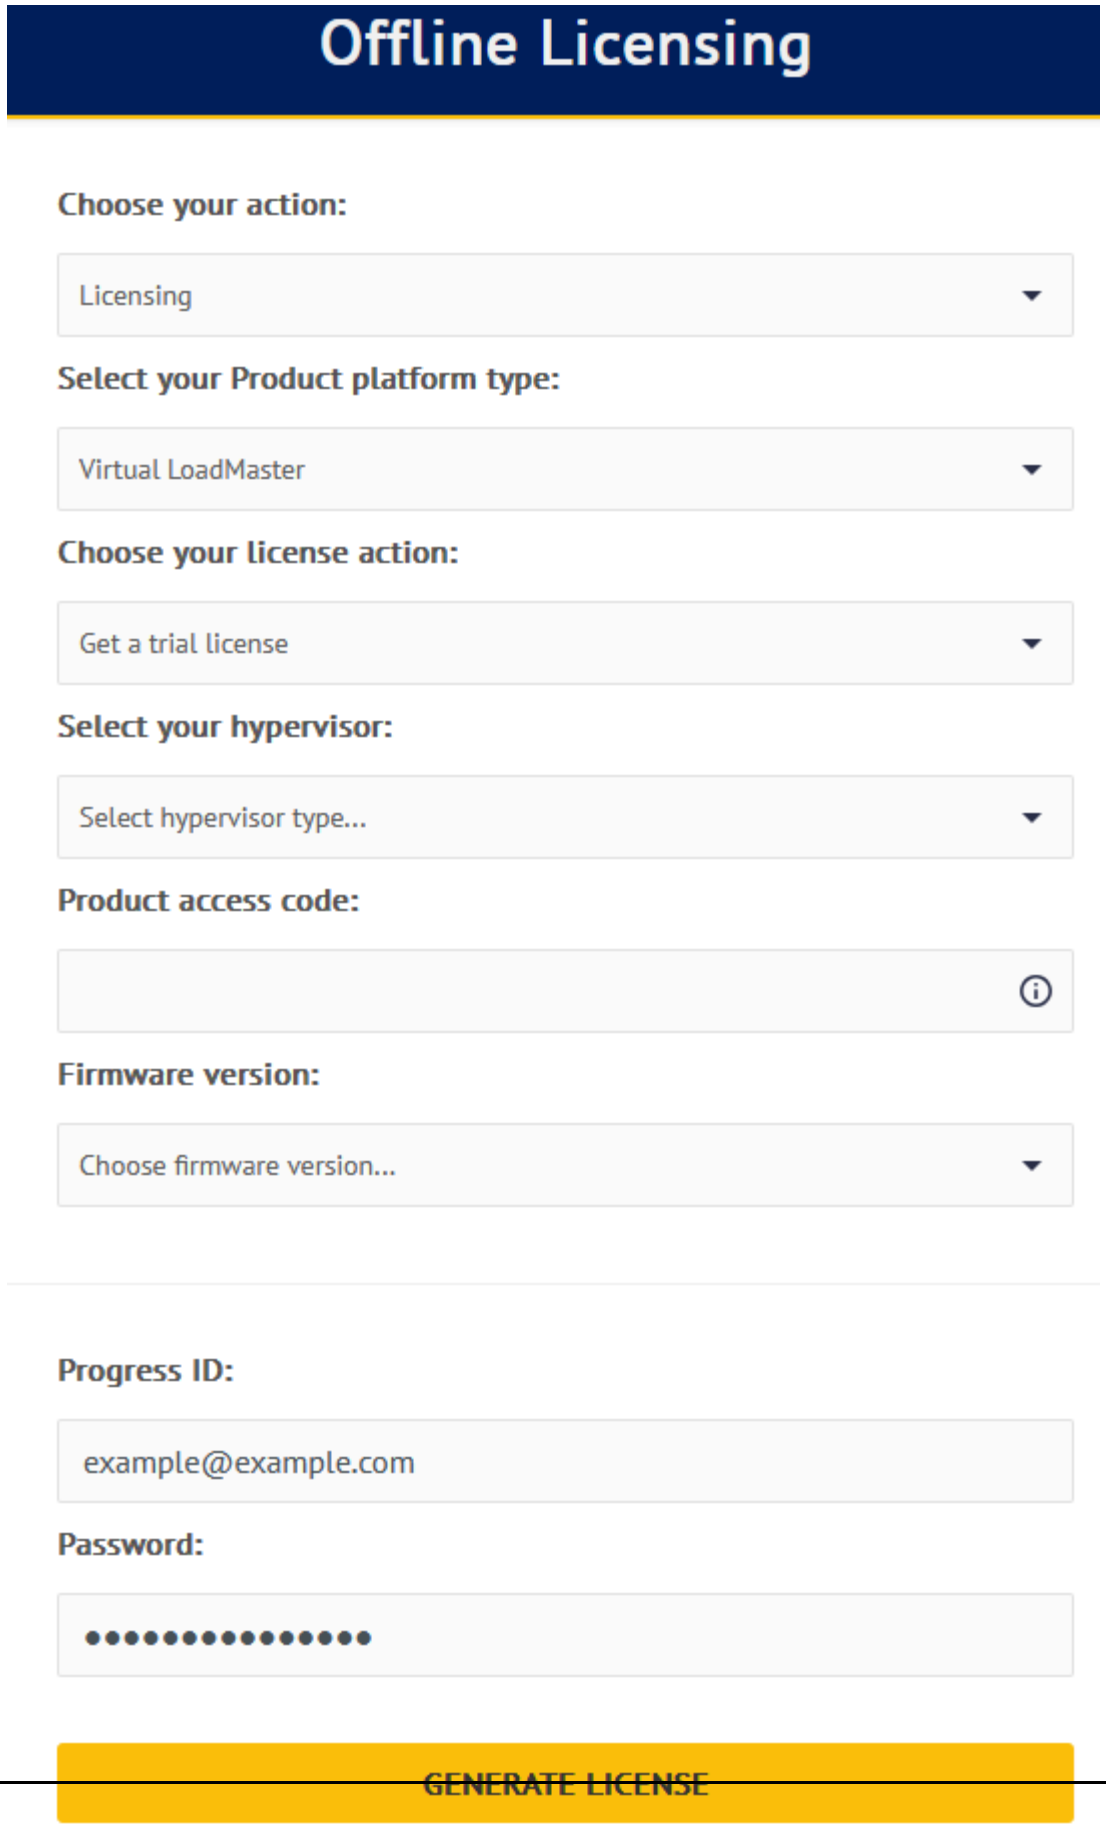
Offline Licensing
Choose your action:
Licensing
Select your Product platform type:
Virtual LoadMaster
Choose your license action:
Get a trial license
Select your hypervisor:
Select hypervisor type...
Product access code:
Firmware version:
Choose firmware version...
Progress ID:
example@example.com
Password:
GENERATE LICENSE

1. Select **Licensing** as the action.
2. Select the relevant platform type.
3. Select **Get a trial license** as the license action.
4. Select your hypervisor type, if relevant.
5. Enter the **Product access code**. This is displayed on the LoadMaster **Offline Licensing** page.
6. Select the **Firmware version**. This is displayed in the top-right of the LoadMaster User Interface (UI).
7. Enter the Progress ID. The Progress ID was formerly known as the Kemp ID. This is the email address used when initially registering for a Kemp ID or Progress ID.
8. Enter the **Password** of the Progress ID account.
9. Click **GENERATE LICENSE**.

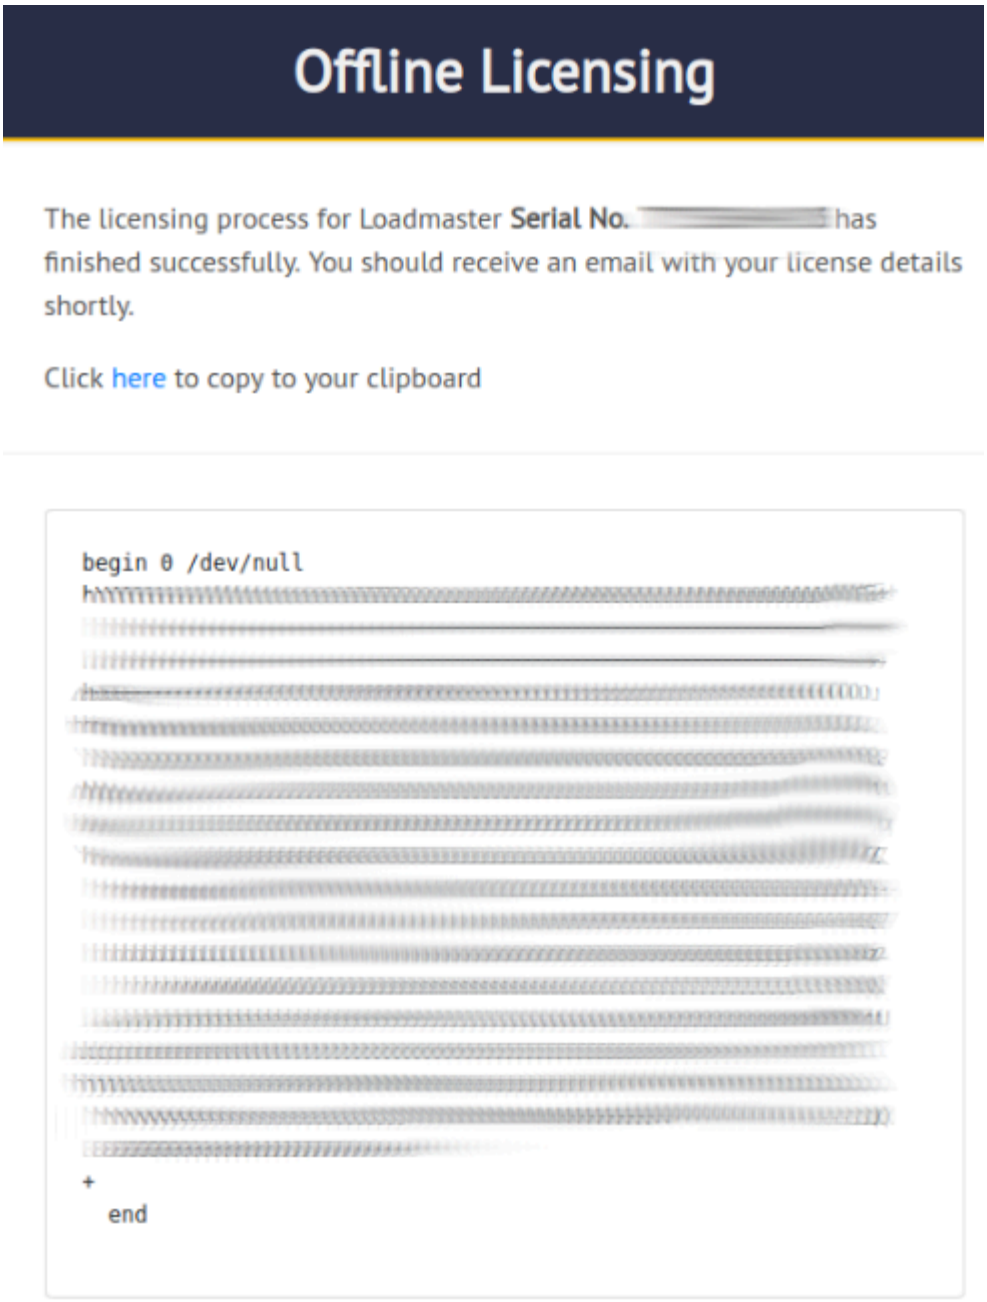

10. A page displays the license text. Click the **here** link to copy the license text. Go back to the LoadMaster UI.



11. Paste the license into the **License** text area and click **License Now**.
12. Click **OK**.

The LoadMaster is now fully installed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license.

For further details on how to configure the LoadMaster, refer to the various documents available on the LoadMaster documentation page.

Converting a Trial License to a Permanent License

When you are in an isolated network, use a workstation with internet access within your organization and go to https://licensing.kemp.ax/offline. Complete the form with the requested information, because (in this case) it will not be pre-populated.

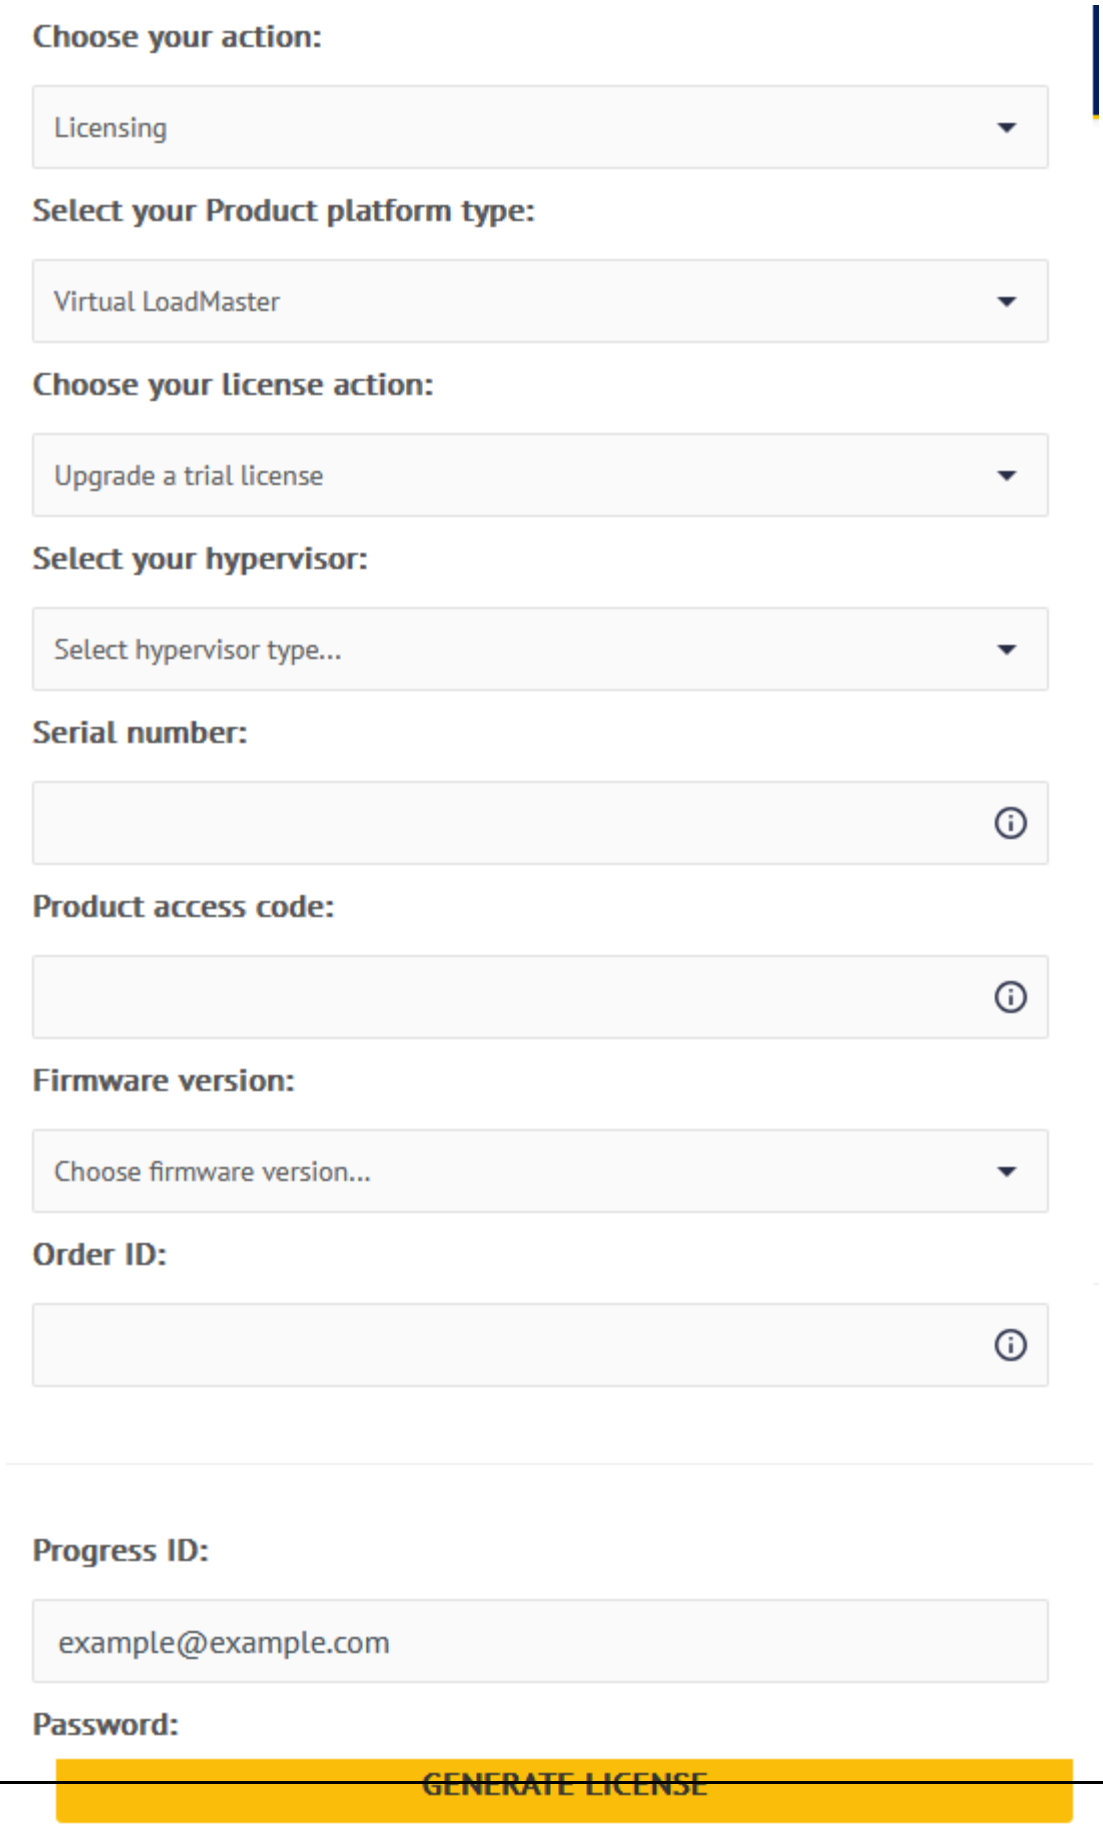
Choose your action:
Licensing
Select your Product platform type:
Virtual LoadMaster
Choose your license action:
Upgrade a trial license
Select your hypervisor:
Select hypervisor type...
Serial number:
Product access code:
Firmware version:
Choose firmware version...
Order ID:
Progress ID:
example@example.com
Password:
GENERATE LICENSE

1. Select **Licensing** as the action.
2. Select the relevant platform type.
3. Select **Upgrade a trial license** as the license action.
4. Select the hypervisor type, if relevant.
5. Enter the **Serial number** of the LoadMaster. This is displayed on the LoadMaster home page.
6. Enter the **Product access code**. This is displayed on the LoadMaster **Offline Licensing** page.
7. Select the **Firmware version**. This is displayed in the top-right of the LoadMaster User Interface (UI).
8. Enter the **Order ID**. This is provided by your Progress Kemp representative.
9. Enter the Progress ID. The Progress ID was formerly known as the Kemp ID. This is the email address used when initially registering for a Kemp ID or Progress ID.
10. Enter the **Password** of the Progress ID account.
11. Click **GENERATE LICENSE**.

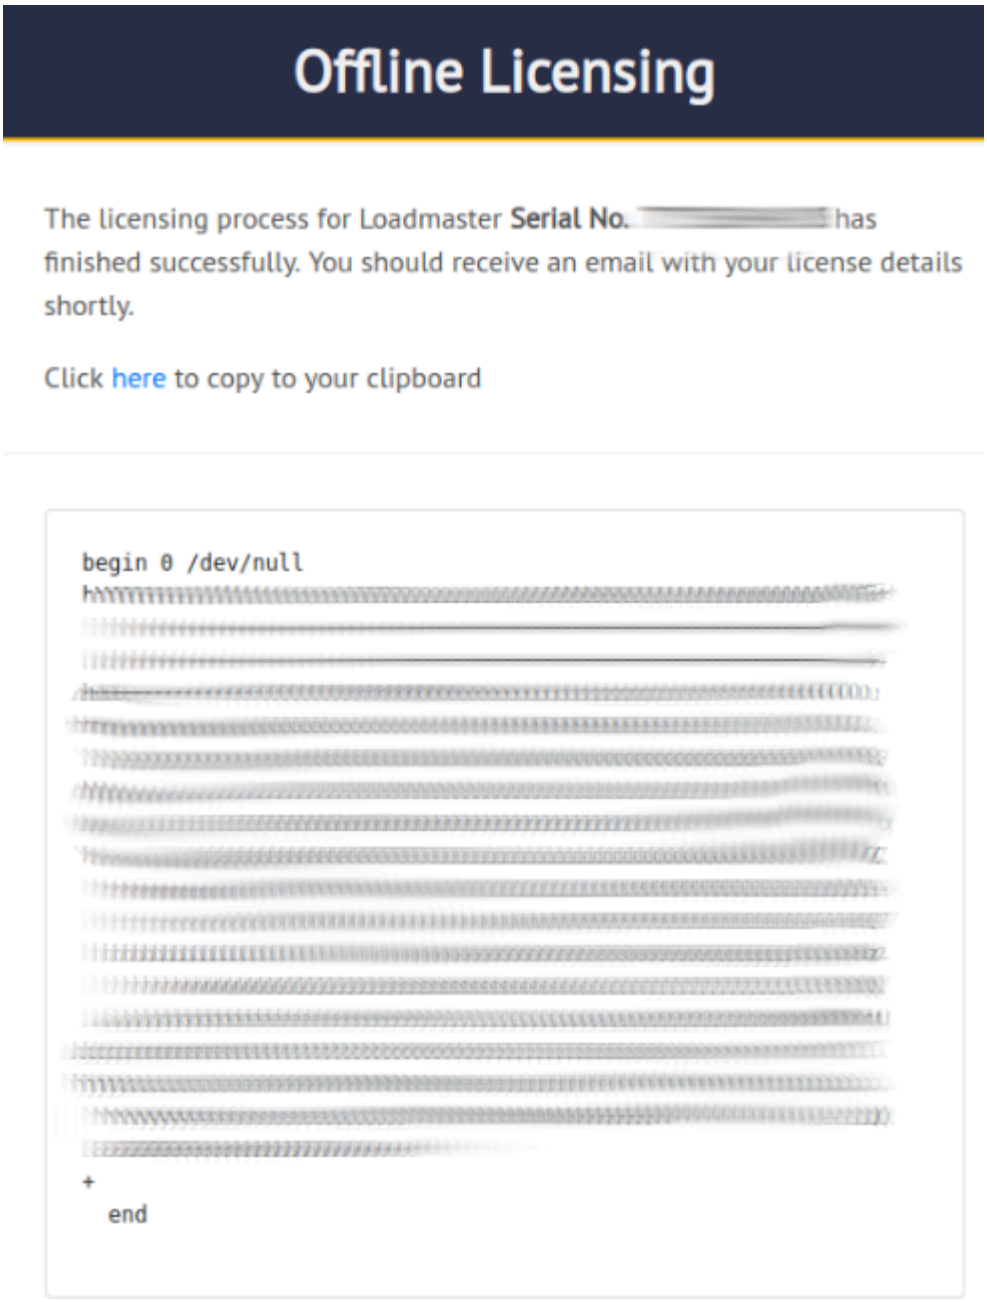

12. A page displays the license text. Click the **here** link to copy the license text. Go back to the LoadMaster UI.

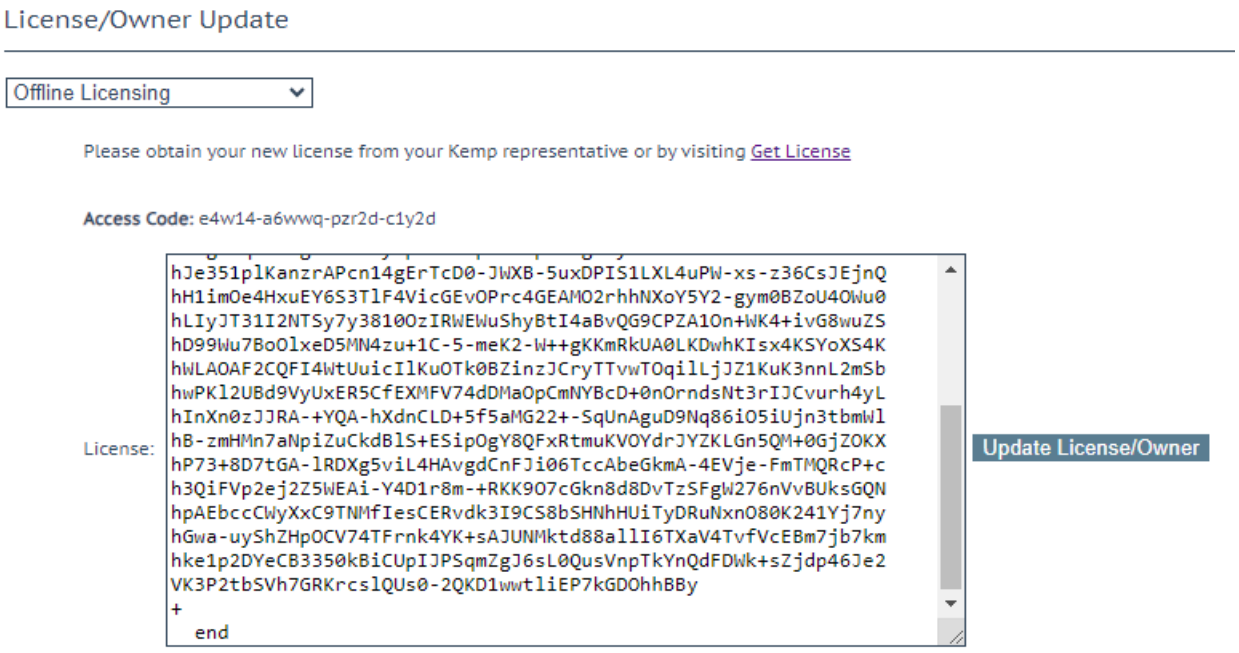

13. Paste the license into the **License** text area and click **Update License/Owner**.
14. Click **OK**.

The LoadMaster is now fully installed and ready to be configured. You may need to reboot the LoadMaster before you can see all features applied by the license.

For further details on how to configure the LoadMaster, refer to the various documents available on the LoadMaster documentation page.

3

Activate the LoadMaster license using LoadMaster 360

You can quickly license a newly-deployed, unlicensed LoadMaster and manage it through LoadMaster 360.

For details on how to license a newly-deployed, unlicensed LoadMaster using LoadMaster 360, refer to the Technical Note - LoadMaster Licensing in LoadMaster 360 document.

4

Troubleshooting

If licensing fails for any reason, various debug checks appear on the Web User Interface (WUI). You can use these options to troubleshoot problems that may occur when trying to license the LoadMaster.

WUI Troubleshooting Checks

If you try to license and there are any issues, some checks are performed automatically - the results and associated error message are displayed.

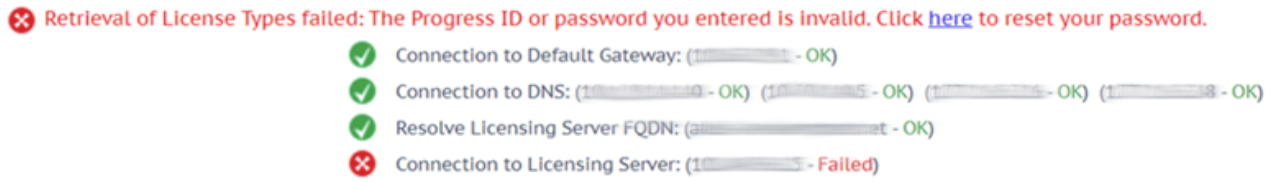

These checks perform the following tasks:

- Ping Default Gateway
- Ping DNS servers
- Ping Licensing Server

5

Temporary and Permanent Licenses

A Temporary License can be replaced by a Permanent License that can be obtained by contacting a Progress Kemp partner, by Contacting our Sales team, or by using the Upgrade option in the LoadMaster.

After contacting Progress Kemp Sales to upgrade the license, use the **License Management** screen in the LoadMaster WUI to update to a permanent license. We recommend rebooting the LoadMaster after updating the license to ensure all features get licensed appropriately.

A Temporary License has a time limit of 30 days. After 30 days the LoadMaster ceases to function. We recommend you keep regular backups of the LoadMaster configuration.

For further details on how to back up and restore the LoadMaster configuration, refer to the Backup and Restore Technical Note.

A temporary license cannot be added to a LoadMaster that currently has a temporary license in place.

The trial LoadMaster license is for the VLM-MAX model with Enterprise Plus Support. This includes the following features:

- Edge Security Pack (ESP) - for further details, refer to the ESP Feature Description
- Web Application Firewall (WAF) - for further details, refer to the WAF Feature Description
- GEO - for further details, refer to the GEO Feature Description

Depending on the Support type purchased, you may lose some of these features after changing from a temporary license (Enterprise Plus Support) to a permanent license (Support tier can vary).

Note: Pay As You Go (PAYG) LoadMaster instances in Azure and AWS receive permanent licenses by default.

Contents

- Transfer Permanent Licenses between LoadMaster devices

Transfer Permanent Licenses between LoadMaster devices

From 11th October 2022, all LoadMaster appliances on version 7.2.50 and above will have the ability to transfer their purchased permanent license from an existing LoadMaster device to another using the LoadMaster WUI. Users will no longer need to contact the Customer Support team in order to request a license transfer from one LoadMaster device to another in case of planned migration.

Note: Use the **Kill License** option with caution. Using the **Kill License** option makes the LoadMaster WUI inaccessible and will interrupt all LoadMaster services.

The prerequisites for transferring a LoadMaster license are as follows:

- You can only transfer a permanent license that is under active Support subscription.
- The transferred license can be applied to an existing Trial or Free LoadMaster or a newly deployed LoadMaster.
- You cannot transfer the following license types:
  - Service Provider License Agreement (SPLA)
  - Metered Enterprise Licensing Agreement (MELA)
  - Pooled
  - Pay As You Go (PAYG)
- You can only transfer LoadMaster licenses from firmware version 7.2.50 and above.

To transfer a permanent license from one LoadMaster device to another, you must kill your existing LoadMaster device license, and use the available license to license an existing Trial or Free LoadMaster or newly deployed LoadMaster using your Progress ID or Order ID.

Follow these steps to kill an existing LoadMaster license:

1. In the main menu of the LoadMaster WUI, go to **System Configuration > System Administration > License Management**.
2. Select **Online Licensing** from the drop-down list.
3. Enter the Progress ID (formerly Kemp ID) and Password.

4. Click **Kill License** to remove the license from this LoadMaster.
5. Once **Kill License** option is clicked, the LoadMaster WUI will be inaccessible and LoadMaster enters into an unlicensed state.
6. The Progress ID email address will receive an email notifying that the license was killed.

Follow these steps to apply the available license on another LoadMaster device:

1. Go to an already deployed Trial or Free LoadMaster WUI to which you intend to transfer the permanent license to.
2. In the main menu of the LoadMaster WUI, go to **System Configuration > System Administration > License Management**.
3. Select **Online Licensing** from the drop-down list.
4. Enter the Progress ID and Password.

   Note: You can also use the Order ID number if you are not the original license owner.

5. Click **Update License**.
6. Select the permanent license available under Subscription.

   Note: You may see more than one permanent license if there are multiple licenses available.

7. Click **Continue**.
8. On successful license transfer, all features of the old license will be available on the LoadMaster.

OR

1. Deploy a new LoadMaster device.
2. Enter the Progress ID and Password.

   Note: You can also use the Order ID number if you are not the original license owner.

3. Click **License Now**.
4. Select the permanent license available.

   Note: You may see more than one permanent license if you have multiple licenses available.

5. Click **Continue**.
6. On successful license transfer, all features of the old license will be available on the LoadMaster.

6

Updating a License

You can use the **License Management** function if your license has changed, for example if:

- You renewed support
- You renewed your license
- You changed your license type

Note: In LoadMaster firmware version 7.2.53, the **Update License** screen was renamed to **License Management** and the **Update License** button was renamed to **Update License/Owner**.

There are two ways to update a license – using the **Online** method and using the **Offline** method. Refer to the sections below for further details.

Go to the **System Configuration** > **System Administration** > **License Management** option in the main menu of the LoadMaster WUI. There are two ways to update the license – using the online method or the offline method. A drop-down list is provided on this page to select the method.

Follow the steps in the relevant section below.

Note: A Progress ID (formerly Kemp ID) is required to update a license.

Note: If you do not already have one, refer to the Register for a Progress ID section for instructions on how to register for a Progress ID.

Note: If you have a Progress ID but cannot remember the password, follow the instruction in the Reset the

Progress ID Password section to reset the password.

Note: To use a different Progress ID for this LoadMaster, ensure the new Progress ID has been set up and validated and then enter the new Progress ID when updating the license. If the Progress ID of the LoadMaster is changed, an email will be sent to the old Progress ID, the new Progress ID and to Progress Kemp.

Contents

- Update using the Online Licensing Method
- Update using the Offline Licensing Method

Update using the Online Licensing Method

To update the license using the online licensing method, follow these steps:

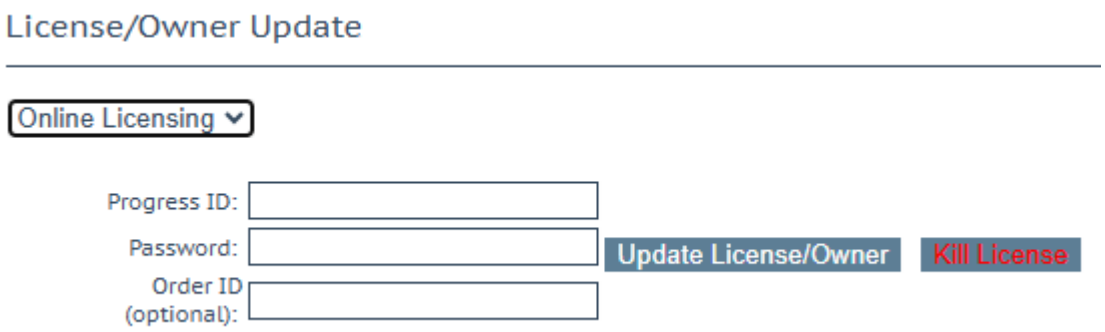

1. In the main menu of the LoadMaster WUI, go to **System Configuration > System Administration > License Management**.
2. Enter the Progress ID (formerly Kemp ID).
3. Enter the **Password** for the Kemp account.
4. Click **Update License/Owner**. An Update License screen appears. Click **Continue** to update the license.

   Note: Once the license is updated, a pop-up appears that says: “An updated license has been applied. A system reboot is recommended to ensure all features are licensed appropriately”. Click **Ok** to continue. You can check the updated license information under **System Configuration > System Administration > License Management**.
5. We recommend rebooting to activate the updated license.

Note: Do not click **Kill License** unless instructed to by Progress Kemp Support.

Update using the Offline Licensing Method

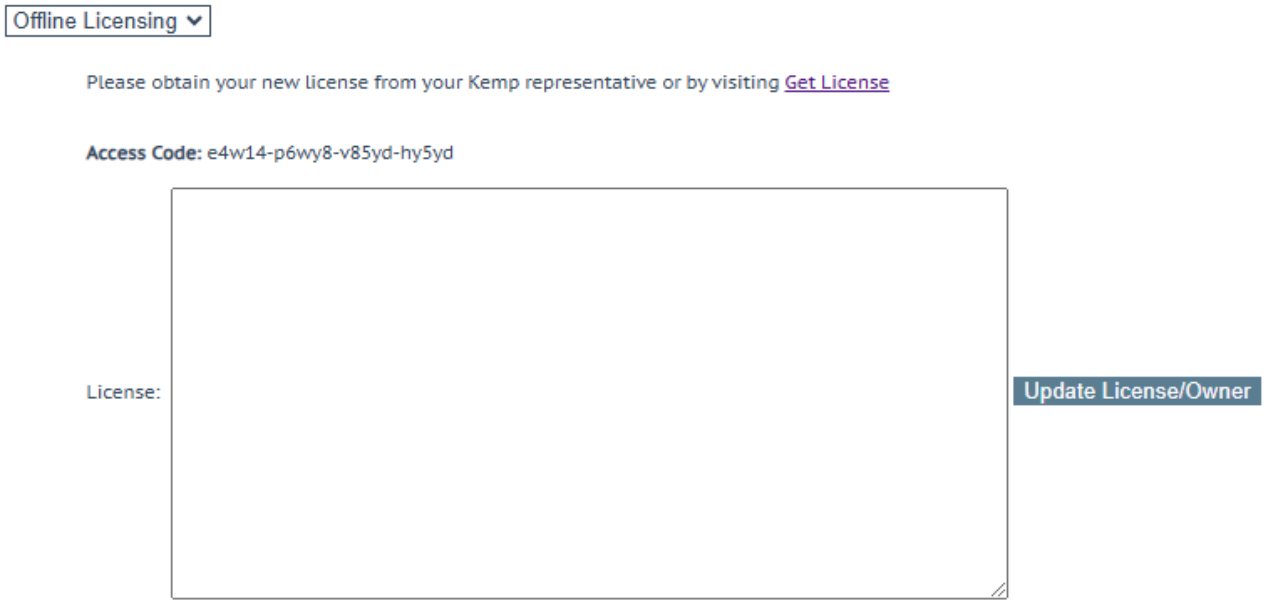

To upgrade the license using the offline method, you need to enter license text in the LoadMaster. You can either get this from Progress Kemp or by using the **Get License** link.

To get the license text using the **Get License** link:

1. Click the **Get License** link.

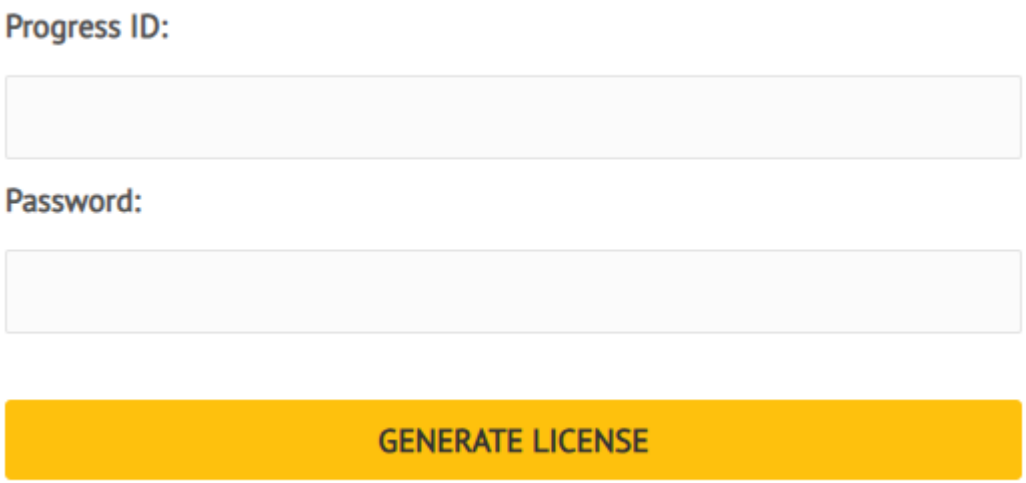

2. Enter the **Progress ID**. This is the email address used during Progress ID registration.
3. Enter the **Password** for the Kemp account.
4. Click **GENERATE LICENSE**.
5. A page displays showing the license text. Click the **here** link to copy the license text. Go back to the

LoadMaster UI.

6. Paste the license into the **License** text area and click **Apply License**.
7. Click **OK**.
8. Click **Update License/Owner**.
9. We recommend rebooting to activate the updated license.
10. To verify the updated license details, click the **Home** menu option that displays the license information on the LoadMaster UI.

7

Changing the Progress ID Associated with the License

If the email address associated with the LoadMaster needs to be changed, create a new Progress ID (https://sso.kemptechnologies.com/register) with the new email address and update the license using the new Progress ID (go to **System Configuration > System Administration > License Management** in the LoadMaster Web User Interface (WUI)).

Only a single Progress ID can be associated with the license. If you want a group to be associated with the Progress ID, then create a Progress ID that uses a group email address.

You can either use the online or offline method to update the license. Refer to the relevant section below for more details.

Note: Both the old and the new Progress ID email addresses will receive an email notifying that the ownership has changed.

Contents

- Changing the Progress ID - Online Method
- Changing the Progress ID - Offline Method

Changing the Progress ID - Online Method

To change the Progress ID associated with the license using the online method, follow these steps:

1. In the LoadMaster WUI, go to **System Configuration > System Administration > License Management**.
2. Select **Online Licensing** in the drop-down list.
3. Enter the Progress ID and **Password** of the new owner and click **Update License/Owner**.

Changing the Progress ID - Offline Method

The Offline Licensing method also allows you to change the ownership of the license. There are two ways to change the ownership using offline licensing - clicking the **Get License** link within the LoadMaster or accessing https://licensing.kemp.ax/offline directly. The workflow differs depending on which option you choose. Refer to the relevant section below for step-by-step instructions.

Change the Ownership Through the LoadMaster

To change the ownership of the license through the LoadMaster, follow these steps:

1. In the LoadMaster WUI, go to **System Configuration > System Administration > License Management**.
2. Select **Offline Licensing** from the drop-down list.
3. Click **Get License**.
4. Enter the **Progress ID** and **Password**.
5. Click **GENERATE LICENSE**.

If the Progress ID is different to the one already associated with the license, the ownership of the license will be updated to the new Progress ID.

Change the Ownership Through the Offline Licensing Page

To change the ownership of the license by accessing the offline licensing page directly, follow these steps:

1. In the LoadMaster WUI, go to **System Configuration > System Administration > License Management**.
2. Select **Offline Licensing** from the drop-down list.
3. Take note of the **Serial Number** and **Access Code**.
4. Go to https://licensing.kemp.ax/offline.
5. Select **Update License Owner** from the **Choose your action** drop-down list.
6. Enter the **Serial number** and **Product access code**.
7. Enter the new **Progress ID** and **Password** for the account that you want to change the ownership to.
8. Click **SUBMIT**.

8

Downgrading From LoadMaster Version 7 to Version 6

The format of the license stored in the LoadMaster in version 6 is different from version 7. Therefore, if the LoadMaster version is downgraded from version 7 to version 6, connectivity to the LoadMaster will be lost. To recover connectivity a new license needs to be installed using the console view.

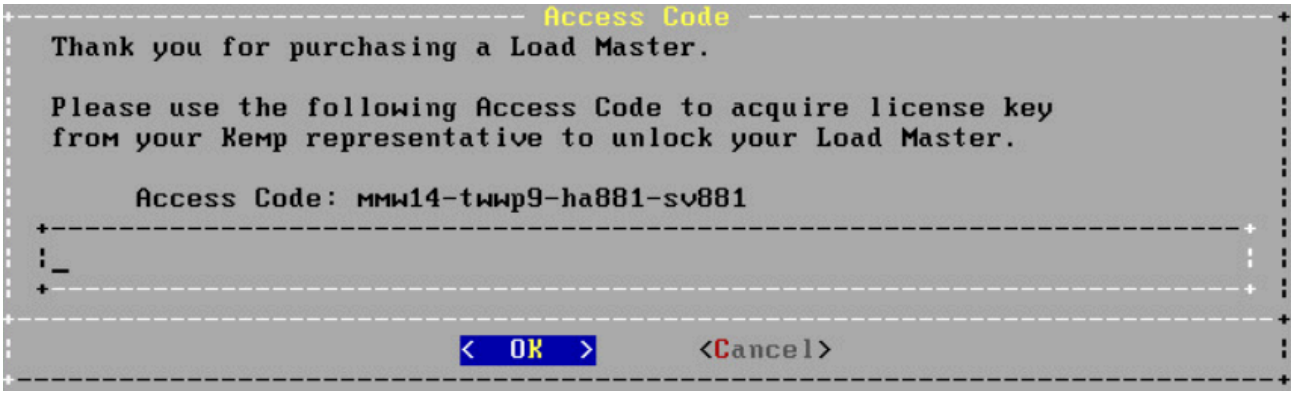

When you access the console, you will be asked to enter a license key. Go to https://licensing.kemp.ax/register/offLineLicensing.php and fill out the form. An email will be sent containing the license key.

Upgrading from version 6 to version 7 does not cause any problems.

9

References

Other useful documents are as follows:

XEN (Fully Virtualized) Installation Guide

Cisco UCS B-Series Blade Server Installation Guide

Cisco UCS C-Series Installation Guide

KVM Installation Guide

Microsoft Hyper V Installation Guide

Oracle VirtualBox Installation Guide

VMWare Installation Guide