

Bonding, VLAN and VXLAN

Feature Description

UPDATED: 27 July 2023

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

These materials and all Progress® software products are copyrighted and all rights are reserved by Progress Software Corporation. The information in these materials is subject to change without notice, and Progress Software Corporation assumes no responsibility for any errors that may appear therein. The references in these materials to specific platforms supported are subject to change.

#1 Load Balancer in Price/Performance, 360 Central, 360 Vision, Chef, Chef (and design), Chef Habitat, Chef Infra, Code Can (and design), Compliance at Velocity, Corticon, Corticon.js, DataDirect (and design), DataDirect Cloud, DataDirect Connect, DataDirect Connect64, DataDirect XML Converters, DataDirect XQuery, DataRPM, Defrag This, Deliver More Than Expected, DevReach (and design), Driving Network Visibility, Flowmon, Inspec, Ipswitch, iMacros, K (stylized), Kemp, Kemp (and design), Kendo UI, Kinvey, LoadMaster, MessageWay, MOVEit, NativeChat, OpenEdge, Powered by Chef, Powered by Progress, Progress, Progress Software Developers Network, SequeLink, Sitefinity (and Design), Sitefinity, Sitefinity (and design), Sitefinity Insight, SpeedScript, Stylized Design (Arrow/3D Box logo), Stylized Design (C Chef logo), Stylized Design of Samurai, TeamPulse, Telerik, Telerik (and design), Test Studio, WebSpeed, WhatsConfigured, WhatsConnected, WhatsUp, and WS_FTP are registered trademarks of Progress Software Corporation or one of its affiliates or subsidiaries in the U.S. and/or other countries.

Analytics360, AppServer, BusinessEdge, Chef Automate, Chef Compliance, Chef Desktop, Chef Workstation, Corticon Rules, Data Access, DataDirect Autonomous REST Connector, DataDirect Spy, DevCraft, Fiddler, Fiddler Classic, Fiddler Everywhere, Fiddler Jam, FiddlerCap, FiddlerCore, FiddlerScript, Hybrid Data Pipeline, iMail, InstaRelinker, JustAssembly, JustDecompile, JustMock, KendoReact, OpenAccess, PASOE, Pro2, ProDataSet, Progress Results, Progress Software, ProVision, PSE Pro, Push Jobs, SafeSpaceVR, Sitefinity Cloud, Sitefinity CMS, Sitefinity Digital Experience Cloud, Sitefinity Feather, Sitefinity Thunder, SmartBrowser, SmartComponent, SmartDataBrowser, SmartDataObjects, SmartDataView, SmartDialog, SmartFolder, SmartFrame, SmartObjects, SmartPanel, SmartQuery, SmartViewer, SmartWindow, Supermarket, SupportLink, Unite UX, and WebClient are trademarks or service marks of Progress Software Corporation and/or its subsidiaries or affiliates in the U.S. and other countries. Java is a registered trademark of Oracle and/or its affiliates. Any other marks contained herein may be trademarks of their respective owners.

Please refer to the NOTICE.txt or Release Notes – Third-Party Acknowledgements file applicable to a particular Progress product/hosted service offering release for any related required third-party acknowledgements.

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

Table of Contents

1 Introduction **4**

1.1 Prerequisites 4

1.1.1 Switch Configuration 4

1.2 Intended Audience 5

2 Bonding/Teaming (802.3ad/Active-Backup) **6**

2.1 Creating a Bond/Team 6

2.2 Removing a Bond/Team 8

3 VLAN Tagging **10**

3.1 Add a VLAN 10

3.2 Remove a VLAN 11

4 VXLAN **12**

4.1 Add a VXLAN 12

4.2 Remove a VXLAN 13

References **14**

Last Updated Date **15**

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

1 Introduction

LoadMaster bonding/Virtual LAN (VLAN) tagging can be easily set up and configured using the LoadMaster Web User Interface (WUI). Successful deployment requires that the pre-requisites have been satisfied.

The LoadMaster also supports Virtual Extensible LAN (VXLAN) and VXLAN Tunnel Endpoint (VTEP) capabilities. LoadMasters have the ability to proxy across VXLAN to non-VXLAN networks.

VXLAN is an overlay technology that encapsulates MAC frames at Layer 2 into a UDP header providing a way for multi-tenant “cloud” networks to span large networks. It is an overlay network in that it allows the creation of Layer 2 networks on top of Layer 3 networks. Communication is established between two or multiple tunnel end points called VTEPs which encapsulate Virtual Machine traffic in a VXLAN header as well as stripping the encapsulation off to present it to the destination Virtual Machine with the original Layer 2 packet. This allows Virtual Machine communication across subnets without the use of a Layer 3 router to bridge the segments via tunnelling.

This guide is designed to introduce interface bonding, VLAN and VXLAN configuration on the LoadMaster. Bonding support is available with all network modules.

1.1 Prerequisites

The switch being used must be compatible with:

- VLAN tagging

  - IEEE 802.1Q

- Bonding/teaming (802.3ad/Active-Backup)

  - IEEE 802.1AX/IEEE 802.3ad/LACP

> It is not possible to bond interfaces on Azure or Amazon Web Services (AWS) LoadMasters.

1.1.1 Switch Configuration

Enabling the Active-Backup mode generally does not require switch intervention and can be configured directly on the LoadMaster. Using the 802.3ad bonding mode will require configuring a link aggregation group on the switch in conjunction with the LoadMaster. Please read your switch

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

documentation to establish the corresponding team/bond. Common terms for link aggregation include "Ethernet trunk", "NIC teaming", "port channel", "port teaming", "port trunking", "link bundling", "EtherChannel", "Multi-Link Trunking (MLT)", "NIC bonding", "Network Fault Tolerance (NFT)" and “LAG”.

When enabling VLAN trunking on the switch port, make sure to configure the port to support the appropriate mode; General; Access or Trunking. Descriptions are as follows, but please check your switch documentation for specifics:

- General — The port belongs to VLANs, and each VLAN is user-defined as tagged or untagged (full 802.1Q mode)
- Access — The port belongs to a single untagged VLAN
- Trunk — The port belongs to VLANs in which all ports are tagged

1.2 Intended Audience

This document is intended to be read by anyone, specifically network administrators, who have an interest in finding out about bonding, VLAN and VXLAN configuration on the LoadMaster.

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

2 Bonding/Teaming (802.3ad/Active-Backup)

There are a few key points to keep in mind when creating bonds/teams:

- Interface bonding on the LoadMaster is supported in Azure, but bonding on the Azure switches is not
- You can only bond interfaces higher than the parent. For example, if you start with port 10 you can only add ports 11 and greater.
- When using a Virtual LoadMaster (VLM), all NICs must be added prior to configuring bonding or adding VLANs. If a new NIC is needed you must remove the bond and/or remove the VLANs.
- If VLAN tagging is required, bond the links first and then add VLANs after the bond has been configured
- Bonding interfaces 0 and 1 is not permitted
- You should never bond all interfaces
- In order to add a link to a bonded interface, any IP addressing must first be removed from the link to be added. The NIC to be added to the initial interface must not have an IP address.
- Enabling the Active-Backup mode generally does not require switch intervention
- The **802.3ad** mode is an active-active setup
- Ensure that all bonded interfaces are configured for the same link speed, both on the switch and the LoadMaster
- If you want to bond port 0, you should strongly consider moving the web administrative interface and/or the remote SSH access to a different port temporarily until that bonding has been completely configured


2.1 Creating a Bond/Team

To create a bond/team, follow the steps below:


1. In the main menu of the WUI, navigate to **System Configuration > Network Setup > Interfaces**.

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

2. Click the link for the relevant interface.

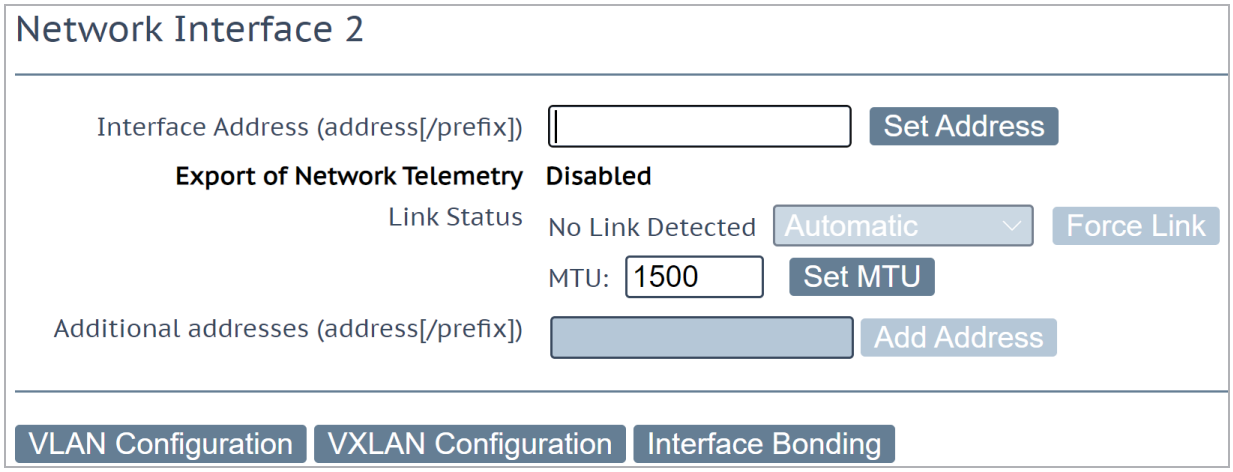


3. Click **Interface Bonding**.

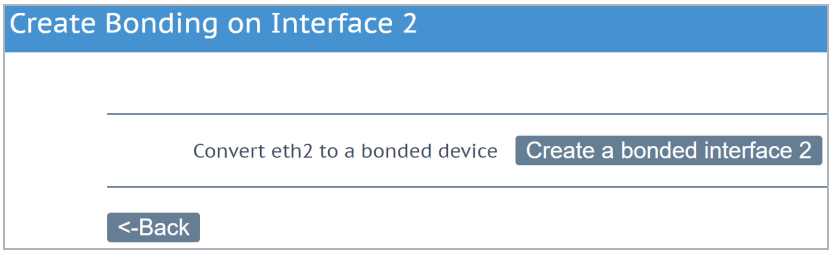

4. Click **Create a bonded interface**.

5. Click **OK**.


6. Click **OK** again.

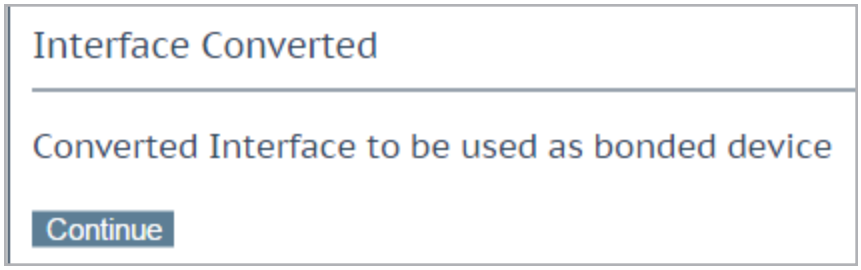


7. Click **Continue**.

8. In the main menu, select **System Configuration > Network Setup > Interfaces** and click the bnd link.

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

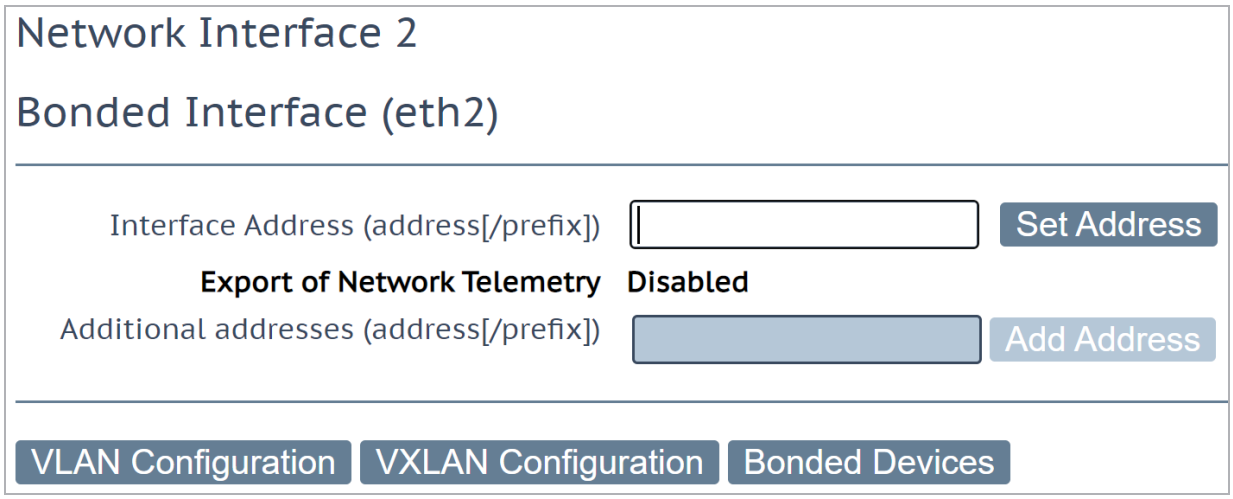

9. Click **Bonded Devices**.

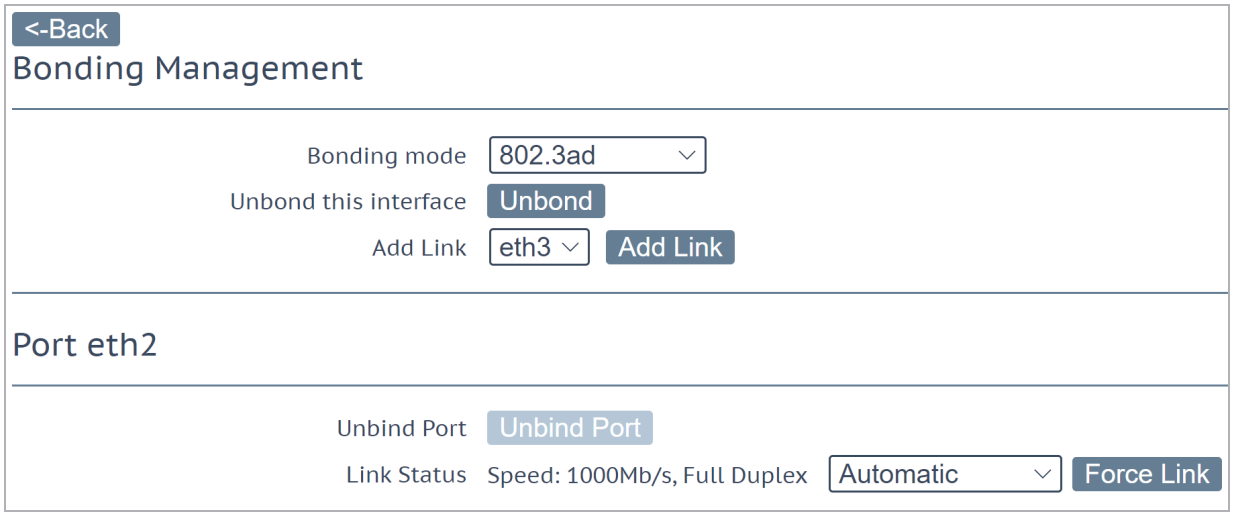

10. Select the relevant interface and click **Add Link**.


2.2 Removing a Bond/Team

To remove a bond/team, follow the steps below:

1. In the main menu of the LoadMaster WUI, go to **System Configuration > Network Setup > Interfaces**.

2. Select the bond to be removed.


© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

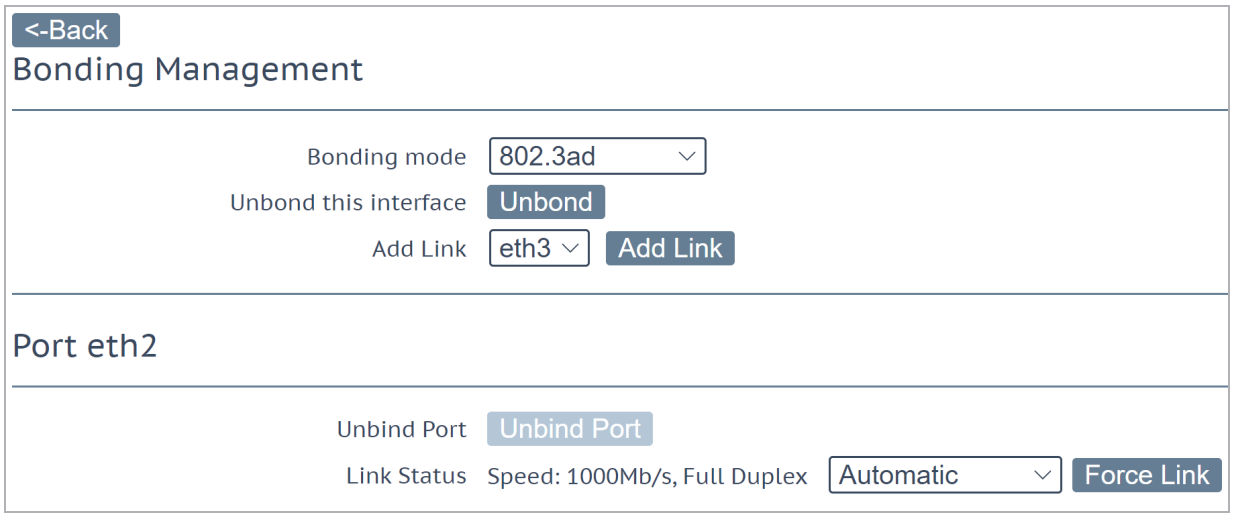

3. Click **Bonded Devices**.

4. Un-bind each port by clicking the **Unbind Port** button. Repeat this until all ports are removed from the bond.

5. Once all of the child ports have been un-bonded, the parent port can be unbonded by clicking **Unbond**.

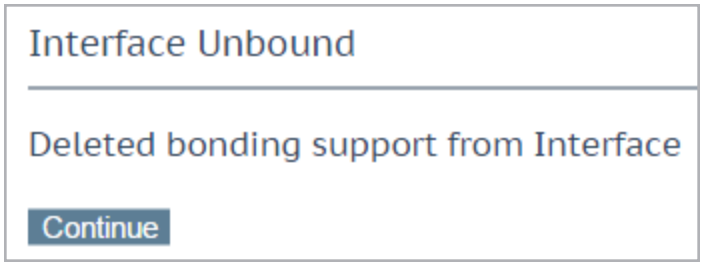

6. Click **Continue**.

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

3 VLAN Tagging


Things to keep in mind:

- Configure VLAN tagging on the switch first, if required
- Start by deciding if you need bonding. If you do, first establish the bonded configuration. Then, proceed by adding the VLAN tagging information.
- VLANs can be added to physical interfaces or bonded interfaces
- The VLAN interface IP address cannot be in the same subnet as the VXLAN interface

3.1 Add a VLAN

To add a VLAN, follow the steps below:

1. In the main menu of the WUI, go to **System Configuration > Network Setup > Interfaces**.
2. Click the relevant interface.

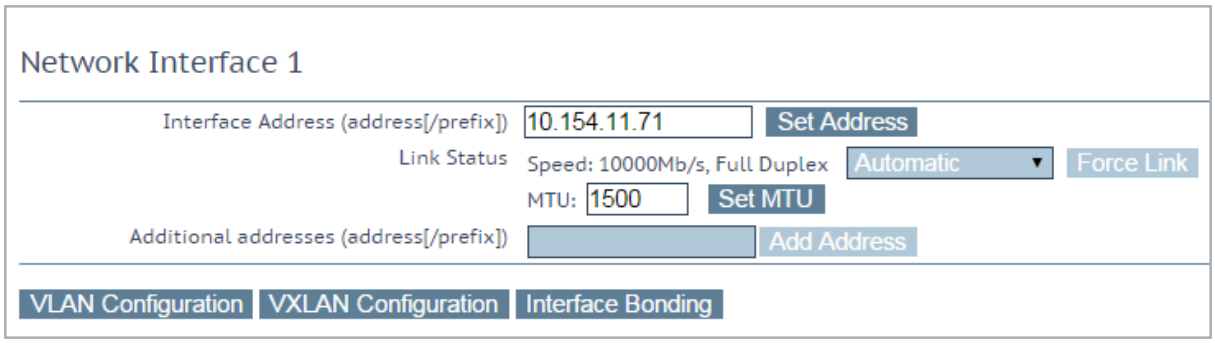

3. Click **VLAN Configuration**.
4. Enter the **VLAN Id** and click **Add New VLAN**.
5. Click **Continue**.
6. Repeat as needed.

To view the VLANs, in the main menu of the WUI, select **System Configuration > Network Setup > Interfaces** and expand the drop-down list.

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

3.2 Remove a VLAN

> Before removing a VLAN, please ensure that the interface is not being used for other purposes, for example as a multicast interface, WUI interface, SSH interface or a GEO interface.

To remove a VLAN select the **System Configuration > Network Setup > Interfaces** menu option and select the appropriate VLAN ID from the drop-down list.

Once selected, delete the IP and then click **Set Address**. Once the IP has been removed you will have the option to delete the VLAN, by clicking the **Delete this VLAN** button.

Repeat as needed. To view the VLANs select the **System Configuration > Network Setup > Interfaces** menu option and select the appropriate VLAN ID from the drop-down list.

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

4 VXLAN


There are a few key points to keep in mind when creating a VXLAN:

- VXLANs can be added to physical interfaces as well as bonded interfaces
- It is possible to create a VLAN on top of a VXLAN
- IPv6 is not supported for VXLAN
- VXLAN is not supported when LoadMaster clustering is configured
- VXLANs use UDP destination port **8472**
- The VXLAN interface IP address cannot be in the same subnet as the VLAN interface.


4.1 Add a VXLAN

To add a VXLAN to an interface in the LoadMaster, follow the steps below:

1. In the main menu of the LoadMaster WUI, go to **System Configuration > Network Setup** and click the relevant interface link.

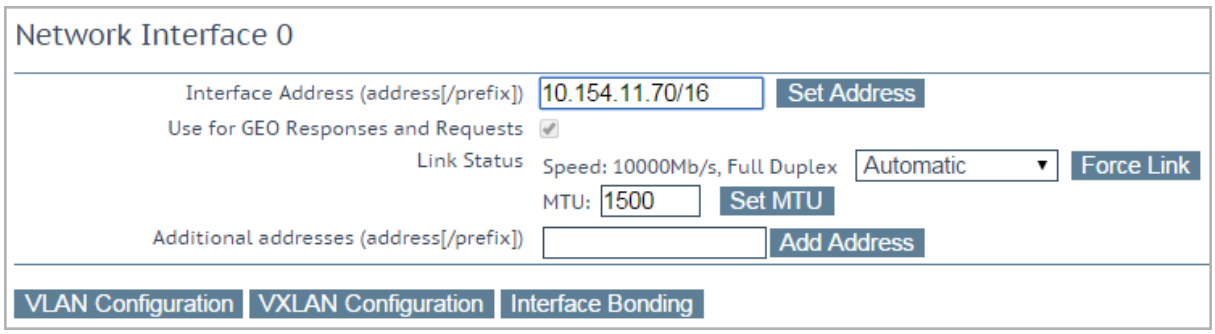

2. Click the VXLAN Configuration button.

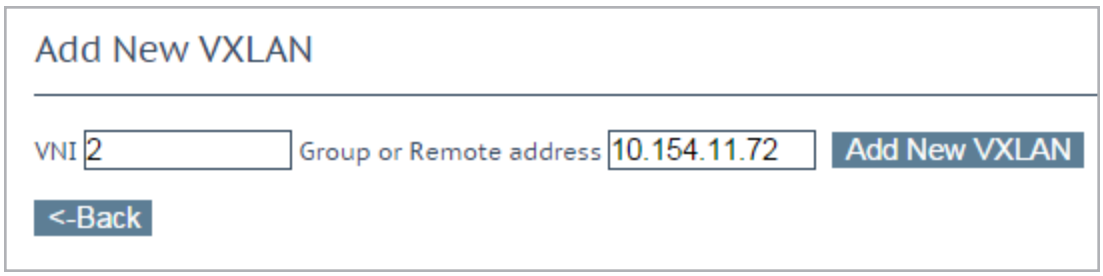

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

3. Enter a new VXLAN Network Identifier (**VNI**).

4. Enter the multicast group IP address or remote end-point (VTEP) IP address (in the case of a unicast point-to-point VXLAN).

5. Click **Add New VXLAN**.

6. To configure the VXLAN, go to **System Configuration > Network Setup** and select the relevant VXLAN from the drop-down list.



7. Enter the address of the interface and click **Set Address**.

> If configuring a VXLAN in a High Availability (HA) setup, you will also have to specify the **HA Shared IP address**, the **HA Partner IP address** and specify whether or not to use the interface for HA checks.

If required, a VLAN can be created on top of the VXLAN by clicking the **VLAN Configuration** button.

4.2 Remove a VXLAN

A VXLAN can only be deleted if there are no VLANs created on top of it and if there are no IP addresses assigned to the VXLAN. If a VLAN has been created on top of a VXLAN, first delete the VLAN and then you can delete the VXLAN.

To delete a VXLAN, follow the steps below:

1. In the main menu of the LoadMaster, go to **System Configuration > Network Setup** and select the relevant VXLAN from the drop-down list provided.

2. Click **Delete this VXLAN**, as shown in the screenshot above.

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

References

Unless otherwise specified, the following documents can be found at http://www.kemptechnologies.com/documentation.

Web User Interface, Configuration Guide

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

Last Updated Date

This document was last updated on 27 July 2023.

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.