Progress®
Kemp® LoadMaster®

Installation Guide Progress Kemp LBaaS Driver for OpenStack

Generated on: 10 April 2025

Copyright

Visit the following page online to see Progress Software Corporation's current Product Documentation Copyright Notice/Trademark Legend: Product Documentation Copyright Notice & Trademarks | Progress

Table of Contents

Chapter 1: Introduction 4

Document Purpose 4

Intended Audience 5

Chapter 2: Progress Kemp LBaaS OpenStack Driver. 6

Prerequisites 6

Install the Progress Kemp LBaaS OpenStack Driver Package 7

Topology Setup 9

Updating the Driver Package 10

1

Introduction

Introduction

OpenStack is a cloud computing software platform. It is primarily deployed as an Infrastructure as a Service (IaaS) solution. The technology consists of a series of interrelated projects that control pools of processing, storage and networking resources throughout a data center. This can be managed through a web-based dashboard, command-line tools or a RESTful API.

OpenStack lets users deploy Virtual Machines and other instances that handle different tasks for managing a cloud environment on the fly. With OpenStack, horizontal scaling is easy – more instances can be spun up in order to serve more users, as needed.

The Progress Kemp Load Balancer as a Service (LBaaS) OpenStack driver allows the LoadMaster to be deployed in OpenStack.

Related Links

- Document Purpose
- Intended Audience

Document Purpose

Document Purpose

This document explains how to install the Progress Kemp LBaaS driver in OpenStack and how to deploy a

LoadMaster instance in OpenStack.

Intended Audience

Intended Audience

This document is for anyone who is interested in finding out how to install and use the Progress Kemp LBaaS OpenStack driver.

2

Progress Kemp LBaaS OpenStack Driver

Progress Kemp LBaaS OpenStack Driver

For instructions on how to install and use the Progress Kemp LBaaS OpenStack driver, refer to the sections below.

Related Links

- Prerequisites
- Install the Progress Kemp LBaaS OpenStack Driver Package
- Topology Setup
- Updating the Driver Package


Prerequisites

Prerequisites

The following prerequisites must be in place before following these steps:

- OpenStack 8.0 (Liberty release) must be deployed.
- A LoadMaster must be deployed within OpenStack.
- Some of the commands in this document may require sudo or root access.

- The Application Program Interface (API) must be enabled on the LoadMaster. For instructions on how to do this, refer to the steps below:
  1. In the LoadMaster Web User Interface (WUI), go to **Certificates & Security > Remote Access**.

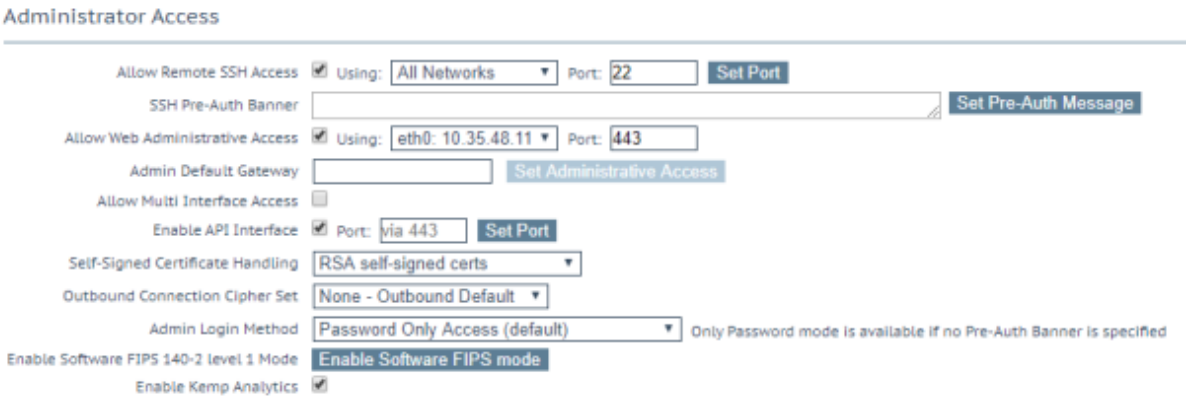

  2. Select the **Enable API Interface** check box.

Install the Progress Kemp LBaaS OpenStack Driver Package

Install the Progress Kemp LBaaS OpenStack Driver Package

The package can either be installed automatically (if a network connection is in place) or manually. Refer to the relevant section below for further information.

Enable LBaaS in OpenStack

To enable LBaaS, open the Command Line Interface (CLI) and follow the steps below:

1. Edit the **local_settings.py** file:

   vim /etc/openstack-dashboard/local_settings.py

2. Find the following block of code:

   OPENSTACK_NEUTRON_NETWORK = {

   'enable_lb': False }

3. Change **False** to **True**:

   OPENSTACK_NEUTRON_NETWORK = {

   'enable_lb': True }

Note: **True** is case sensitive and the case should be exactly as it is in this document.

4. Save the file.
5. Restart the web server:

   service apache2 restart

Automatically Install the Driver Package

To automatically install the driver package, open the Command Line Interface (CLI) and enter the following command:

pip install <NameOfKempOpenStackDriver>

For example:

pip install kemptech-openstack-lbaas

Manually Install the Driver Package

To manually install the driver package, follow the steps below:

1. Go to the following link: https://pypi.python.org/pypi/kemptech-openstack-lbaas/.
2. Download the .tar.gz file provided.
3. Extract the .tar.gz file.
4. In the CLI, find the relevant Python path by running the following commands:

   python

   import sys

   sys.path

   Note: The default path is usually **/usr/lib/python2.7/dist-packages**.

5. Copy the downloaded **kemptech_openstack_lbaas** folder into the **dist-packages** folder.

   Note: If updating the Progress Kemp driver package, overwrite the existing files.

Enable LBaaS Neutron with the LoadMaster Driver

Configure the **neutron.conf** and **neutron_lbaas.conf** files to use the Progress Kemp LBaaS plugin. To do this, follow the steps below:

1. Edit the **neutron.conf** configuration file:

   vim /etc/neutron/neutron.conf

2. Find the service_plugins line and add **neutron_lbaas.services.loadbalancer.plugin**

.LoadBalancerPluginv2, for example:

Note: A comma (**,**) is used to separate different service plugins.

3. At the bottom of the file, add the following:

   [kemptechnologies]

   lm_address = 172.16.2.129

   lm_username = bal

   lm_password = test1234

   For example:

   [kemptechnologies]

   lm_address = <LoadMasterIPAddress>

   lm_username = <LoadMasterUsername>

   lm_password = <LoadMasterPassword>

4. Save the changes made to the edited file.
5. Edit the **neutron_lbaas.conf** configuration file:

   vim /etc/neutron/neutron_lbaas.conf

6. Save the changes made to the edited file.
7. Go down to the **[service_providers]** section and add (or append, as needed) the following line:

   service_provider =
   LOADBALANCERV2:kemptechnologies:neutron_lbaas.drivers.kemptechnologies.driver_v2.KempLoadMasterDr

   Note: This is case sensitive.

   Note: If there are other LBaaS entries in the list, ensure the Progress Kemp one is set as the default.

8. Restart Neutron by running the following command:

   service neutron-server restart

Topology Setup

Topology Setup

Refer to the commands below to find out how to create a load balancer, listener, pool, members and health monitor:

- Get the Universally Unique Identifier (UUID) of the private subnet:

  neutron subnet-list

- Create a load balancer:

  neutron lbaas-loadbalancer-create --name lb1 private-subnet

- Create a listener (health check):

  neutron lbaas-listener-create --loadbalancer lb1 --protocol HTTP --protocol-port 80 --name listener1

- Create a pool and associate it with the previously created listener:

  neutron lbaas-pool-create --lb-algorithm ROUND_ROBIN --listener listener1 --protocol HTTP --name pool1

- Create members (Real Servers):

  neutron lbaas-member-create --subnet private-subnet --address <ServerIPAddress> --protocol-port 80 pool1

- Create a health monitor and associate it with the pool:

  neutron lbaas-healthmonitor-create --delay 3 --type HTTP --max-retries 3 --timeout 3 --pool pool1

Updating the Driver Package

Updating the Driver Package

Updating the Driver Package

To update the driver package, refer to the relevant point below:

- **Automatic:** Run the following command in the CLI:

  pip install -U <NameOfKempOpenStackDriver>

  For example:

  pip install --upgrade kemptech-openstack-lbaas

- **Manual:** To manually update the driver package, follow the steps in the Manually Install the Driver Package section but overwrite the existing files.