



Nutanix

Installation Guide

UPDATED: 27 July 2023

© 2022 Progress Software Corporation and/or one of its subsidiaries or affiliates. All rights reserved.

These materials and all Progress® software products are copyrighted and all rights are reserved by Progress Software Corporation. The information in these materials is subject to change without notice, and Progress Software Corporation assumes no responsibility for any errors that may appear therein. The references in these materials to specific platforms supported are subject to change.

#1 Load Balancer in Price/Performance, 360 Central, 360 Vision, Chef, Chef (and design), Chef Habitat, Chef Infra, Code Can (and design), Compliance at Velocity, Corticon, Corticon.js, DataDirect (and design), DataDirect Cloud, DataDirect Connect, DataDirect Connect64, DataDirect XML Converters, DataDirect XQuery, DataRPM, Defrag This, Deliver More Than Expected, DevReach (and design), Driving Network Visibility, Flowmon, Inspec, Ipswitch, iMacros, K (stylized), Kemp, Kemp (and design), Kendo UI, Kinvey, LoadMaster, MessageWay, MOVEit, NativeChat, OpenEdge, Powered by Chef, Powered by Progress, Progress, Progress Software Developers Network, SequeLink, Sitefinity (and Design), Sitefinity, Sitefinity (and design), Sitefinity Insight, SpeedScript, Stylized Design (Arrow/3D Box logo), Stylized Design (C Chef logo), Stylized Design of Samurai, TeamPulse, Telerik, Telerik (and design), Test Studio, WebSpeed, WhatsConfigured, WhatsConnected, WhatsUp, and WS_FTP are registered trademarks of Progress Software Corporation or one of its affiliates or subsidiaries in the U.S. and/or other countries.

Analytics360, AppServer, BusinessEdge, Chef Automate, Chef Compliance, Chef Desktop, Chef Workstation, Corticon Rules, Data Access, DataDirect Autonomous REST Connector, DataDirect Spy, DevCraft, Fiddler, Fiddler Classic, Fiddler Everywhere, Fiddler Jam, FiddlerCap, FiddlerCore, FiddlerScript, Hybrid Data Pipeline, iMail, InstaRelinker, JustAssembly, JustDecompile, JustMock, KendoReact, OpenAccess, PASOE, Pro2, ProDataSet, Progress Results, Progress Software, ProVision, PSE Pro, Push Jobs, SafeSpaceVR, Sitefinity Cloud, Sitefinity CMS, Sitefinity Digital Experience Cloud, Sitefinity Feather, Sitefinity Thunder, SmartBrowser, SmartComponent, SmartDataBrowser, SmartDataObjects, SmartDataView, SmartDialog, SmartFolder, SmartFrame, SmartObjects, SmartPanel, SmartQuery, SmartViewer, SmartWindow, Supermarket, SupportLink, Unite UX, and WebClient are trademarks or service marks of Progress Software Corporation and/or its subsidiaries or affiliates in the U.S. and other countries. Java is a registered trademark of Oracle and/or its affiliates. Any other marks contained herein may be trademarks of their respective owners.

Please refer to the NOTICE.txt or Release Notes – Third-Party Acknowledgements file applicable to a particular Progress product/hosted service offering release for any related required third-party acknowledgements.

Table of Contents

1 Introduction	4
2 Installing a VLM	5
2.1 Static MAC Addresses must be Configured	5
2.2 Download the KVM VLM	5
2.3 Extract the KVM Disk Image	5
2.4 Add Image to Nutanix AHV Using Prism Central	6
2.5 Deploy the Kemp LoadMaster from an Image Using Prism Central	7
2.6 Start the Kemp LoadMaster	11
2.7 License and Configure the LoadMaster	12
3 Troubleshooting	16
3.1 Configuring the LoadMaster Using the Console	16
3.2 Nutanix Cloning	18
3.3 Factory Reset	18
3.4 Preventingagetty##: ttyS0: ioctl: Input/output Errors	18
References	19
Last Updated Date	20

1 Introduction

The Kemp Virtual LoadMaster (VLM) is a version of the Kemp LoadMaster that runs as a Virtual Machine (VM) in a hypervisor and can provide all the features and functions of a hardware-based LoadMaster.

This document describes the installation of the VLM in a Nutanix Acropolis Hypervisor Virtualization (AHV) environment. The VLM has been tested with Nutanix AHV and has been certified as **Nutanix Ready**.

Nutanix AHV is a license-free virtualization solution included with Acropolis that delivers enterprise virtualization ready for a multi-cloud world. With Acropolis and AHV, virtualization is tightly integrated into the Enterprise Cloud OS rather than being layered on as a standalone product that must be licensed, deployed, and managed separately. Common tasks such as deploying and protecting VMs are managed centrally through Nutanix Prism, rather than utilizing disparate products and policies in a piecemeal strategy.

There are several different versions of the VLM available. Full details of the currently supported versions are available on our website: www.kemptechnologies.com.

The Nutanix virtual machine guest environment for the VLM, at minimum, must include:

- 2 x virtual processors
- 2 GB RAM
- 16 GB virtual hard disk capacity (sparse where possible)

There may be maximum configuration limits imposed by Nutanix such as maximum RAM per VM, Virtual Network Interface Controllers (NICs) per VM, and so on. For further details regarding the configuration limits imposed by Nutanix, refer to the relevant Nutanix documentation.

2 Installing a VLM

The following instructions describe how to install a VLM in a Nutanix AHV environment using Prism Central.

2.1 Static MAC Addresses must be Configured

If you move a VLM system to a different VM, ensure that the MAC addresses of the VMs NICs stay the same. Static Media Access Control (MAC) addresses must be configured for all NICs in VMs.

For further information on configuring static MAC addresses, refer to the relevant Nutanix AHV documentation.

2.2 Download the KVM VLM

The VLM is packaged in a .disk file for ease of deployment. This file can be freely downloaded from Kemp for a 30-day evaluation period. To download the VLM, follow the instructions below:

1. Go to <http://www.Kemptechnologies.com/try>.
2. Click **Download Now**.
3. Log in using your Kemp ID. If you do not have one, sign up for one using the form provided.
4. In the **Select your hypervisor** section, select **KVM/XEN**.
5. Select your country from the drop-down list provided.
6. Read the End User License Agreement.
7. To proceed with the download, ensure you select the **I agree to the End User License Agreement terms** check box.
8. Click **Download**.


2.3 Extract the KVM Disk Image

The Linux disk image has been tar gzipped as a sparse file. You must unzip it as a sparse file to ensure proper operation. For example:

tar xzSf LoadMaster-VLM.7.1.34.0.12345.RELEASE.tgz:

2.4 Add Image to Nutanix AHV Using Prism Central

You must upload the Kemp LoadMaster KVM image (.disk) into the Nutanix AHV environment. The steps in this section are being executed in Nutanix Prism Central:

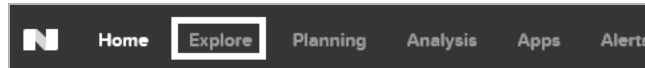


1. In the top navigation, click **Explore**.

Entities	
VIRTUAL INFRASTRUCTURE	
VMs	70
Storage Containers	10
Catalog Items	2
Images	34


2. In the left-hand navigation, click **Images**.



3. Click **Add Image**.

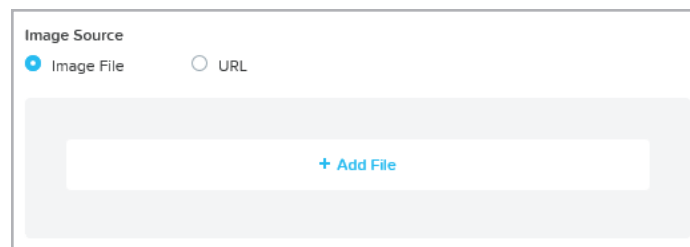

4. Select **Image File** and click **+ Add File**.

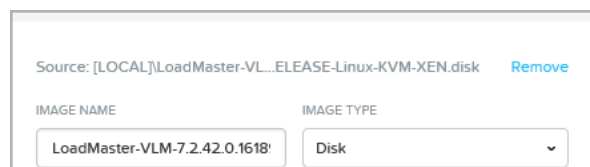

5. Select the extracted LoadMaster KVM disk image and select **Disk** as the **IMAGE TYPE**.

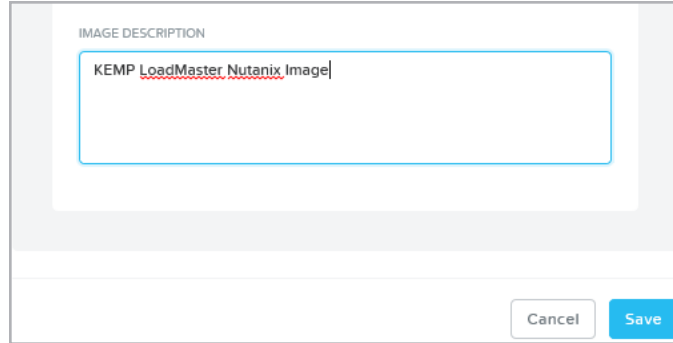


IMAGE DESCRIPTION


KEMP LoadMaster Nutanix Image

Cancel Save

6. Enter an **IMAGE DESCRIPTION** and click **Save**.

2.5 Deploy the Kemp LoadMaster from an Image Using Prism Central

When the image is uploaded, you can deploy a new LoadMaster from Prism Central.

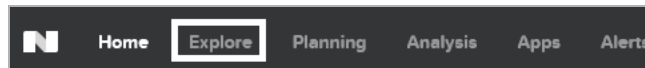

1. In the top navigation, click **Explore**.


Entities	
VIRTUAL INFRASTRUCTURE	
VMs	70
Storage Containers	10
Catalog Items	2
Images	34

2. In the left-hand navigation, click **VMs**.



3. Click **Create VM**.

2 Installing a VLM

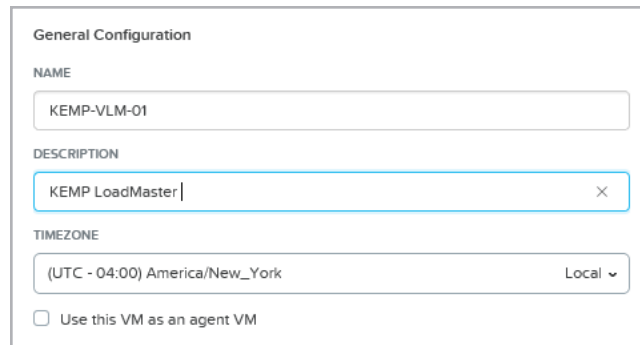

General Configuration

NAME
KEMP-VLM-01


DESCRIPTION
KEMP LoadMaster |

TIMEZONE
(UTC - 04:00) America/New_York Local

☐ Use this VM as an agent VM

4. Enter the following under **General Configuration**:

- a) **NAME** – A unique name for the LoadMaster.
- b) **DESCRIPTION** – A brief description of the LoadMaster.
- c) **TIME ZONE** – The time zone in which this is being deployed.
- d) Clear the **Use this VM as an agent VM** check box.

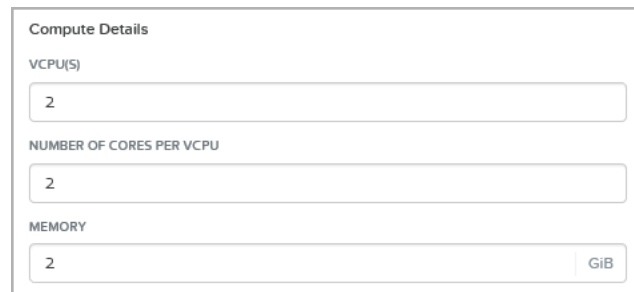

Compute Details

VCPU(S)
2


NUMBER OF CORES PER VCPU
2

MEMORY
2 GiB

5. Enter the following under **Compute Details**:

- a) **VCPU(S)** – At a minimum, you should allocate two VCPUs.
- b) **Number of Cores per VCPU** – At a minimum, you should allocate 2 cores.
- c) **Memory** – At a minimum, you should allocate 2 GB of memory.


You may require more resources based on the workload (or workloads) being published through the LoadMaster.

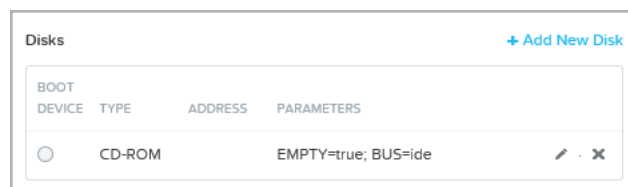

Disks [+ Add New Disk](#)

BOOT	DEVICE	TYPE	ADDRESS	PARAMETERS
<input type="radio"/>	CD-ROM			EMPTY=true; BUS=ide

6. Under **Disks**, click **+ Add New Disk**.

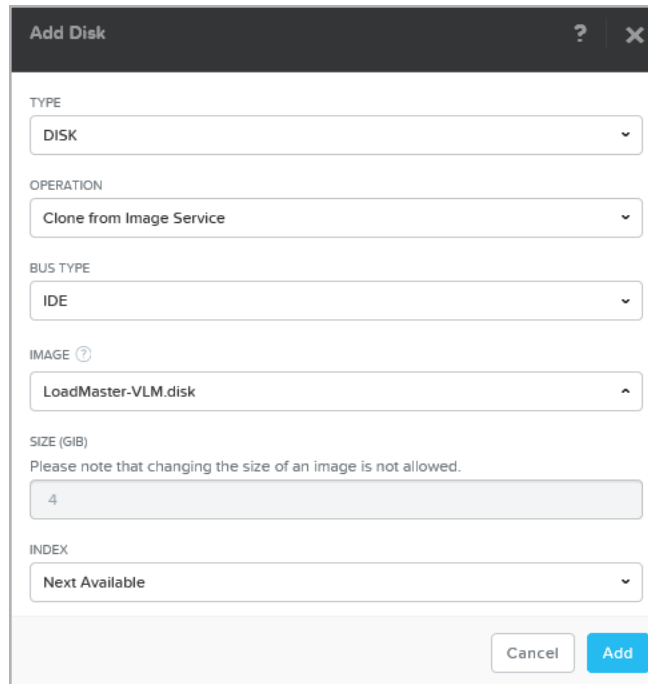

The 'Add Disk' dialog box contains the following fields:

- TYPE**: DISK
- OPERATION**: Clone from Image Service
- BUS TYPE**: IDE
- IMAGE**: LoadMaster-VLM.disk
- SIZE (GiB)**: 4. A note below the field states: "Please note that changing the size of an image is not allowed."
- INDEX**: Next Available


Buttons at the bottom: Cancel, Add.

7. Enter the following in the **Add Disk** screen:

- a) **TYPE – DISK**
- b) **OPERATION – Clone from Image Service**
- c) **BUS TYPE – IDE**
- d) **IMAGE** – The name of the uploaded image
- e) **INDEX = Next Available**

IDE must be selected for bus type. The LoadMaster only utilizes the disk for config changes and logging, therefore there is no performance impact with this setting.

8. Click **Add**.

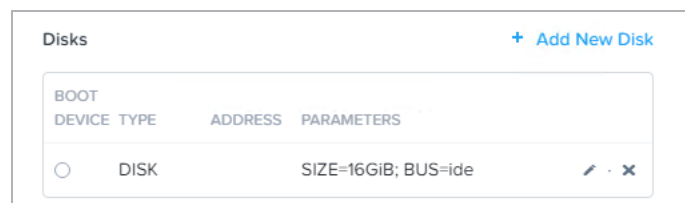


The 'Disks' section shows a table with the following data:


BOOT	DEVICE	TYPE	ADDRESS	PARAMETERS
<input type="radio"/>	DISK		SIZE=16GiB; BUS=ide	

Buttons: + Add New Disk

The CD-ROM device must be deleted and only the LoadMaster disk should be listed.

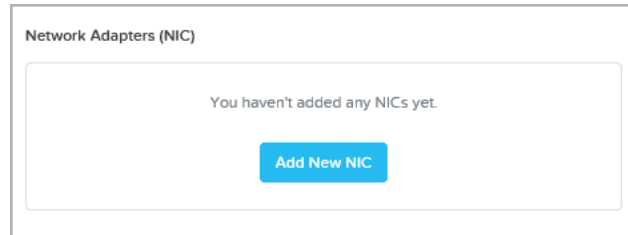


9. Under **Network Adapters (NIC)**, click **Add New NIC**.

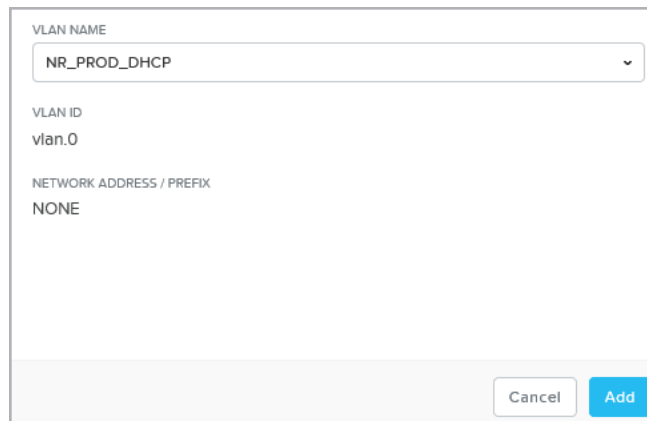


10. Select an existing **VLAN NAME** and click **Add**.

11. (Optional) – In multi-arm configurations, you can add additional NICs.

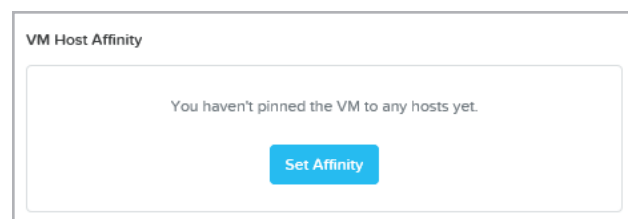


12. (Optional) – Click **Set Affinity** to create an affinity between the VM and multiple hosts. Nutanix recommends you select at least two hosts in an Affinity.

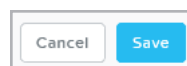

13. Click **Save** to complete the deployment.

2.6 Start the Kemp LoadMaster

When the LoadMaster deploys, you must manually start it to complete the configuration:

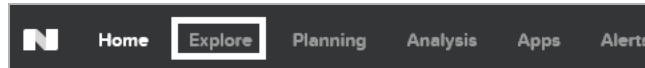


1. In the top navigation, click **Explore**.

Entities	
VIRTUAL INFRASTRUCTURE	
VMs	70
Storage Containers	10
Catalog Items	2
Images	34

2. In the left-hand navigation, click **VMs**.

<input checked="" type="checkbox"/>	KEMP-VLM-01	default	admin	2 GiB	-	● Off	BizDev08
-------------------------------------	-------------	---------	-------	-------	---	--	----------

3. Scroll down, find the newly deployed Kemp LoadMaster, and click the block to select it.

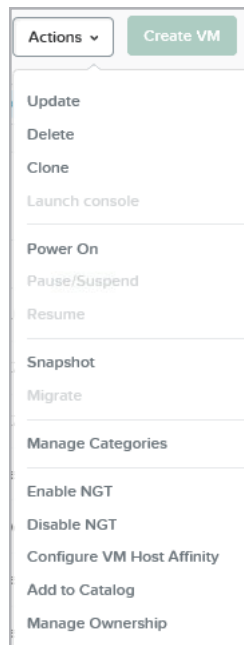

4. Click **Actions** and **Power On**.

2.7 License and Configure the LoadMaster

You must now configure the LoadMaster to operate in the network configuration.

<input checked="" type="checkbox"/>	KEMP-VLM-01	BizDev08-4	default	admin	AHV	2 GiB	10.16.5.29	● On	BizDev08
-------------------------------------	-------------	------------	---------	-------	-----	-------	------------	---	----------

1. When using DHCP, the IP address is displayed in the list of VMs.
2. In an internet browser, enter the IP address that you previously noted.

Ensure to enter **https://** before the IP address.

3. A warning may appear regarding website security certificates. Click the continue/ignore option.
4. The LoadMaster End User License Agreement screen appears. Read the license agreement and, if you are willing to accept the conditions, click **Agree** to proceed.

License Required To Continue

Please select License Method to proceed: Online Licensing ▼

Please enter your Kemp ID and password below to license this LoadMaster.

If you do not have a Kemp ID, please create one by visiting:
<https://kemptechnologies.com/kemp-id-registration>

Kemp ID:

Password:

Order ID# (optional):

HTTP(S) Proxy (optional):

License Now

5. If using the **Online Licensing** method, fill out the fields and click **License Now**.

If you are starting with a trial license, there is no need to enter an **Order ID**. If you are starting with a permanent license, enter the Kemp **Order ID#** if this was provided to you.

If using the **Offline Licensing** method, select **Offline Licensing**, obtain the license text, paste it into the **License** field, and click **Apply License**.

For detailed instructions on how to register for a Kemp ID and license the LoadMaster, refer to the **Licensing, Feature Description** on the [Kemp Documentation Page](#).



6. If you entered an **Order ID**, a screen appears that provides a list of available licenses for that Order ID, in addition to any licenses registered for the Kemp ID based on the LoadMaster platform type. Select the license type you want to apply to this LoadMaster.

If the license type you want is not displayed, contact your Kemp representative.

7. Click **Continue**.

8. The login screen appears. Enter the **bal** user name and the password.

9. In the screen informing you that the password has changed, click **Continue**. If you licensed your machine with a temporary license, you should get a warning informing you that a temporary license has been installed on your machine and for how long the license is valid.

10. The **Home** screen of the LoadMaster appears.

11. Go to **System Configuration > Network Setup** in the main menu.

12. Click the **eth0** menu option in the **Interfaces** section.

Network Interface 0	
Interface Address (address[/prefix])	<input type="text"/> Set Address
Link Status	Speed: 10000Mb/s, Full Duplex Automatic Force Link
MTU: <input type="text"/>	Set MTU
Additional addresses (address[/prefix])	<input type="text"/> Add Address
VLAN Configuration Interface Bonding	

13. In the **Network Interface 0** screen, enter the IP address of the eth0 interface (the network facing interface of the LoadMaster) in the **Interface Address** text box.

14. Click **Set Address**.

15. Click the **eth1** menu option in the **Interfaces** section.

16. In the **Network Interface 1** screen, enter the IP address of the eth1 interface (the farm-side interface of the LoadMaster) in the **Interface Address** text box.

17. Click **Set Address**.

This interface is optional, depending on the network configuration.

18. Click the **Host & DNS Configuration** menu option.

Set Hostname	
Hostname	<input type="text"/> Set Hostname

19. Enter the hostname into the **Hostname** text box.

20. Click **Set Hostname**.

DNS Servers	
DNS NameServer (IP Address)	Operation
10.154.75.25	Delete
Add Nameserver	
IP Address <input type="text"/>	Add
Add Search Domain	
Domain <input type="text"/>	Add

21. Enter the IP address (or addresses) of the DNS Server (or servers) which is used to resolve names locally on the LoadMaster into the **IP Address** text box in the **Add Nameserver** section .

22. Click **Add**.

23. Enter the domain name that is to be prepended to requests to the DNS nameserver into the **Domain** text box.

24. Click **Add**.

25. Click the **System Configuration > Network Setup > Default Gateway** menu option.

The IPv4 default gateway must be on the 10.154.0.0/16 network	
IPv4 Default Gateway Address	<input type="text" value="10.154.0.1"/> <input type="button" value="Set IPv4 Default Gateway"/>

26. Enter the IP address of the default gateway into the **IPv4 Default Gateway Address** text box.

If you have an IPv6 Default Gateway, enter the value in the **IPv6 Default Gateway Address** text box.

27. Click **Set IPv4 Default Gateway**.

The LoadMaster is now fully installed and ready to use. For further information on how to configure and implement the VLM, refer to the LoadMaster documentation which you can access here:

<http://kemptechnologies.com/documentation>.


3 Troubleshooting

3.1 Configuring the LoadMaster Using the Console

If the LoadMaster does not automatically obtain an IP address using DHCP, or if you prefer to configure the LoadMaster using the console, then you can complete the following configuration steps before starting the LoadMaster:


1. Log in into the LoadMaster in the console using the following credentials:

- **lb100 login:** bal
- **Password:** 1fourall

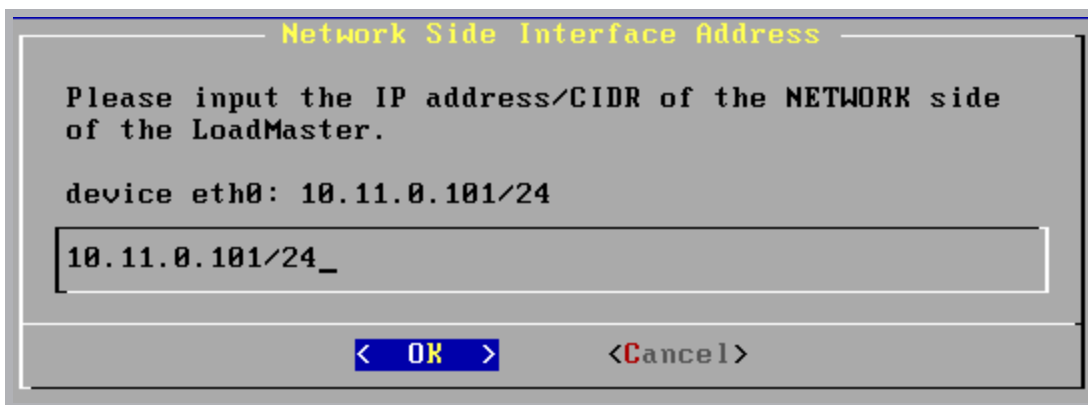

A screenshot of a terminal window showing a dialog box titled "Network Side Interface Address". The dialog box has a grey background and a black border. It contains the text: "Please input the IP address/CIDR of the NETWORK side of the LoadMaster." followed by "device eth0: 10.11.0.101/24". Below this, there is a text input field containing "10.11.0.101/24_". At the bottom of the dialog box, there are two buttons: "< OK >" and "<Cancel>".

2. Enter the IP address of the eth0 interface (the network facing interface of the LoadMaster) in the input field in the **Network Side Interface Address** dialog box.
3. Press **OK**.

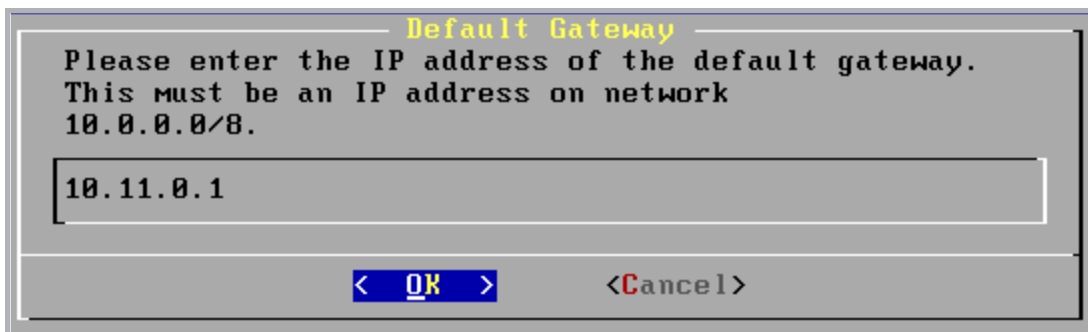

A screenshot of a terminal window showing a dialog box titled "Default Gateway". The dialog box has a grey background and a black border. It contains the text: "Please enter the IP address of the default gateway. This must be an IP address on network 10.0.0.0/8." followed by a text input field containing "10.11.0.1". At the bottom of the dialog box, there are two buttons: "< OK >" and "<Cancel>".

4. Enter the IP address of the default gateway in the input field of the **Default Gateway** dialog box.

5. Press **OK**.

6. Once these are set, a prompt appears asking to connect to the web interface at the newly configured IP address. In an internet browser, enter the IP address of the eth0 interface which was entered in a previous step.

Ensure to enter **https://** before the IP address.

7. A warning may appear regarding website security certificates. Click the continue/ignore option.




8. The LoadMaster End User License Agreement screen appears.

9. Read the license agreement and, if willing to accept the conditions, click **Agree** to proceed.

10. If the machine has shipped with a temporary license, a warning appears informing that a temporary license has been installed on the machine and for how long the license is valid.

11. Click **OK**.

12. The **Home** screen of the LoadMaster should appear.

IP address	10.154.11.51 (lb100:10.154.11.50)
Serial Number	1050788
Boot Time	Tue Sep 8 09:30:58 UTC 2015
Active Since	Tue Sep 8 09:31:13 UTC 2015
LoadMaster Version	7.1-29-1851.20150907-1730
License	UUID: 6987ad8c-ff52-4158-acbb-372a07faa13d Activation date: Thu Aug 20 09:04:46 UTC 2015 Licensed until: September 20 2015 Support Level: Evaluation + WAF Support Until: Sat Aug 20 04:00:00 UTC 2016 License Type: VLM-5000 ESP GEO License Status: Single Temp Appliance Model: VLM-5000G+
Upgrade 	
CPU Load	2% 
TPS	Total 0 (SSL 0)
WAF Stats	Total handled: 0 Incidents: 0
NetLoad	Mbits/sec
eth0	0.0 

The LoadMaster is now fully installed and ready to use. For further information on how to configure and implement the VLM, refer to the LoadMaster documentation at:

<https://kemptechnologies.com/documentation>.

3.2 Nutanix Cloning

If you use the cloning features in Nutanix, it is possible an IP conflict may occur. This may be caused by the DHCP address obtained, a static IP address configured on the LoadMaster, or Virtual Services that are configured on the LoadMaster before cloning. Therefore, Kemp recommends not using the Nutanix cloning feature in production environments.

3.3 Factory Reset

If you perform a factory reset on the VLM, all configuration data, including the VLMs IP address is deleted. During the subsequent reboot, the VLM attempts to obtain an IP address using DHCP. If the VLM is on a different subnet to the DHCP server then an IP address is not obtained and the IP address is set to the default 192.168.1.101.

The VLM may not be accessible using this address. If this is the case then you must run through the quick setup using the console as described in the **Configuring the LoadMaster Using the Console** section.

3.4 Preventingagetty##: ttyS0: ioctl: Input/output Errors

The LoadMaster expects a serial port connection. However, not having a serial port connection does not cause problems, other than causing the following log message:

agetty##: ttyS0: ioctl: Input/output error

To prevent these errors from appearing in the logs, enable a virtual serial port on Nutanix AHV by following these steps:

1. Turn off the VM.
2. SSH into one of the Controller VMs (CVMs) in the AHV cluster.
3. Run the following command to add the serial port to the VM:

```
accli vm.serial_port_create <VMName> type=kServer index=0
```

Replace **<VMName>** with the name of the VM.

References

Unless otherwise specified, you can find the below documents at <http://kemptechnologies.com/documentation>.

Licensing, Feature Description

Last Updated Date

This document was last updated on 27 July 2023.