



## **Feature Description SubVSs**

**24 July 2024**

# Copyright

---

Visit the following page online to see Progress Software Corporation's current Product Documentation Copyright Notice/Trademark Legend: [Product Documentation Copyright Notice & Trademarks | Progress](#)

# Table of Contents

**Chapter 1: Introduction. . . . . 4**

    Document Purpose. . . . . 4

    Intended Audience. . . . . 4

**Chapter 2: Advantages of SubVSs. . . . . 5**

**Chapter 3: Prerequisites. . . . . 7**

**Chapter 4: Add/Modify/Delete a SubVS. . . . . 9**

    Add a SubVS. . . . . 10

    Modify a SubVS. . . . . 10

    Delete a SubVS. . . . . 11

    SubVS WUI Options. . . . . 12

**Chapter 5: References. . . . . 15**

---

# Introduction

---

## Introduction

From within a Virtual Service, one or more 'Sub-Virtual Services' (SubVSs) can be created. SubVSs are useful when there are complex applications that require a larger number of Virtual Services. SubVSs may be used for certain configurations such as Exchange or Citrix.

### Related Links

- [Document Purpose](#)
- [Intended Audience](#)

## Document Purpose

### Document Purpose

This document describes how to add and configure SubVSs on the LoadMaster using the LoadMaster Web User Interface (WUI).


## Intended Audience

### Intended Audience

This document is intended to help anyone who wishes to learn about or implement SubVSs on their LoadMaster configuration.

## Advantages of SubVSs

### Advantages of SubVSs

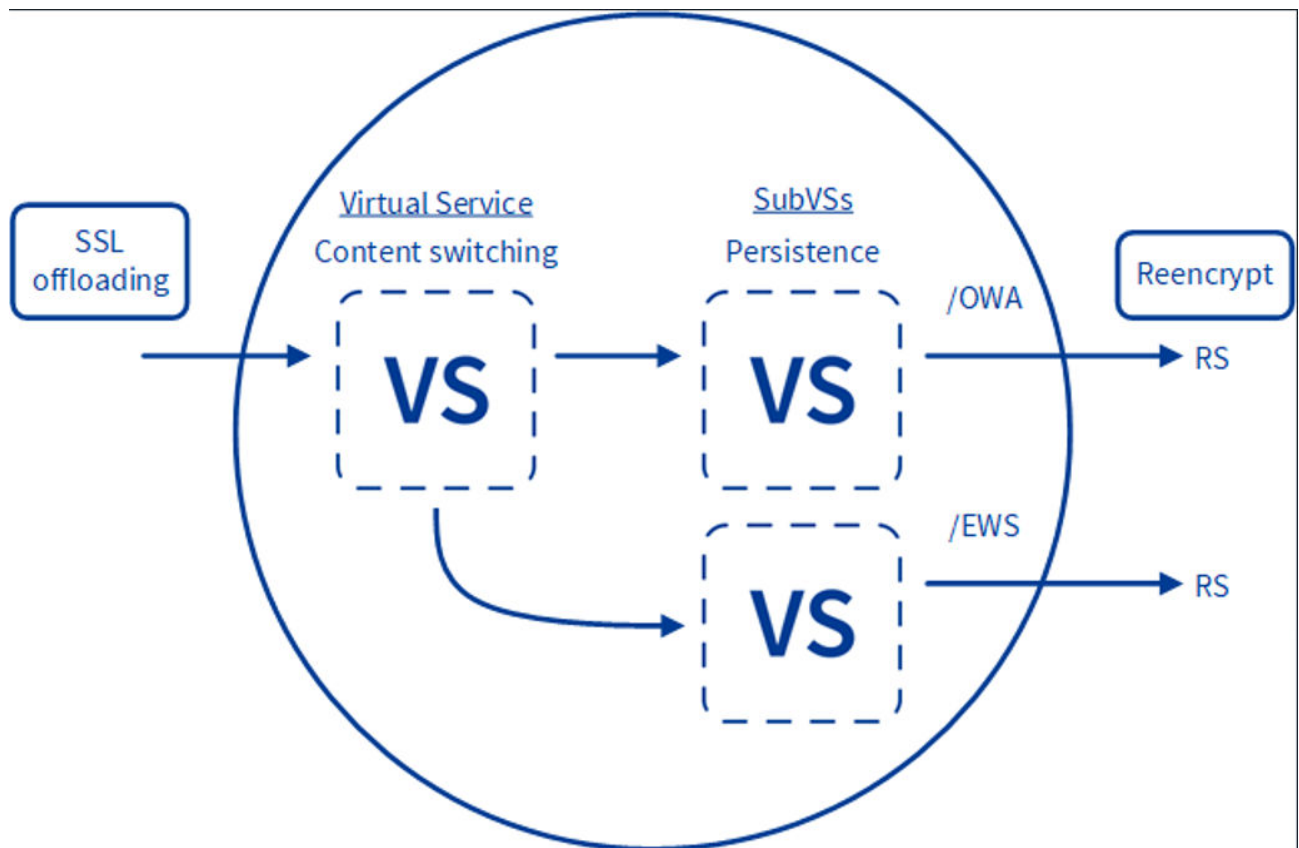

Using SubVSs has many advantages, such as:

- SubVSs are linked to, and use the IP address of, the 'parent' Virtual Service.
- Using SubVSs reduces the number of IP addresses required by applications such as Lync or Exchange
- SubVSs are always transparent to the main Virtual Service
- SubVSs may have different settings (such as content rules) to the parent Virtual Service and to each other
- Using a SubVS provides the ability to have content switching and persistency on the same Virtual Service
- Using a SubVS gives the ability to perform multiple health checks on the same Virtual Service


## Prerequisites

---

### Prerequisites

There are a few prerequisites/points to note before setting up a SubVS:

- Before a SubVS can be added, you must set up a Virtual Service. For steps on how to add a Virtual Service, refer to the **Virtual Services and Templates, Feature Description** on the [Documentation Page](#).

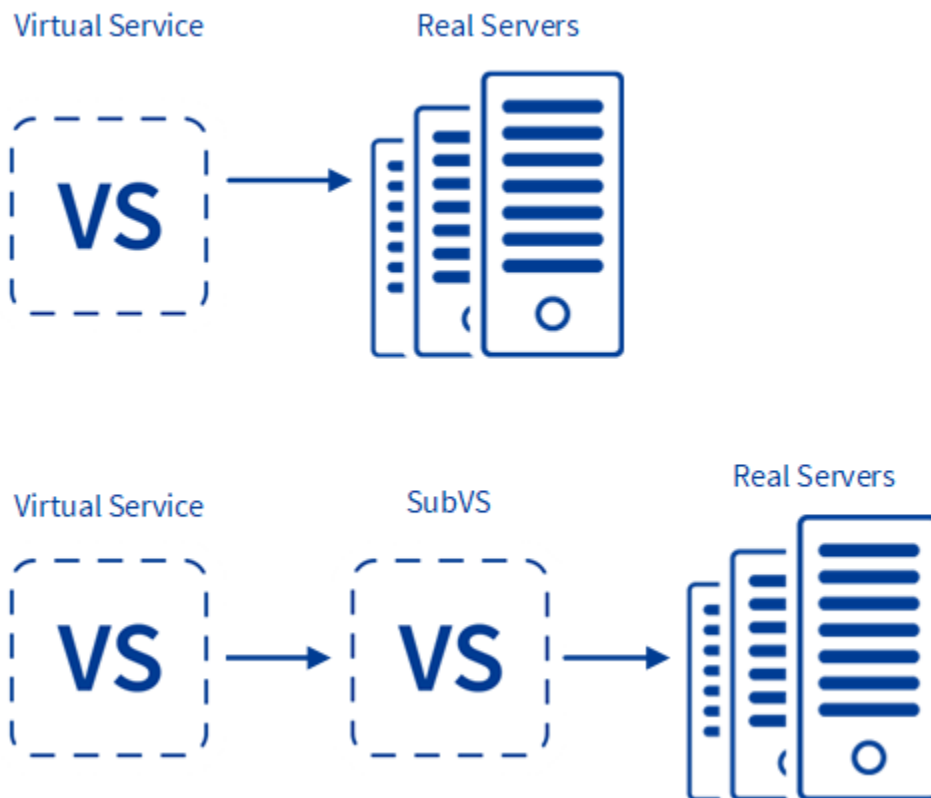

- Real Servers and SubVSs cannot be associated with the same Virtual Service. A SubVS can only be added to a Virtual Service if there are no Real Servers set up on it already. A Real Server can be associated with a SubVS if required.
- Users with the Virtual Services permission cannot add a SubVS. Users with the Real Server permission can add a SubVS.
- SubVS functionality is only available on version 7.0-4 or later of the LoadMaster.
- There cannot be a SubVS of a SubVS.



---

# Add/Modify/Delete a SubVS


---

## Add/Modify/Delete a SubVS

To add, modify or delete a SubVS, follow the steps below:

1. Log in to the relevant Virtual LoadMaster (VLM).
2. In the main menu, click **Virtual Services** and select **View/Modify Services**.

### Operation

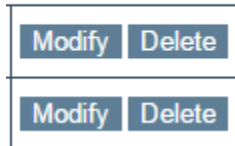

1. Click the **Modify** button on the relevant Virtual Service.
  - To add a SubVS, go to the [Add a SubVS](#) section.
  - To modify a SubVS, go to the [Modify a SubVS](#) section.
  - To delete a SubVS, go to the [Delete a SubVS](#) section.

### Related Links

- [Add a SubVS](#)
- [Modify a SubVS](#)
- [Delete a SubVS](#)

- [SubVS WUI Options](#)

# Add a SubVS


## Add a SubVS

Following on from the steps in the [Add/Modify/Delete a SubVS](#) section, continue with the steps below.

1. Expand the **Real Servers** section (if there are already SubVSs on this Virtual Service this section will be called **SubVSs**).



1. Click the **Add SubVS...** button (or **Add New ...** button if this is not the first SubVS to be added to this Virtual Service).

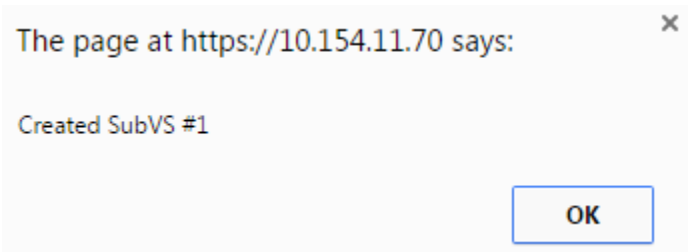

1. A success message will appear, as illustrated in the above screenshot. Click the **OK** button.

▼ SubVSs

Id	Name	Weight	Limit
5		1000	0

When the first SubVS is added to a Virtual Service the **Real Servers** section will be replaced with the **SubVSs** section in the **Virtual Services** configuration page. Any SubVSs of the relevant Virtual Service will be listed in this section.

# Modify a SubVS

## Modify a SubVS

Following on from the [Add/Modify/Delete a SubVS](#) section, continue with the steps below:

1. Expand the **SubVSs** section.

Status	Operation
Enabled	<a href="#">Disable</a> <a href="#">Modify</a> <a href="#">Delete</a>

## 2. Click **Modify**.

When the **Modify** button is clicked a configuration screen for the SubVS appears. This contains a subset of the configuration options that a normal Virtual Service has.

- For a description of SubVS specific fields, refer to the [SubVS WUI Options](#) section.
- For a description of the other (non-SubVS specific) fields and options, refer to the **Web User Interface (WUI), Configuration Guide** on the [Documentation Page](#).
- For steps on how to configure a Virtual Service, refer to the **Virtual Services and Templates, Feature Description** on the [Documentation Page](#).

---

**Note:** When a SubVS is added to a Virtual Service, the **Transparency** setting on the Virtual Service is enabled and cannot be changed. This is because the Virtual Service forwards the client request transparently to the SubVS. The **Transparency** setting on the SubVS can be enabled or disabled as required.

---

**Note:** The **SSL Acceleration** and **Reencrypt** options must be set in the parent Virtual Service, not in the SubVS. If these options are enabled, data is decrypted, then passed to the SubVS and re-encrypted on the way out of the SubVS.

---

**Note:** For Exchange, we recommend that the Edge Security Pack (**ESP**) and Web Application Firewall (WAF) is not enabled on the parent service but instead is enabled in the SubVSs.

---

**Note:** When using SNMP monitoring of ESP-enabled Virtual Services that were created using a template, ensure to monitor each SubVS directly rather than relying on the master service. This is because the Authentication Proxy sub-service will always be marked as up and, as a consequence, so will the master service.

---

# Delete a SubVS


## Delete a SubVS

Following on from the [Add/Modify/Delete a SubVS](#) section, continue with the steps below to delete a SubVS:

### 1. Expand the **SubVSs** section.

Status	Operation
Enabled	<a href="#">Disable</a> <a href="#">Modify</a> <a href="#">Delete</a>

### 1. On the SubVS that is to be deleted, click the **Delete** button.

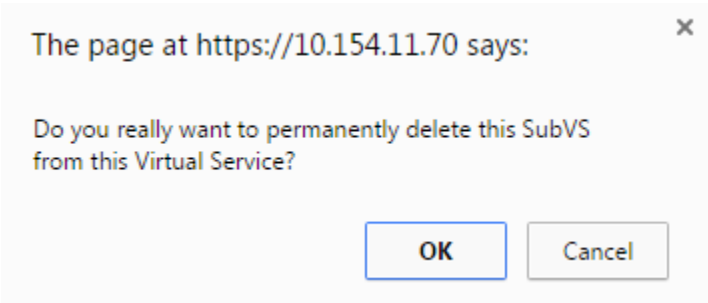

1. Click **OK**.

The SubVS will be deleted. If this SubVS was the only SubVS on the Virtual Service, the **SubVSs** section will change back to the **Real Servers** section.

**Note:** A parent Virtual Service can only be deleted if its SubVSs have all been deleted.

# SubVS WUI Options

## SubVS WUI Options

Most of the fields in the SubVS properties screen are the same as the ones used for a normal Virtual Service.

For a description of the other fields and options, refer to the **Web User Interface (WUI), Configuration Guide** on the [Documentation Page](#).

See below for descriptions of the SubVS specific fields.

<-Back

Duplicate SubVS

Basic Properties

SubVS Name

Set Nickname

SubVS Type

HTTP-HTTP/2-HTTPS ▾

SubVS Weight

1000

Set Weight

SubVS Limit

0

Set Limit

SubVS Rate Limit

0

Set Rate Limit

### Duplicate SubVS

You can click **Duplicate SubVS** to create a duplicate SubVS within the same Virtual Service. All SubVS configuration settings are copied to the duplicate SubVS.



When you click **Duplicate SubVS**, a pop-up message appears like "SubVS duplicated, SubVS Id:4, RS Id: 3". Click **OK** to close the pop-up. A SubVS has both a Virtual Service ID (SubVS Id) and a Real Server ID (RS Id).

**Properties for subVS 3 (Id:4) of tcp/10.35.47.19:80 - Operating at Layer 7**

<-Back
Duplicate SubVS

**Basic Properties**

SubVS Name  Set Nickname

SubVS Type HTTP-HTTP/2-HTTPS ▾

SubVS Weight  Set Weight

SubVS Limit  Set Limit

SubVS Rate Limit  Set Rate Limit

The SubVS Id in the message refers to the Virtual Service ID. You can see this ID in the heading at the top of the SubVS modify screen for the relevant SubVS.

SubVSs							Add New ...
Id	Name	Weight	Limit	Rate Limit	Critical	Status	Operation
1		1000	0	0	<input type="checkbox"/>	Enabled	Disable Modify Delete
2		1000	0	0	<input type="checkbox"/>	Enabled	Disable Modify Delete
3		1000	0	0	<input type="checkbox"/>	Enabled	Disable Modify Delete

The RS Id refers to the Real Server Id - but for SubVSs this Real Server Id is used to identify the SubVS in the SubVSs section of the Virtual Service modify screen.

**Note:** In some scenarios, when using the Application Programming Interface (API), you need to use the Virtual Service Index of the SubVS but in other scenarios you need to use the Real Server Id of a SubVS. For further details, refer to the [RESTful API Interface Description](#), [PowerShell Interface Description](#), or PowerShell command help text.

**SubVS Name:** An identifiable name for the SubVS. This field is optional but we recommend that SubVSs are named as it may get confusing if several SubVSs exist.

---

**Note:** In addition to the usual alphanumeric characters, the following 'special' characters can be used as part of the Service Name: . @ - \_ However, there must be at least one alphanumeric character before the special characters.

---

**SubVS Type:** Setting this controls the options displayed for the SubVS. It's important to make sure the **SubVS Type** is set according to the type of application is being load balanced.

**SubVS Weight:** This will be used when determining the priority of the SubVS.

**SubVS Limit:** This is the maximum number of connections that can be forwarded to this SubVS before it is taken out of rotation from the main Virtual Service. The maximum limit is 100,000.

**SubVS Rate Limit:** This is the maximum number of connections per second that can be forwarded to this SubVS before it is taken out of rotation from the main Virtual Service. The maximum limit is 100,000.

**Reencryption SNI Hostname:** In LoadMaster firmware version 7.2.52 and above, it is possible to set a Reencryption SNI Hostname at the SubVS level. If this is set in a SubVS, this overrides the parent Virtual Service value and/or the received SNI value.

---

**Note:** This field is only visible when SSL re-encryption is enabled.

---

---

# References

---

## References

Unless otherwise specified, the following documents can be found at: <http://kemptechnologies.com/loadmaster-documentation>

**Virtual Services and Templates, Feature Description**

**Web User Interface (WUI), Configuration Guide**